

# PHILIPS

## AVENT

### Connected

#### Premium Connected Baby Monitor

Sleep and breathing tracking

Parent Unit works without Wi-Fi

Cry detection and translation

Connect anywhere via the app

SCD971/26



## Making the invisible visible for total reassurance

### SenseIQ wearable-free sleep and breathing tracking

Meet the Philips Avent Premium Connected Monitor. Instantly see your baby's sleep status and breathing rate with SenseIQ; keep an eye on your baby on the 5" Parent Unit or Baby Monitor+ app, and interpret cues with cry translation.

#### Understand your baby's needs

- Understand your baby's sleep schedule
- Helps you interpret your baby's cries
- Wearable-free sleep and breathing tracking

#### Peace of mind, night and day

- Protects your family's privacy
- Monitor safely from the cot or the wall
- See every wiggle, hear every giggle
- Monitor without recharging for up to 12 hours\*\*\*
- Speak and listen to your baby at the same time
- Ultra-clear vision, day and night, with or without Wi-Fi
- Create the ideal atmosphere for sleep
- Comfort with lullabies, white noise and soothing tracks

#### Always connected to your baby

- Monitor and feel reassured from anywhere


## Highlights

### Wearable-free sleep and breathing tracking



Instantly see your baby's sleep status and breathing rate without the need for an extra accessory. Our wearable-free tracking technology analyses millions of pixels per second to spot even the tiniest of motions. It then translates data into sleep status and breathing rate updates. More reassurance for you and more comfort for your baby.

### Parent unit with 5" HD screen

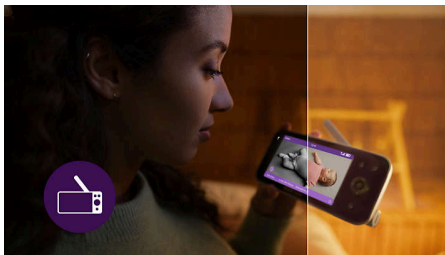

Our Parent Unit with 5" HD screen helps you keep an eye on your little one at home and go about your day. Move easily between indoors and outdoors thanks to a generous 400 m range\* and a stable connection that works with or without Wi-Fi. See clear video day and night and real-time sleep status updates. Everything you need to rest easy.

### Secure Connect System



Know that your connection is completely private thanks to our Secure Connect System. It uses multiple encrypted links between the Baby Unit, Parent Unit and app, so all of the data and imagery are protected.

### Cry detection and translation



Want to know if your baby is tired, gassy, hungry, uncomfortable or irritated? Our monitor detects and translates cries using a scientifically proven algorithm. You'll receive free in-app access for the first 3 months\*\*, which means there's extra help on hand during the rollercoaster newborn stage.

### Baby Monitor+ app



At home or away, our Baby Monitor+ app is an instant connection to your baby's bedroom and a window into their wellbeing. Watch them on HD video, check their sleep status and breathing rate, and get help interpreting cries.

### Full HD camera Baby unit



Enjoy an ultra-clear view of your baby day and night thanks to the full HD camera on our Baby Unit with night vision. Whether you're at work or thinking about them at midnight, you'll always be able to see the tiniest of wriggles.

### 2-in-1 cot and wall mount




Our Baby Unit attaches securely to the cot or the wall with just one mount. We've designed it especially with safety in mind: keeping cables away and the Baby Unit firmly in place, all while ensuring that you get the best performance from our video-based sleep and breathing tracking.

### Automated sleep diary



Our premium monitor automatically logs every sleep, generating insights and helping you better understand sleep states and wake windows. With historical sleep stats from the past 30 days visualised in handy graphs, you'll also be in the know about sleep regressions and other changes to your baby's sleep schedule.

### Soothing songs and white noise

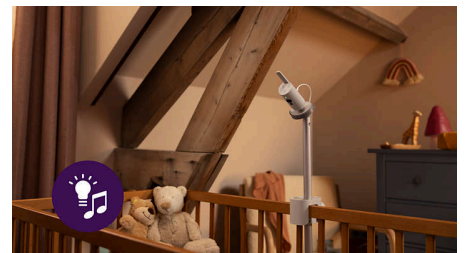

Comfort your little one with tranquil tracks, natural soothing sounds or white noise. From garden birdsong to classic lullabies and even your own voice recordings, our monitor has all the sounds you need to gently lull your baby into slumber.


## Highlights

### Room thermometer and nightlight




Our Baby Unit comes with a built-in nightlight and room thermometer to make sure that the room looks and feels just right. It's easy to control the nightlight with the Parent Unit or app. And if the room becomes too warm or cold, you'll receive personalised notifications.

### True talk back

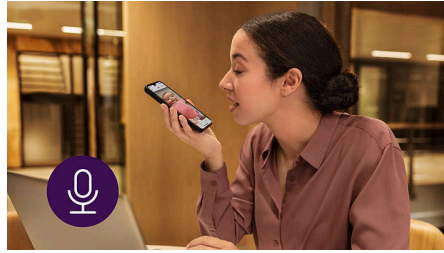

Use your voice to soothe your little one while listening to them at the same time. Our talk back feature makes it easy to comfort your baby without entering the room.

### Up to 12 hours of battery time\*\*\*

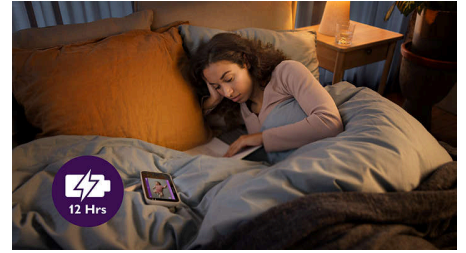

Our rechargeable Parent unit has up to 12 hours of runtime\*\*\* so keeping an eye on your little one can easily fit into your routine. Day and night.

## Specifications

### Features

**Connection mode:** Direct link (peer-to-peer) and Wi-Fi

**Mobile connectivity range:** Unlimited, requires Internet connection

**Operating systems (app):** iOS 11 and higher, and Android 6 and higher

**Baby unit camera resolution:** Full HD 1080p

**Record personalised sounds:** Yes, via app

**Phone application (app):** Philips Avent Baby Monitor+

**Room thermometer:** Yes, incl. alert

**Range parent unit / baby unit:** Up to 400 metres outdoors and 50 metres indoors

**Parent unit screen size:** 5" colour LCD

**Parent unit resolution:** 1280\*720

**Night vision:** Yes, automatic

**Zoom:** Yes, digital zoom and pan

**Night light:** Yes, incl. timer

**Talk back:** Yes, Talk Back (speak and listen at the same time)

**Lullabies, soothing sounds and white noise:** Yes, incl. timer, 5 lullabies, 5 soothing sounds, 5 white

noise sounds

**Breathing tracking:** Yes, on the parent unit and via the app

**Sleep tracking:** Yes, on the parent unit and via the app

**Cry Translation:** Yes, on the parent unit and via the app

**Automated sleep diary**

### Convenience

**Video mode**

**Audio only mode**

**Eco mode:** Yes, energy saving mode

**Privacy mode:** Yes, connection only via parent unit and baby unit

**Background monitoring (app only):** Yes, hear your baby while phone is locked or using other apps

**Alerts:** Yes, low battery; lost connection; temperature; sound; motion detection

**Wall mountable**

**Mount:** Yes, 2-in-1 wall and cot mountable

### Power / Transmission

**Baby unit power source:** Mains only

**Parent unit power source:** Battery and mains

**Parent unit operating time on battery:** 12 hrs in Eco mode

**Power supply:** 5 V 1 A AC/DC Adapter, Input 100–240 V/50–60 Hz

**Frequency band:** 2.4 GHz

### What is included

**Baby Unit:** 1 pcs

**Parent Unit:** 1 pcs

**Mount:** 1 pcs

**Pouch:** 1 pcs

### Software Support

**Software updates:** Philips offers relevant software updates for a period of 2 years after the date of purchase.

**Cry Translation:** 3 months' free usage period starts after activation, Cry Translation is offered by Zoundream™. Terms and conditions apply

