

# PHILIPS



Wet & Dry Electric  
shaver with SkinIQ

Shaver S9000  
Prestige

Skin-level closeness

NanoTech Dual Precision Blades

Hydro SkinGlide Coating

Ultraflex Suspension System



SP9882/36

## Skin-level close shave, yet incredibly gentle

Our closest shave, even on a 7-day beard

Experience ultimate closeness and comfort with Philips Shaver Series 9000 Prestige. Cuts up to 0.00 mm close to the skin with Lift & Cut shaving system, while SkinIQ Technology adapts to every contour of your face, even on a 7-day beard.

### SkinIQ technology

- 50% smoother\*\*\* gliding with Hydro SkinGlide Coating
- Ultimate speed and efficiency with the Top-Spin Digital Motor

### Premium experience

- Built to last: 7 year motor and battery lifetime
- Customise your shave with Personal Comfort Settings
- Choose a convenient dry or refreshing wet shave
- Deep cleaning in just 1 minute with the Quick Cleaning Pod
- Convenient charging with the Wireless Qi Pad
- Digital display with intuitive icons for convenience & ease
- Trimming your moustache and sideburns
- Made with care for you and the planet
- Click-on nose trimmer for nose and ear hair
- 60 minutes of cordless shaving once fully charged

### Our closest electric shave

# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9882/36

## Highlights

### Lift & Cut System



Our patented, unique Lift & Cut rotary shaving system lifts the hair gently out of its root before cutting it precisely and closely at skin level (up to 0.00 mm to the skin), without the blades even touching your skin. Precision at its best, for a clean shave until evening\*.

### NanoTech Dual Precision blades



Philips rotary shavers are specifically designed to match your natural hair growth, capturing all of the hairs growing in any direction, thanks to 360 degree rotating blades that cut in all directions. With up to 165,000 cutting actions per minute, the NanoTech Dual Precision blades cut up to 25% more hair per stroke\*\*.

### Ultraflex Suspension system



The Ultraflex Suspension System with fully flexible heads completely adapt to every contour of your face, catching even difficult hairs in the neck. The result is an exceptionally smooth and comfortable shave.

### Hydro SkinGlide coating




Our best protective coating lies between the shaver heads and your skin. Made of up to 500,000 microtech beads with hydrophilic properties per square centimetre, which create 50%\*\*\* smoother gliding on skin for maximum skin comfort.

### 7 years motor&battery lifetime



Our shaver motor and battery are engineered for durability with a 7 year motor & battery lifetime and its long lasting power ensures a powerful shave. Our self-sharpening blades stay like new for 2 years.

### Power Adapt sensor

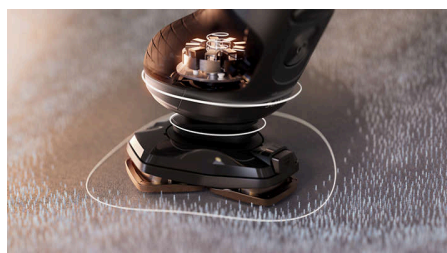

The electric shaver has an intelligent facial-hair sensing technology that reads hair density 500 times per second. The Power Adapt Sensor auto-adapts the cutting power for an effortless and gentle shave.

### Top-spin digital motor



Maximum high-speed rotations for maximum efficiency. Our most advanced Top Spin Digital Motor ensures a precise shave for any facial contour or hair density.

### Personal Comfort settings



Adjust the speed of your shaver to low, medium or high speed with the Personal Comfort Settings. Personalise your shaving routine to your own skin and preferences.

### Cable-free Quick Clean Pod



Powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute, keeping it performing at its best for longer. The pod is 10 x more effective than cleaning with water\*\*\*\*. It is the world's smallest cleaning pod, so you can store it easily and use it anywhere.

# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9882/36

## Highlights

### Wireless Qi charging pad




Plugging in cords in wet areas is a thing of the past. Simply lay your cordless electric shaver on the Qi charging pad for a wireless charge.

### Wet & Dry



Adapt your shaving routine to your needs. With Wet and Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam, even under the shower.

### Nose trimmer attachment

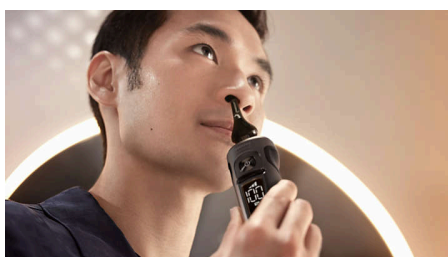

Removes nose and ear hair. Both the ProtecTrim technology and the specially designed angle of the trimmer ensure an easy and comfortable trim.

### Sustainability



At Philips, we drive sustainability in all aspects of product creation. All our 9000 Prestige shavers are made with high-quality, long-lasting components and recyclable packaging, while our blades are made from 80% recycled steel and produced in a factory that uses 100% renewable energy.

### Precision trimmer attachment



Skin-friendly and easy to use; give your moustache and sideburns extra definition with the click-on precision trimmer.

### Digital display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 3 digit (%) battery indicator -

Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator

### 60 minutes of cordless shaving



This advanced charging system gives you two convenient options: 60 minutes of running time after a full charge, or a quick charge for one shave.

### Premium travel case



The S9000 Prestige Shaver comes neatly packed in a premium travel case to store all of your click-on accessories. Ideal for travel or keeping it safe when it's not in use.



# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9882/36

## Specifications

### Accessories

**SmartClick:** Precision trimmer, Nose trimmer

**Pouch:** Premium pouch

**Quick Clean Pod:** Yes, 1 cartridge included

### Power

**Charging:** Qi-charging pad, 3 hours full charge, 18 min quick charge

**Battery type:** Li-Ion

**Run time:** 60 minutes

**Low energy mode:** < 0.3 W

**Off mode (no attachments):** < 0.1 W

### Design

**Handle:** Ergonomic grip and handling

**Colour:** Samos Grey

**Finishing:** Timeless elegance

### Service

**Replacement head:** Replace every 2 yrs with SH91

**2 year warranty**

### Shaving Performance

**Shaving system:** NanoTech Dual Precision blades, Hydro SkinGlide Coating

**Contour following:** Ultraflex Suspension system

**SkinIQ technology:** Top-spin digital motor, Power Adapt sensor, Personal Comfort settings

### Ease of use

**Cleaning:** Cable-free Quick Clean Pod, One-touch open, Fully washable

**Display:** % Battery Level Indicator

**Wet & Dry:** Wet and dry use

### Durability

**Motor & Battery lifetime:** 7 years

