




Philips 1000 series  
True wireless headphones

Ergonomic design for comfort

Natural sound. Dynamic bass  
Pocket-size charging case  
Clear calls

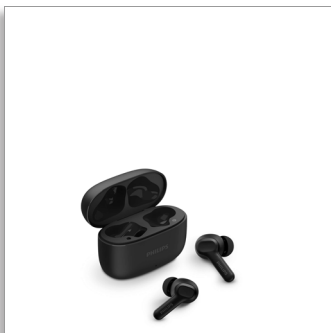

TAT1109BK

## Get your music on

The best things in life are simple. Grab your headphones, take your tunes, and head out! With great sound, dynamic bass, and a pocket-sized charging case, these comfy true wireless earbuds are ready for your day—and night.

### Comfy fit and handy in-ear touch controls

- Interchangeable silicone ear tips
- Warm, natural sound. Philips sound signature

### Simply all you need

- Solid Bluetooth connection
- Up to 24 hours play time with the case?
- IPX4 splash and sweat resistant

### True wireless earbuds. Great value, great sound.

- Small and comfy earbuds that love a big bassline
- 10 mm drivers for great sound and powerful bass?
- Clear calls. They'll hear what you're saying?

# PHILIPS

# Specifications

## Sound

- Speaker diameter: 10 mm
- Driver type: Dynamic
- Impedance: 32 Ohm
- Sensitivity: 97 dB (1k Hz)
- Frequency range: 20 - 20,000 Hz
- Maximum power input: 10 mW

## Connectivity

- Bluetooth version: 5.4
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Supported codec: SBC

## Outer Carton

- Number of consumer packagings: 24
- GTIN: 1 48 95229 15138 0
- Length: 30.00 cm
- Width: 16.00 cm
- Gross weight: 2.350 kg
- Nett weight: 1.75 kg
- Tare weight: 0.60 kg
- Height: 20.00 cm

## Convenience

- Water resistance: IPX4
- Mono mode for TWS
- Type of controls: Touch

## Power

- Number of batteries: 3 pcs
- Charging time: 2 hour(s)
- Battery capacity(Earbud): 40 mAh
- Battery capacity(Case): 400 mAh
- Battery weight (Total): 9.2 g
- Music play time: 6 + 18 hr
- Battery type(Charging case): Lithium Polymer (built-in)
- Battery type(Earbud): Lithium Polymer (built-in)

## Packaging dimensions

- Packaging type: Carton
- Type of shelf placement: Hanging
- Number of products included: 1
- EAN: 48 95229 15138 3
- Height: 11 cm
- Width: 9.5 cm
- Depth: 3.6 cm
- Gross weight: 0.087 kg
- Nett weight: 0.073 kg
- Tare weight: 0.014 kg

## Accessories

- Quick Start Guide
- Charging case
- Charging cable: USB-C cable, 200 mm
- Eartips: 3 pairs (S/M/L)

## Design

- Color: Black
- In-ear fitting type: Silicone ear tip
- Ear coupling material: Silicone
- Ear fitting: In-ear

## Telecommunication

- Microphone for call: 1 mic

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Multi-Function touch
- Voice assistant support

## Dimensions

- Earbud dimension(WxDxH): 3.20 x 2.10 x 2.10 cm
- Charging case dimension(WxDxH): 6.00 x 2.80 x 4.70 cm
- Total weight: 0.042 kg

# Highlights

## Small earbuds, great sound

These true wireless earbuds might be small, but you won't need to turn up the volume to get the best sound. Tap the left earbud to activate dynamic bass and you can enjoy the full power of your favourite basslines, even when listening quietly.

## Clear calls

Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise-reduction algorithm quietsens some of the background noise from the world around you.

## Solid Bluetooth connection

Advanced Bluetooth connectivity gives you a more stable connection for seamless streaming. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

## Up to 24 hours play time with the case?

You get 6 hours play time from a full charge, and an extra 18 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

## IPX4 splash and sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them on a particularly hot day? They won't mind a little sweat either.

## Philips sound signature

From music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

