

PHILIPS

Electric instant water heater

AquaShield


Instantaneous water heater

6500W

Casting-aluminum heater

Digital control

AWH1509/97

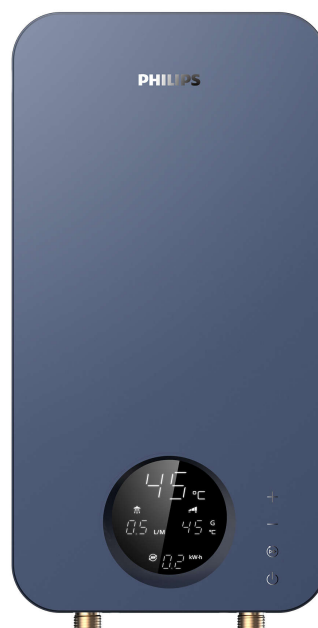

Slim body saves space

Comfort and safety redefined

Equipping with 6500W straight pipe heating element, no bending, no scaling, no power attenuation, faster heating and more energy saving. Meanwhile, The dual protection system against electric shock ensures all-around protection for you.

Heat-Express technology for a faster bath

- Zero cold water all the time

With all-around protection system

- 7-level SafeShield ensures safe operation
- Safeblock protection for a safer bath

Zero cold water all the time

- Detects ambient temperature changes for a comfortable use

User friendly design

- Clear display, easily operate.

Highlights

Heat-Express technology

24h hot water is provided by the 6500W casting-aluminum heating device, and consumers can enjoy a comfortable using anytime.

7-level SafeShield

7-level safety protection including dual-safeblock shockproof, water and electricity isolation, IPX4 protection, high-temperature protection, dry burning protection, low-water protection, non-flammable material case provides a safer bath.

Frequency conversion control system

The silicon controlled rectifier in the machine can frequency conversion to adjust the output power by the ambient temperature changes, which is energy-saving.

Digital display

Equipped with a sensitive chip and temperature sensor, LED screen clearly and intuitively displays temperature, water flow, and electricity consumption for your convenience.

Safeblock Protection

Built-in safeblock protection can effectively block the inlet and outlet current to play a protective effect.

Specifications

General specifications

Net weight: 2.9 kg

Gross weight: 4.0 kg

Packaging dimension (L*W*H):

486*380*106 mm

Product dimension (L*W*H): 400*230*47 mm

Waterproof: IPX4

Main parameters

Rated Power: 6500 W

Color: Blue

Control type: Touchpad

Installation way: Vertical installation

Voltage and frequency: 220V/50Hz

Heating type: Casting-aluminum heater

Rated pressure: 0.7MPa

Power regulating range: 4500-6500

Temperature regulating range: 30-55°C

Country of origin

Made in: China

Service

Warranty: 2 years

