

PHILIPS

4K UHD monitor

Monitor

1000 series

27" (68.6 cm)

3840 x 2160 (4K UHD)

27E1N1800AE



Work in style

View all tasks with this monitor in 4K quality, which produces incredibly sharp imagery. In addition, this monitor's IPS panel and HDR-grade visuals, along with its Height Adjustable Stand (HAS), make for a great monitor for any task.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- LowBlue mode and Flicker-free easy-on-the eyes viewing

Easy to experience

- Built-in stereo speakers for multimedia
- VESA mount for convenience
- Height-adjustable for better ergonomic comfort
- HDMI ensures universal digital connectivity
- DisplayPort connection for maximum visuals

Superb Picture Quality

- IPS LED wide view technology for image and color accuracy
- UltraClear 4K UHD (3840x2160) resolution for precision
- Effortlessly smooth action with Adaptive-Sync technology
- High Dynamic Range (HDR) for more lifelike colorful visuals


Monitor

4K UHD monitor

27E1N1800AE/00


Highlights

IPS technology

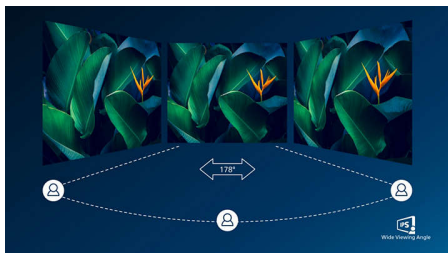


IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

UltraClear 4K UHD Resolution

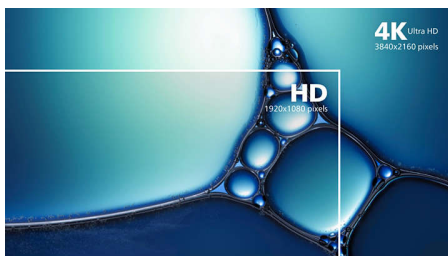

These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.


High Dynamic Range (HDR)

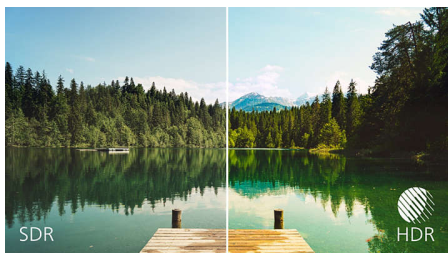

High Dynamic Range delivers a dramatically different visual experience. With astonishing brightness, incomparable contrast and captivating color, images come to life with much greater brightness while also featuring much deeper, more nuanced darks. It renders a fuller

palette of rich new colors never before seen on display, giving you a visual experience that engages your senses and inspires emotions.

Adaptive-Sync technology

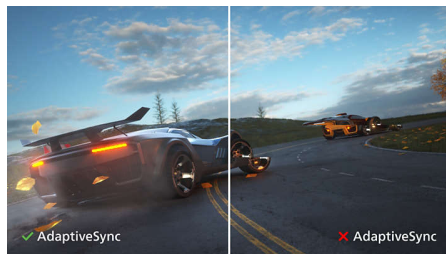

Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

EasyRead mode



EasyRead mode for a paper-like reading experience

EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.



Monitor

4K UHD monitor

27E1N1800AE/00

Highlights

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.


Height-adjustable Ergo Base



The height-adjustable Ergo Base is a 'people friendly' Philips monitor base that not only tilts, but is also height adjustable, so that each user

can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

VESA mount for convenience

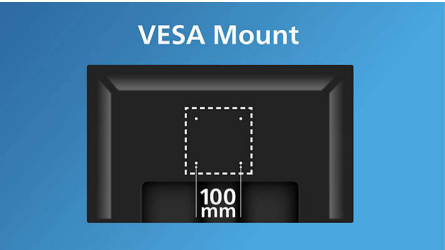

VESA mount for convenience

Monitor

4K UHD monitor

27E1N1800AE/00

Specifications

Picture/Display

Panel Size: 27 inch / 68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.1554x0.1554mm
Brightness: 350 cd/m²
Display colors: 1.07B (8bit+Hi-FRC)
Contrast ratio (typical): 1000:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Gray to Gray)*
Viewing angle: 178° (H) / 178° (V), @ C/R > 10
Picture enhancement: SmartImage
Maximum resolution: 3840 x 2160 @ 60 Hz*
Effective viewing area: 597.888 (H) x 336.312 (V)
Scanning Frequency: 30k - 140 kHz (H) / 40 - 60 Hz (V)
sRGB
Delta E: < 2 (sRGB)
Flicker-free
Pixel Density: 163.18 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
SmartUniformity: 93%-105%
EasyRead
Adaptive sync
HDR: HDR 10 supported

Connectivity

Signal Input: HDMI 2.0 x 2, DisplayPort 1.4 x 1
Sync Input: Separate Sync
Audio (In/Out): Audio out
HDCP: HDCP 1.4 (HDMI/DisplayPort), HDCP 2.2(HDMI/DisplayPort)

Convenience

Built-in Speakers: 2 W x 2
Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10
User convenience: Power On/Off, Menu, Volume, Input, SmartImage
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

Height adjustment: 100 mm
Tilt: -5/20 degree

Power

Power supply: Internal, 100-240VAC, 50-60Hz
Off mode: 0.3 W (typ.)
On mode: 27.24 W (typ.)
Standby mode: 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode- White (blinking)
Energy Label Class: F

Dimensions

Packaging in mm (WxHxD): 780 x 447 x 160 mm
Product without stand (mm): 613 x 365 x 54 mm
Product with stand(max height): 613 x 492 x 220 mm

Weight

Product with packaging (kg): 8.4 kg
Product with stand (kg): 5.69 kg
Product without stand (kg): 3.92 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, ICES-003, TUV/ISO9241-307, TUV-BAUART, ETL, CEC, EAC, UKCA, MEPS, VCCI, EMF, FCC

Cabinet

Color: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, Power cable
Monitor with stand
User Documentation

