

PHILIPS

sonicare



Rechargeable Sonic Toothbrush

6100

Up to 10 x more plaque removal

2 modes, 3 intensities

Visible pressure alert

21-day battery life



HX7403/05

Gentle clean, even for sensitive teeth and gums

Up to 10 x more plaque removal*

The Philips Sonicare 6100 features Next-Generation Sonicare technology, a dedicated Sensitive mode, S2 Sensitive brush head and low intensity. Plus, a pressure alert for when you brush too hard. Comes with a travel case.

Gentle, superior cleaning

- Gentle cleaning for sensitive teeth and gums

Brushing made effortless

- Personalise your clean with 6 brushing settings
- Protect your gums with the visible pressure alert
- Always know when it's time for a new brush head

Superior clean

- Next-Generation Sonicare Technology

Designed for your lifestyle

- Laser-welded for strength and durability
- Long-lasting Battery – Enjoy up to 3 weeks of brushing on a single charge
- Make travel easy with our compact, ultra-durable travel case
- Optimise your brushing with the SmarTimer and BrushPacer

6100

Rechargeable Sonic Toothbrush

HX7403/05


Highlights

S2 Sensitive Brush Head



The Philips Sonicare 6100 electric toothbrush delivers a gentle brushing experience, even for sensitive teeth and gums. Thanks to the new S2 Sensitive brush head made using Sonicare's softest bristles, it is uniquely designed to provide a gentle clean that removes up to 10 x more plaque in hard-to-reach areas.**

Next-Gen Sonicare technology

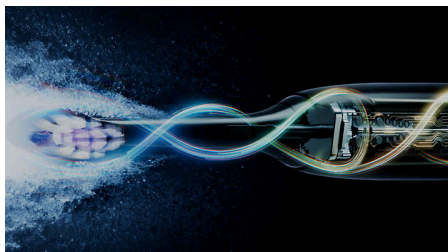


Enjoy a delightful brushing experience and new level of oral care with Next-Generation Sonicare technology. While you brush, the electric toothbrush's innovative magnetic system adjusts brushing power during each cleaning session, delivering optimal performance of precisely 62,000 bristle movements per minute, even in hard-to-reach areas. Meanwhile, dynamic fluid action supports the brush head's cleaning performance by gently rinsing along the gumline and between every tooth, helping you achieve a complete clean every time you brush.

6 brushing settings



Designed for sensitive teeth and gums, the Philips Sonicare 6100 electric toothbrush allows you to choose between 2 brushing modes. Sensitive mode provides gentle, thorough cleaning, while Clean mode focuses on plaque removal for a superior clean. For a personalised clean, you can combine any mode with one of 3 intensity levels, from High to Low, for a brushing session that's right for you.

Light-ring pressure alert

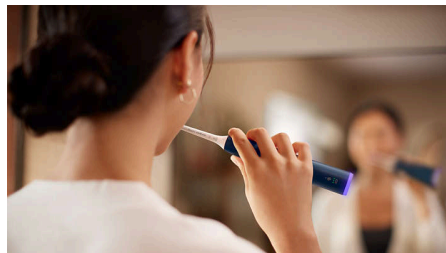

You may not notice when you're brushing too hard, but this electric toothbrush will. The smart optic pressure sensor precisely detects excessive brushing pressure, then flashes purple while reducing vibration. You'll always know when to adjust your brushing, and your gums will stay protected.

BrushSync replacement reminder



Replacing your electric toothbrush head regularly is an important part of maintaining good oral health. With BrushSync technology, it's easy to keep your brush head performing at its best. By tracking your usage frequency and brushing intensity, the innovative technology then reminds you when it's time for a new brush head.

2-minute timer and brushing pacer



Achieve a complete clean in just two minutes with our SmarTimer, which ensures you brush for the dentist-recommended time. For an even clean throughout your mouth, the BrushPacer divides your session into segments, with a slight pause in vibration as your cue to move on. This supports you in achieving an even clean every time you brush.


6100

Rechargeable Sonic Toothbrush

HX7403/05

Highlights

Designed to last

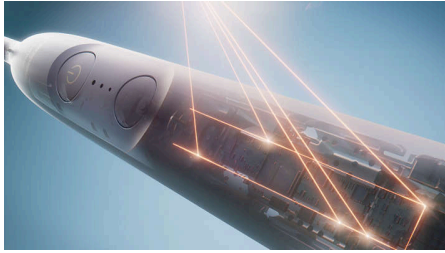

We've re-designed our Philips Sonicare electric toothbrushes from the inside out to be strong, lightweight and long-lasting. Thanks to our advanced laser-welding process, our electric toothbrushes are designed to brush with you for years to come.

Up to 3-week battery life



This electric toothbrush features a high-performance long-lasting rechargeable battery designed to enhance your brushing experience. With a single charge, you can enjoy up to three weeks of regular brushing before needing to recharge, ensuring convenient and hassle-free oral care

Compact travel case



Our redesigned travel case is compact enough to slip into a bag and strong enough to keep your Philips Sonicare electric toothbrush protected along the way. Not only does it keep your toothbrush protected, but it also conveniently holds two brush heads. Now you can travel confidently wherever your journey takes you.

6100

Rechargeable Sonic Toothbrush

HX7403/05

Specifications

Intensities

High: To boost your clean

Medium: For an everyday clean

Low: For sensitive teeth and gums

Power

Voltage: 100-240 V

Technical specifications

Operating time (full to empty): 21 days

Battery: Rechargeable

Battery type: Lithium ION

Energy consumption: Standby without display
<0.5 W

Design and finishing

Colour: Navy Blue

Service

Warranty: 2-year limited warranty

Ease of use

Handle: Slim ergonomic design

Handle compatibility: Easy click-on brush heads

Battery indicator: Illuminated icon indicates battery life

Timer: SmarTimer and BrushPacer for complete and thorough brushing

USB-A Charging: Power adapter not included

Items included

Handle: 1 6100 rechargeable toothbrush

Brush head: 1 S2 Sensitive

Travel case: 1 slim travel case

Charger: 1

Cleaning performance

Plaque removal: Up to 10 x more effective*

Gum Health: Up to 5 x healthier gums*

Speed: 62,000 brush movements/min

Modes

Clean: For exceptional everyday cleaning

Sensitive: For sensitive teeth and gums

Smart sensor technology

Pressure feedback: Light ring illuminates purple, Reduced vibration and pulsing sound

Replacement Reminder: BrushSync lets you know when to replace your brush head

