# EVNJA



24M2N5500L

EN	
User manual	1
Customer care and warranty	21
Troubleshooting and FAQs	25

Register your product and get support at www.philips.com/welcome

## PHILIPS

### **Table of Contents**

1.	Important1 1.1 Safety precautions and
	maintenance1
	1.2 Notational Descriptions
	1.3 Disposal of product and packing material4
2.	Setting up the monitor5
	<ul><li>2.1 Installation5</li><li>2.2 Operating the monitor7</li></ul>
	2.3 Remove the Base Assembly for
	VESA Mounting 10
3.	Image Optimization11
	3.1 SmartImage
	3.2 SmartContrast
4.	Adaptive Sync14
5.	HDR15
6.	Technical Specifications16
	6.1 Resolution & Preset Modes 19
7.	Power Management20
	-
7. 8.	Customer care and warranty21
	-
	Customer care and warranty 21 8.1 Philips' Flat Panel Monitors Pixel
	Customer care and warranty21 8.1 Philips' Flat Panel Monitors Pixel Defect Policy

### 1. Important

This electronic user's guide is intended for anyone who uses the Philips monitor. Take time to read this user manual before you use your monitor. It contains important information and notes regarding operating your monitor.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

### 1.1 Safety precautions and maintenance

### Warnings

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your computer monitor.

Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the equalizer to maximum increases the earphones and headphones output voltage and therefore the sound pressure level.

### Operation

 Please Keep the monitor out of direct sunlight, very strong bright lights and away from any other heat source. Lengthy exposure to this type of environment may result in discoloration and damage to the monitor.

- Keep the display away from oil. Oil may damage the plastic cover of the display and void the warranty.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the monitor's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching the power cable or DC power cord, wait for 6 seconds before attaching the power cable or DC power cord for normal operation.
- Please use approved power cord provided by Philips all the time. If your power cord is missing, please contact with your local service center. (Please refer to Service contact information listed in Important information manual.)
- Operate under the specified power supply. Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.
- Protect the cable. Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables, if damaged, the cables may cause fire or electric shock.
- Do not subject the monitor to severe vibration or high impact conditions during operation.
- To avoid potential damage, for example the panel peeling from the bezel, ensure that the monitor does not tilt downward by more than -5 degrees. If the -5 degree downward tilt angle maximum is exceeded, the

monitor damage will not be covered under warranty.

- Do not knock or drop the monitor during operation or transportation.
- Excessive usage of monitor can cause eye discomfort, it's better to take shorter breaks more often at your workstation than longer breaks and less often; for example a 5-10 minute break after 50-60-minute continuous screen use is likely to be better than a 15-minute break every two hours. Try to keep your eyes from eye strain while using the screen for a constant period of time by :
  - Looking at something varying distances after a long period focusing on the screen.
  - Conscious Blinking often while you work.
  - Gently closing and rolling your eyes to relax.
  - Reposition your screen to appropriate height and angle according to your height.
  - Adjusting the brightness and contrast to appropriate level.
  - Adjusting the environment lighting similar to that of your screen brightness, avoid the fluorescent lighting, and surfaces that don't reflect too much light.
  - Seeing a doctor if your symptoms.

#### Maintenance

 To protect your monitor from possible damage, do not put excessive pressure on the LCD panel. When moving your monitor, grasp the frame to lift; do not lift the monitor by placing your hand or fingers on the LCD panel.

- Oil-based cleaning solutions may damage the plastic parts and void the warranty.
- Unplug the monitor if you are not going to use it for an extensive period of time.
- Unplug the monitor if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your monitor.
- To avoid the risk of shock or permanent damage to the set, do not expose the monitor to dust, rain, water, or excessive moisture environment.
- If your monitor gets wet, wipe it with dry cloth as soon as possible.
- If foreign substance or water gets in your monitor, please turn the power off immediately and disconnect the power cord. Then, remove the foreign substance or water, and send it to the maintenance center.
- Do not store or use the monitor in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your monitor and use it for a longer lifetime, please use the monitor in a location that falls within the following temperature and humidity ranges.
  - Temperature: 0-40°C 32-104°F
  - Humidity: 20-80% RH

Important information for Burn-in/ Ghost image

 Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your monitor will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn-in", also known as "after-imaging" or "ghost imaging", on your screen.

 "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burnin" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

### Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "afterimage" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

#### Service

- The casing cover should be opened only by qualified service personnel.
- If there is any need for any document for repair or integration, please contact with your local service center. (Please refer to Service contact information listed in Important information manual.)
- For transportation information, please refer to "Technical Specifications".
- Do not leave your monitor in a car/ trunk under direct sun light.

### Note

Consult a service technician if the monitor does not operate normally, or you are not sure what procedure to take when the operating instructions given in this manual have been followed.

### 1.2 Notational Descriptions

The following subsections describe notational conventions used in this document.

Notes, Cautions and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold or italic type. These blocks contain notes, cautions or warnings. They are used as follows:

### Note

This icon indicates important information and tips that help you make better use of your computer system.

### Caution

This icon indicates information that tells you how to avoid either potential damage to hardware or loss of data.

### **Warning**

This icon indicates the potential for bodily harm and tells you how to avoid the problem.

Some warnings may appear in alternate formats and may not be accompanied by an icon. In such cases, the specific presentation of the warning is mandated by the relevant regulatory authority.

### 1.3 Disposal of product and packing material

Waste Electrical and Electronic Equipment-WEEE



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please find out about the local regulations on how to dispose of your old monitor and packing from your sales representative.

Taking back/Recycling Information for Customers

Philips establishes technically and economically viable objectives to optimize the environmental performance of the organization's product, service and activities.

From the planning, design and production stages, Philips emphasizes the important of making products that can easily be recycled. At Philips, end-of-life management primarily entails participation in national takeback initiatives and recycling programs whenever possible, preferably in cooperation with competitors, which recycle all materials (products and related packaging material) in accordance with all Environmental Laws and taking back program with the contractor company.

Your display is manufactured with high quality materials and components which can be recycled and reused.


To learn more about our recycling program please visit

http://www.philips.com/a-w/about/ sustainability.html

# 2. Setting up the monitor

### 2.1 Installation

### Package contents






номі






\*Different according to region

- 2 Install the base
- 1. Place the monitor face down on soft and smooth surface taking care to avoid scratching or damaging the screen.




- 2. Hold the stand with both hands.
  - (1) Attach/Slide the base colum with the monitor until it clicks into position.
  - (2) Gently attach the base to the stand.
  - (3) Use your fingers to tighten the screw located at the bottom of the base.
  - (4) Turn the TOP arrow up and 180 degrees left and right.
  - (5) Insert VESA Cover diagonally into rear cover.
  - (6) Press the VESA Cover to snap back the rear cover.

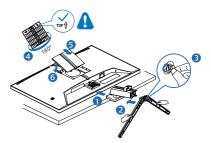

### Caution

Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen.

### 3 Connecting to your PC

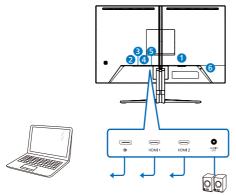

- 1 AC power input
- 2 DisplayPort input
- B HDMI 1 input
- 4 HDMI 2 input
- 6 Audio Out
- **6** Kensington anti-theft lock

### Connect to PC

- 1. Connect the power cord to the back of the monitor firmly.
- 2. Turn off your computer and unplug its power cable.
- 3. Connect the monitor signal cable to the video connector on the back of your computer.
- Plug the power cord of your computer and your monitor into a nearby outlet.
- 5. Turn on your computer and monitor. If the monitor displays an image, installation is complete.

### 2.2 Operating the monitor

### **1** Description of the control buttons



0		Press to switch power on. Press more than 3 seconds to switch power off.
0	•	Access the OSD menu.
		Confirm the OSD adjustment.
8	L	Adjust the Game Setting.
9	•	Adjust the OSD menu.
4	•	Change the signal input source.
	•	Adjust the OSD menu.
6	4	SmartImage Game menu. There are multiple selections: Standard, FPS, Racing, RTS, Movie, LowBlue Mode, EasyRead, Economy, Smartuniformity, Game1, Game2. When the monitor receives HDR signal, SmartImage will show the HDR menu. There are multiple selections in this menu: HDR Game, HDR Movie, HDR Vivid, Personal and Off.
		Return to previous OSD level.

2 Description of the On Screen Display

What is On-Screen Display (OSD)?

On-Screen Display (OSD) is a feature in all Philips LCD monitors. It allows an end user to adjust screen performance or select functions of the monitors directly through an on-screen instruction window. A user friendly on screen display interface is shown as below:



Basic and simple instruction on the control keys

To access the OSD menu on this Philips display simply use the single toggle button on the rear side of the display. The single button operates like a joystick. To move the cursor, simply toggle the button in four directions. Press the button to select desired option.

#### The OSD Menu

Below is an overall view of the structure of the On-Screen Display. You can use this as a reference when you want to work your way around the different adjustments later on.

Main menu	Sub menu		
- SmartImage	Standard, FPS, Racing, RTS, Movie,	Brightness	0~100
	LowBlue Mode, EasyRead, Economy, Smartuniformity, Game1, Game2	Contrast	<u> </u>
		- SmartContrast	- On, Off
		— Gamma	- 1.8, 2.0, 2.2, 2.4, 2.6
		Sharpness sRGB	
		Color Temperature	<ul> <li>Native, Preset, 5000K, 6500K, 7500K, 8200K, 9300K, 11500K</li> </ul>
		R.G.B. settings	— On, Off
		- Red	0~100
		- Green	<u> </u>
		- Blue	- 0~100
		Reset	- Yes, No
- SmartImage(H	DR) HDR Game, HDR Movie, HDR Vivid	Brightness	
		- Contrast	- 0~3
		Light Enhancement     Color Enhancement	- 0-3
		Reset	— Yes, No
			0~100
	— Personal	Contrast	— 0~100 — 0~100
		<ul> <li>Light Enhancement</li> </ul>	- 0~3
		- Color Enhancement	- 0-3
		Reset	— Yes, No
	L_ Off		
Game Mode	Adaptive Sync	— Adaptive Sync On, Adaptive Syn	nc Off
	- Smart MBR	- MBR Level	<u> </u>
	Crosshair	- Off, On, Smart Crosshair On	
		- Off, Level 1, Level 2, Level 3	
	- Low Input Lag	- Low Input Lag On, Low Input La	ag Off
	- SmartResponse	- Off, Fast , Faster, Fastest	
	SmartFrame	SmartFrame Off	
		SmartFrame On     Size	1224567
		- Brightness	
		- Contrast	<u> </u>
		- H. Position	— 0~Max
		V. Position	- O-Max
Input	Input	HDMI 1	
		HDMI 2	
		DisplayPort Auto	— On, Off
Audio	Volume	- 0~100	<u> </u>
	- Mute	- Mute(On, Off)	
- Language	Language	— English, Deutsch, Español, Еλλην Polski, Русский, Svenska, Suor	жң, Français, Italiano, Magyar, Nederlands, Português, Português do Brasil, mi, Türkçe, Ĉeŝtina, Українська, 简体中文, 繁體中文, 日本語, 한국어
System	OSD Setting	Horizontal	
		- Vertical	
		- Transparency	Off, 1, 2, 3, 4
		OSD Time Out	5s, 10s, 20s, 30s, 60s
		Screen Size	
		- 1:1	
		4:3	
	and a law		- "
	Pixel Orbiting	<ul> <li>Pixel Orbiting On, Pixel Orbiting</li> </ul>	ς Οπ
	- Over Scan	- Over Scan On, Over Scan Off	
Setup	Power LED	- Power LED	
		- Resolution Notice On, Resolution	on Notice Off
	- Information	Model	
	Reset	SN Yes, No	
		163,110	
Close			

8

### Note

Game mode: This model is equipped with new features in OSD which gives you high-quality visual experience.

#### Smart Crosshair

Color of Crosshair is set by default. When Smart Crosshair is on, the color will change as complementary color to the background color. Smart Crosshair enhances the accuracy of aiming so you can spot the enemies more easily.

### 3 Resolution notification

This monitor is designed for optimal performance at its native resolution, 2560 x 1440. When the monitor is powered on at a different resolution, an alert is displayed on screen: Use 2560 x 1440 for best results.

Display of the native resolution alert can be switched off from Setup in the OSD (On Screen Display) menu.

4 Physical Function

Tilt



### Warning

- To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
- Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.


### 2.3 Remove the Base Assembly for VESA Mounting

Before you start disassembling the Display base, please follow the instructions below to avoid any possible damage or injury.


1. Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen.




2. While keeping the release button pressed, tilt the base and slide it out.

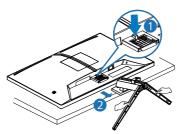

3. Press both corners of the VESA Cover and the other side of the cover will pop out.




4. Remove the VESA Cover.

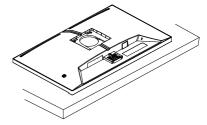

### Note

This monitor accepts a 100mm x 100mm VESA-Compliant mounting interface. VESA Mounting Screw M4. Always contact manufacturer for wall-mount installation.

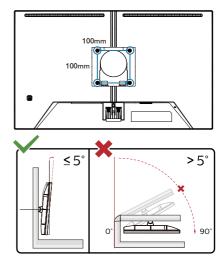

\* Display design may differ from those illustrated.

### Warning

- To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
- Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

### 3. Image Optimization

### 3.1 SmartImage

### 1 What is it?

SmartImage provides presets that optimize display for different types of content, dynamically adjusting brightness, contrast, color and sharpness in real time. Whether you're working with text applications, displaying images or watching a video, Philips SmartImage delivers great optimized monitor performance.


### 2 Why do I need it?

You want a monitor that delivers optimized display all your favorite types of content, SmartImage software dynamically adjust brightness, contrast, color and sharpness in real time to enhance your monitor viewing experience.

### 3 How does it work?


SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images to enhance the contents being displayed all in real time with the press of a single button.

4 How to enable SmartImage?



- 1. Toggle to the left to launch the SmartImage on screen display.
- 2. Toggle to the up or down to select between the smartImage modes.
- The SmartImage on screen display will remain on screen for 8 seconds, or you can also toggle to the left to make confirmation.

There are multiple selections: Standard, FPS, Racing, RTS, Movie, LowBlue Mode, EasyRead, Economy, Smartuniformity, Game1 and Game2.

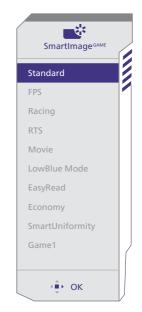

- Standard: Enhances text and dampens brightness to increase readability and reduce eye strain. This mode significantly enhances readability and productivity when you're working with spreadsheets, PDF files, scanned articles or other general office applications.
- FPS: For playing FPS (First Person Shooters) games. Improves dark theme black level details.

- Racing: For playing Racing games. Provides fastest response time and high color saturation.
- RTS: For playing RTS (Real Time Strategy) games, a user-selected portion can be highlighted for RTS games (through SmartFrame). The picture quality can be adjusted for the highlighted portion.
- Movie: Ramped up luminance, deepened color saturation, dynamic contrast and razor sharpness displays every details in darker areas of your videos without color washout in brighter areas maintaining a dynamic natural values for the ultimate video display.
- LowBlue Mode: LowBlue Mode for easy on-the-eyes productivity Studies have shown that just as ultraviolet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.
- EasyRead: Helps improve reading of text based application like PDF ebooks. By using a special algorithm which increases the contrast and boundary sharpness of text content, the display is optimized for a stress-free reading by adjusting the brightness, contrast and color temperature of the monitor.
- Economy: Under this profile, brightness, contrast are adjusted and backlighting finetuned for just right display of everyday office applications and lower power consumption.
- Smartuniformity: Fluctuations in brightness on different parts of a screen are a common phenomenon

among LCD displays. Typical uniformity is measured around 75-80%. By enabling Philips SmartUniformity feature, display uniformity is increased to above 95%. This produces more consistent and true images.

- Game1: User's preference settings saved as Game1.
- Game2: User's preference settings saved as Game2.

When this display receives an HDR signal from the connected device, select a picture mode that best fits your needs.

There are 5 modes to select: HDR Game, HDR Movie, HDR Vivid, Personal and Off.



- HDR Game: Ideal setting to optimize for playing video games. With brighter white and darker black, the gaming scene is vivid and reveals more details, easily spotting enemies hiding in the dark corner and shadows.
- HDR Movie: Ideal setting for watching HDR movies. Deliver better contrast and brightness for a more realistic and immersing viewing experience.
- HDR Vivid: Enhancing red, green, and blue for true-to-life visuals.
- **Personal:** Customize available settings in the picture menu.

• Off: No optimization by SmartImage HDR.

### Note

To switch off the HDR function, please disable the Input device and its content. Inconsistent HDR settings between the input device and monitor may cause unsatisfying images.

### 3.2 SmartContrast

### 1 What is it?

Unique technology that dynamically analyzes displayed content and automatically optimizes a Monitor's contrast ratio for maximum visual clarity and viewing enjoyment, stepping up backlighting for clearer, crisper and brighter images or dimming backlighting for clear display of images on dark backgrounds.

### 2 Why do I need it?

You want the very best visual clarity and viewing comfort for every type of content. SmartContrast dynamically controls contrast and adjusts backlighting for clear, crisp, bright gaming and video images or displays clear, readable text for office work. By reducing your monitor's power consumption, you save on energy costs and extend the lifetime of your monitor.

#### 3 How does it work?

When you activate SmartContrast, it will analyse the content you are displaying in real time to adjust colors and control backlight intensity. This function will dynamically enhance contrast for a great entertainment experience when viewing videos or playing games.

### 4. Adaptive Sync



PC gaming has long been an imperfect experience because GPUs and monitors update at different rates. Sometimes a GPU can render many new pictures during a single update of the monitor, and the monitor will show pieces of each picture as a single image. This is called "tearing." Gamers can fix tearing with a feature called "v-sync," but the image can become jerky as the GPU waits on the monitor to call for an update before delivering new pictures.

The responsiveness of mouse input and overall frames per second are reduced with v-sync, too. AMD Adaptive Sync™ technology eliminates all of these problems by letting the GPU update the monitor the moment a new picture is ready, leaving gamers with unbelievably smooth, responsive, tearing-free games.

Followed by the graphic card that are compatible.

- Operating system
  - Windows 11/10
- Graphic Card: R9 290/300 Series & R7 260 Series
  - AMD Radeon R9 300 Series
  - AMD Radeon R9 Fury X
  - AMD Radeon R9 360
  - AMD Radeon R7 360
  - AMD Radeon R9 295X2
  - AMD Radeon R9 290X
  - AMD Radeon R9 290

- AMD Radeon R9 285
- AMD Radeon R7 260X
- AMD Radeon R7 260
- Processor A-Series Desktop and Mobility APUs
  - AMD A10-7890K
  - AMD A10-7870K
  - AMD A10-7850K
  - AMD A10-7800
  - AMD A10-7700K
  - AMD A8-7670K
  - AMD A8-7650K
  - AMD A8-7600
  - AMD A6-7400K
  - AMD RX 6500 XT
  - AMD RX 6600 XT
  - AMD RX 6700 XT
  - AMD RX 6750 XT
  - AMD RX 6800
  - AMD RX 6800 XT
  - AMD RX 6900 XT

### 5. HDR

### HDR Settings in Windows 11/10 system.


### Steps

- 1. Right-click on the desktop, and enter Display settings.
- 2. Select the display/monitor.
- 3. Select an HDR-capable display under Rearrange your displays.
- 4. Select Windows HD Color settings.
- 5. Adjust Brightness for SDR content.

### Note

Windows 10 edition is required. Always upgrade to the most updated version. The link below is for further information from the Microsoft official website.

### https://support.microsoft.com/enau/help/4040263/windows-10-hdradvanced-color-settings

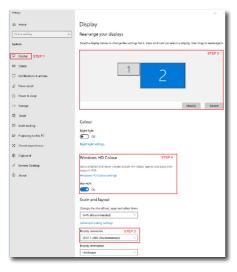

Windows HD Colour settings ŵ Stream HDR video Yes Use HDR Yes Use WCG apps Yes Use HDR On On Stream HDR Video On On This display can play streaming HDR video when available. For best results, play HDR videos full screen. Learn more The preview video below shows you what video will look like with your current video settings. Move this window to the display you're adjusting to get an accurate preview STEP 5 HDR/SDR brightness balance Move this window to the display that you're adjusting. Then adjust the brightness balance between the two images. dynamic range (SDR) content relative to high dynamic range (HDR) content. Note

To switch off the HDR function, please disable it from an Input device and its content. Inconsistent HDR settings between the input device and monitor may cause unsatisfying images.

### 6. Technical Specifications

Picture/Display		
Monitor Panel Type	IPS Technology	
Backlight	W-LED	
Panel Size	23.8" W (60.5 cm)	
Aspect Ratio	16:9	
Pixel Pitch	0.2058 (H) mm x 0.2058 (V) mm	
Contrast Ratio (typ.)	1000:1	
Native Resolution	2560 x 1440 @ 60 Hz	
Maximum Resolution	2560 x 1440 @ 144 Hz (HDMI) 2560 x 1440 @ 180 Hz (DP)	
Viewing Angle	178° (H) / 178° (V) @ C/R > 10 (typ.)	
Monitor Colors	16.7M	
Picture Enhancement	SmartImage Game /SmartImage HDR	
Vertical Refresh Rate	48 Hz - 144 Hz (HDMI) 48 Hz - 180 Hz (DP)	
Horizontal Frequency	30 KHz - 230 KHz (HDMI) 30 KHz - 270 KHz (DP)	
sRGB	YES	
Flicker Free	YES	
LowBlue Mode	YES	
EasyRead	YES	
Smartuniformity	YES	
Delta E	YES	
Adaptive Sync	YES	
HDR	YES	
Connectivity		
Signal Input source	HDMI 1, HDMI 2, DisplayPort	
Connectors	2 x HDMI 2.0 (HDCP 1.4, HDCP 2.2) 1 x DisplayPort 1.4 (HDCP 1.4, HDCP 2.2) 1 x Audio out	
Sync input	Separate Sync	
Convenience		
OSD Languages	English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean	
Other Convenience	VESA mount (100 x 100 mm), Kensington Lock	
Plug & Play Compatibility	DDC/CI, sRGB, Windows 11/10, Mac OS X	
Stand		
Tilt	-5° / +20°	

Consumption         AC Input Voltage at 100VAC, 60H2         AC Input Voltage at 115VAC, 60H2         AC Input Voltage at 230VAC, 50H2           Normal Operation         21.8 W (typ.)         21.4 W (typ.)         21.3 W (typ.)           Sleep (Standby mode)         0.5 W (typ.)         0.5 W (typ.)         0.3 W (typ.)           Off mode         0.3 W (typ.)         0.3 W (typ.)         0.3 W (typ.)           Heat Dissipation*         AC Input Voltage at 115VAC, 60H2         AC Input Voltage AC Input Voltage at 115VAC, 60H2         AC Input Voltage AT 230VAC, 50H2           Normal Operation         74.40 BTU/hr (typ.)         73.04 BTU/hr (typ.)         72.70 BTU/hr (typ.)           Sleep (Standby mode)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)         Power Supply         Built-in, 100-240 V-L         SVE           Product with stand (WxHxD)         540 x 433 x 195 m         VE         VE           Product with packaging (WxHxD)         610 x 395 x 126 m         VE         VE           Product with packaging (WxHxD)         2.77 kg         VE         VE           Product with packaging	Power				
at 100xAC, 60H2         at 115VAC, 60H2         at 115VAC, 60H2         at 213 W (typ.)           Normal Operation         21.8 W (typ.)         0.5 W (typ.)         0.5 W (typ.)         0.5 W (typ.)           Off mode         0.3 W (typ.)         0.3 W (typ.)         0.3 W (typ.)         0.3 W (typ.)           Heat Dissipation*         AC Input Voltage at 115VAC, 60H2         AC Input Voltage AC Input Voltage AC Input Voltage AC Input Voltage AC Information         AC	Consumption	AC Input Voltage	AC Input Voltage	AC Input Voltage	
Sleep (Standby mode)         0.5 W (typ.)         0.5 W (typ.)         0.5 W (typ.)           Off mode         0.3 W (typ.)         0.3 W (typ.)         0.3 W (typ.)           Heat Dissipation*         AC Input Voltage at 100VAC, 60Hz at 115VAC, 60Hz at 115VAC, 60Hz         AC Input Voltage at 230VAC, 50H2           Normal Operation         74.40 BTU/hr (typ.)         73.04 BTU/hr (typ.)         72.70 BTU/hr (typ.)           Sleep (Standby mode)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240VAC, 50/60Hz         Up.)           Product with stand (WxHxD)         540 x 433 x 195 mm         Up.)           Product without stand (WxHxD)         540 x 325 x 55 mm         Up.)           Weight         Up.         Up.         Up.           Product with packaging (operation)         0°C to 40°C         Up.         Up.           Operating Condition         2.77 kg         Up.         Up.           Temperature range (operation)         0°C to 40°C         Up.         Up.           Atmospheric pressure (Non-operation)         20% to 80%	Consumption	at 100VAC, 60Hz	at 115VAC, 60Hz	at 230VAC, 50Hz	
Off mode         0.3 W (typ.)         0.3 W (typ.)         0.3 W (typ.)           Heat Dissipation*         AC Input Voltage at 100VAC, 60Hz         AC Input Voltage at 135VAC, 60Hz         AC Input Voltage at 230VAC, 50Hz           Normal Operation         74.40 BTU/hr (typ.)         73.04 BTU/hr (typ.)         72.70 BTU/hr (typ.)           Sleep (Standby mode)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240 VAC, 50/60 Hz         U           Dimensions         540 x 433 x 195 mm         S           Product with stand (WxHxD)         540 x 325 x 55 mm         S           Product with packaging (WxHxD)         610 x 395 x 126 mm         S           Product with packaging         5.51 kg         S           Operating Condition         2.77 kg         S           Product with packaging         5.51 kg         S           Operation)         0°C to 40°C         S         S           Relative humidity (operation)         20% to 80%         S         S					
Heat Dissipation*AC Input Voltage at 100VAC, 60HzAC Input Voltage at 115VAC, 60HzAC Input Voltage at 230VAC, 50HzNormal Operation(typ.)(typ.)(typ.)(typ.)Sleep (Standby mode)1.71 BTU/hr (typ.)1.71 BTU/hr (typ.)1.71 BTU/hr (typ.)1.71 BTU/hr (typ.)Off mode1.02 BTU/hr (typ.)1.02 BTU/hr (typ.)1.02 BTU/hr (typ.)1.02 BTU/hr (typ.)Power LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuilt-in, 100-240VAC, 50/60HzDimensionsProduct with stand (WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmVeightProduct with packaging (operation)0°C to 40°COperating Condition (coperation)20% to 80%Relative humidity (operation)20% to 60°CRelative humidity (non-operation)00 to 1060hPaTemperature range (non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy NOMYESPackaging100% recyclable					
Heat Dissipation         at 100VAC, 60Hz         at 115VAC, 60Hz         at 230VAC, 50Hz           Normal Operation         74.40 BTU/hr (typ.)         73.04 BTU/hr (typ.)         72.70 BTU/hr (typ.)         72.70 BTU/hr (typ.)           Sleep (Standby mode)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         0n mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240VAC, 50/60Hz         Up.)           Product with stand (WXHxD)         540 x 433 x 195 mm         Up.)           Product without stand (WXHxD)         540 x 325 x 55 mm         Up.)           Product with packaging (WXHxD)         610 x 395 x 126 mm         Up.)           Product with packaging         5.51 kg         Up.)           Operation         2.77 kg         Up.)         Up.)           Product with packaging         5.51 kg         Up.)         Up.)           Operation)         20% to 80%         Up.)         Up.)           Relative humidity (operation)         20% to 80%         Up.)         Up.)           Relative humidity (Non-op	Off mode			()))	
Normal Operation         (typ.)         (typ.)         (typ.)           Sleep (Standby mode)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)         1.71 BTU/hr (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240VAC, 50/60Hz           Dimensions         Forduct with stand           Product without stand         540 x 433 x 195 mm           (WxHxD)         S40 x 325 x 55 mm           Product with packaging (WxHxD)         610 x 395 x 126 mm           Weight         Forduct with stand           Product with packaging         5.51 kg           Operating Condition         20% to 80%           Relative humidity (operation)         20% to 80%           Atmospheric pressure (operation)         700 to 1060hPa           Temperature range (operation)         20% to 80%           Atmospheric pressure (non-operation)         500 to 1060hPa           Relative humidity (Non-operation)         10% to 90%           Atmospheric pressure (Non-operation)         500 to 1060hPa           Relative humidity (Non-operation)         10% to 90% <td>Heat Dissipation*</td> <td></td> <td></td> <td></td>	Heat Dissipation*				
Sleep (standoy mode)         (typ.)         (typ.)         (typ.)           Off mode         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)         1.02 BTU/hr (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240VAC, 50/60Hz           Dimensions         Product with stand (WxHxD)         540 x 433 x 195 mm           Product without stand (WxHxD)         540 x 325 x 55 mm	Normal Operation		(typ.)	(typ.)	
Off mode         (typ.)         (typ.)         (typ.)           Power LED indicator         On mode: White, Standby/Sleep mode: White (blinking)           Power Supply         Built-in, 100-240VAC, 50/60Hz           Dimensions         Product withs stand           (WxHxD)         540 x 433 x 195 mm           Product with stand         540 x 325 x 55 mm           (WxHxD)         610 x 395 x 126 mm           Product with packaging         610 x 395 x 126 mm           (WxHxD)         610 x 395 x 126 mm           Product with packaging         610 x 395 x 126 mm           (WxHxD)         610 x 395 x 126 mm           Product with packaging         610 x 395 x 126 mm           Weight         Product with stand           Product with packaging         5.51 kg           Operating Condition         Immospheric pressure           (operation)         0°C to 40°C           Relative humidity         20% to 80%           (operation)         20% to 80%           Atmospheric pressure         20°C to 60°C           (Non-operation)         10% to 90%           Relative humidity         10% to 90%           Non-operation)         500 to 1060hPa           Fenvironmental and energy         YES <t< td=""><td>Sleep (Standby mode)</td><td></td><td></td><td></td></t<>	Sleep (Standby mode)				
Power SupplyBuilt-in, 100-240VAC, 50/60HzDimensionsProduct with stand (WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand Product with stand 2.77 kgProduct with packaging (operation)5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy PackagingYESPackaging100% recyclable	Off mode				
DimensionsProduct with stand (WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct with packaging (WxHxD)5.1 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (non-operation)700 to 1060hPaRelative humidity (non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy ROHSYESPackaging100% recyclable	Power LED indicator	On mode: White, S	Standby/Sleep mode	e: White (blinking)	
Product with stand (WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct with out stand2.77 kgProduct with packaging (operation)0°C to 40°CRelative humidity (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (Non-operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaProst700 to 1060hPaProst500 to 1060hPaAtmospheric pressure (Non-operation)500 to 1060hPaProst500 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700	Power Supply	Built-in, 100-240V	AC, 50/60Hz		
Product with stand (WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct with out stand2.77 kgProduct with packaging (operation)0°C to 40°CRelative humidity (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (Non-operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaProst700 to 1060hPaProst500 to 1060hPaAtmospheric pressure (Non-operation)500 to 1060hPaProst500 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700 to 1060hPaProst700					
(WxHxD)540 x 433 x 195 mmProduct without stand (WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct without stand2.77 kgProduct with packaging5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (non-operation)700 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaAtmospheric pressure (Non-operation)500 to 1060hPaAtmospheric pressure (Non-operation)10% to 90%Atmospheric pressure (Non-operation)100% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaAtmospheric pressure (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPa		E 40 ··· 422 ··· 405			
(WxHxD)540 x 325 x 55 mmProduct with packaging (WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct without stand2.77 kgProduct with packaging5.51 kgOperating Condition0°C to 40°CTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaPackaging100% recyclable		540 x 433 x 195 m	m		
(WxHxD)610 x 395 x 126 mmWeightProduct with stand3.38 kgProduct without stand2.77 kgProduct with packaging5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (non-operation)-20°C to 60°CKelative humidity (non-operation)10% to 90%Relative humidity (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaProvinonmental and energy745Packaging100% recyclable		540 x 325 x 55 mm			
Product with stand3.38 kgProduct without stand2.77 kgProduct with packaging5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaAtmospheric pressure (Non-operation)10% to 90%Atmospheric pressure (Non-operation)100% to 90%		610 x 395 x 126 mm			
Product without stand2.77 kgProduct with packaging5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPa	Weight				
Product with packaging5.51 kgOperating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaCoperation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaRelative humidity (Non-operation)500 to 1060hPaEnvironmental and energy500 to 1060hPaROHSYESPackaging10% recyclable	Product with stand				
Operating ConditionTemperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaPervironmental and energy500 to 1060hPaROHSYESPackaging10% recyclable	Product without stand				
Temperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy500 to 1060hPaROHSYESPackaging10% recyclable	Product with packaging	5.51 kg			
Temperature range (operation)0°C to 40°CRelative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy500 to 1060hPaROHSYESPackaging10% recyclable					
Relative humidity (operation)20% to 80%Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energy ROHSYESPackaging10% recyclable	Temperature range	0°C to 40°C			
Atmospheric pressure (operation)700 to 1060hPaTemperature range (Non-operation)-20°C to 60°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energyYESPackaging10% recyclable	Relative humidity	20% to 80%			
(Non-operation)-20°C to 80°CRelative humidity (Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energyYESROHSYESPackaging100% recyclable	Atmospheric pressure	700 to 1060hPa			
(Non-operation)10% to 90%Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energyROHSPackaging100% recyclable		-20°C to 60°C			
Atmospheric pressure (Non-operation)500 to 1060hPaEnvironmental and energyYESROHSYESPackaging100% recyclable	Relative humidity	10% to 90%			
ROHS     YES       Packaging     100% recyclable	Atmospheric pressure	500 to 1060hPa			
ROHS     YES       Packaging     100% recyclable	Environmental and energy				
Packaging 100% recyclable		YES			
	Specific Substances				

Cabinet	
Color	Dark Slate
Finish	Texture

### Note

- 1. This data is subject to change without notice. Go to <u>www.philips.com/support</u> to download the latest version of leaflet.
- 2. SmartUniformity and Delta E information sheets are included in the box.

### 6.1 Resolution & Preset Modes

H. freq (kHz)	Resolution	V. freq (Hz)
31.47	720 x 400	70.00
31.47	640 x 480	60.00
35.00	640 x 480	67.00
37.86	640 x 480	72.00
37.50	640 x 480	75.00
35.16	800 x 600	56.00
37.88	800 x 600	60.00
46.88	800 x 600	75.00
47.73	832 x 624	75.00
48.36	1024 x 768	60.00
56.48	1024 x 768	70.00
60.02	1024 x 768	75.00
79.98	1280 x 1024	75.00
67.50	1920 x 1080	60.00
63.89	1280 x 1024	60.00
88.79	2560 x 1440	60.00
222.06	2560 x 1440	144.00
255.17	2560 x 1440	170.00 (DP)
270.18	2560 x 1440	180.00 (DP)

### Note

Please notice that your display works best at native resolution of 2560 x 1440.

For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

### 7. Power Management

If you have VESA DPM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If an input from a keyboard, mouse or other input device is detected, the monitor will 'wake up' automatically. The following table shows the power consumption and signaling of this automatic power saving feature:

Power Management Definition						
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color	
Active	ON	Yes	Yes	21.4 W (typ.) 37.5 W (max.)	White	
Sleep (Standby mode)	OFF	No	No	0.5 W (typ.)	White (blink)	
Off mode	OFF	-	-	0.3 W (typ.)	OFF	

The following setup is used to measure power consumption on this monitor.

- Native resolution: 2560 x 1440
- Contrast: 50%
- Brightness: 90%
- Color temperature: 6500k with full white pattern


### Note

This data is subject to change without notice.

# 8. Customer care and warranty

### 8.1 Philips' Flat Panel Monitors Pixel Defect Policy

Philips strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT Monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This notice explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT Monitor panel must exceed these acceptable levels. For example, no more than 0.0004% of the sub pixels on a monitor may be defective. Furthermore, Philips sets even higher guality standards for certain types or combinations of pixel defects that are more noticeable than others. This policy is valid worldwide.



### Pixels and Sub pixels

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub pixels of a pixel are lit, the three colored sub pixels together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel. Other combinations of lit and dark sub pixels appear as single pixels of other colors.


### Types of Pixel Defects


Pixel and sub pixel defects appear on the screen in different ways. There are two categories of pixel defects and several types of sub pixel defects within each category.

### Bright Dot Defects

Bright dot defects appear as pixels or sub pixels that are always lit or 'on'. That is, a bright dot is a sub-pixel that stands out on the screen when the monitor displays a dark pattern. There are the types of bright dot defects.







Two adjacent lit sub pixels:

- Red + Blue = Purple
- Red + Green = Yellow
- Green + Blue = Cyan (Light Blue)




Three adjacent lit sub pixels (one white pixel).

### Note

A red or blue bright dot must be more than 50 percent brighter than neighboring dots while a green bright dot is 30 percent brighter than neighboring dots.


### Black Dot Defects

Black dot defects appear as pixels or sub pixels that are always dark or 'off'. That is, a dark dot is a sub-pixel that stands out on the screen when the monitor displays a light pattern. These are the types of black dot defects.



### Proximity of Pixel Defects

Because pixel and sub pixels defects of the same type that are near to one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects.

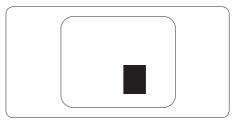

### Pixel Defect Tolerances

In order to qualify for repair or replacement due to pixel defects during the warranty period, a TFT Monitor panel in a Philips flat panel monitor must have pixel or sub pixel defects exceeding the tolerances listed in the following tables.

BRIGHT DOT DEFECTS	ACCEPTABLE LEVEL
1 lit subpixel	2
2 adjacent lit subpixels	1
3 adjacent lit subpixels (one white pixel)	0
Distance between two bright dot defects*	>15mm
Total bright dot defects of all types	2
BLACK DOT DEFECTS	ACCEPTABLE LEVEL
1 dark subpixel	3 or fewer
2 adjacent dark subpixels	2 or fewer
3 adjacent dark subpixels	0
Distance between two black dot defects*	>15mm
Total black dot defects of all types	3 or fewer
TOTAL DOT DEFECTS	ACCEPTABLE LEVEL
Total bright or black dot defects of all types	5 or fewer

Note
1 or 2 adjacent sub pixel defects = 1 dot defect

### 8.2 Customer Care & Warranty

For warranty coverage information and additional support requirements valid for your region, please visit www.philips.com/support website for details or contact your local Philips Customer Care Center.

For extended warranty, if you would like to extend your general warranty period, an Out of Warranty service package is offered via our Certified Service Center.

For Warranty Period please refer to Warranty Statement in Important information manual.

If you wish to make use of this service, please be sure to purchase the service within 30 calendar days of your original purchase date. During the extended warranty period, the service includes pickup, repair and return service, however the user will be responsible for all costs accrued.

If the Certified Service Partner cannot perform the required repairs under the offered extended warranty package, we will find alternative solutions for you, if possible, up to the extended warranty period you have purchased.

Please contact our Philips Customer Service Representative or local contact center (by Consumer care number) for more details.

•	Local Standard Warranty Period	•	Extended Warranty Period	•	Total Warranty Period
•	Depend on different Regions	•	+ 1 Year	•	Local Standard warranty period +1
		•	+ 2 Years	•	Local Standard warranty period +2
		•	+ 3 Years	•	Local Standard warranty period +3

Philips Customer Care Center number listed below.

\*\*Proof of original purchase and extended warranty purchase required.

### Note

Please refer to Important information manual for regional service hotline, which is available on the Philips website support page.

# 9. Troubleshooting & FAQs

### 9.1 Troubleshooting

This page deals with problems that can be corrected by a user. If the problem still persists after you have tried these solutions, contact Philips customer service representative.

### 1 Common Problems

No Picture (Power LED not lit)

- Make sure the power cord is plugged into the power outlet and into the back of the monitor.
- First, ensure that the power button on the rear of the monitor is in the OFF position, then press it to the ON position.

No Picture (Power LED is White)

- Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- Make sure the monitor cable has no bent pins on the connect side. If yes, repair or replace the cable.
- The Energy Saving feature may be activated

### Screen says



- Make sure the monitor cable is properly connected to your computer. (Also refer to the Quick Start Guide).
- Check to see if the monitor cable has bent pins.

• Make sure the computer is turned on.

### Visible signs of smoke or sparks

- Do not perform any troubleshooting steps
- Disconnect the monitor from mains power source immediately for safety
- Contact with Philips customer service representative immediately.

### 2 Imaging Problems

### Image vibrates on the screen

• Check that the signal cable is properly securely connected to the graphics board or PC.

### Image appears blurred, indistinct or too dark

• Adjust the contrast and brightness on On-Screen Display.

#### An "after-image", "burn-in" or "ghost image" remains after the power has been turned off.

- Uninterrupted display of still or static images over an extended period may cause "burn-in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burn-in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.
- Always activate a moving screen saver program when you leave your monitor unattended.
- Always activate a periodic screen refresh application if your LCD monitor will display unchanging static content.
- Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or

"after-imaging" or "ghost imaging" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Image appears distorted. Text is fuzzy or blurred.

 Set the PC's display resolution to the same mode as monitor's recommended screen native resolution.

Green, red, blue, dark, and white dots appears on the screen

 The remaining dots are normal characteristic of the liquid crystal used in today's technology, Please refer the pixel policy for more detail.

\* The "power on" light is too strong and is disturbing

 You can adjust "power on" light using the power LED Setup in OSD main Controls.

For further assistance, refer to the Service contact information listed in Important information manual and contact Philips customer service representative.

\* Functionality different according to display.

### 9.2 General FAQs

- Q1: When I install my monitor what should I do if the screen shows 'Cannot display this video mode'?
- Ans.: Recommended resolution for this monitor: 2560 x 1440.
- Unplug all cables, then connect your PC to the monitor that you used previously.
- In the Windows Start Menu, select Settings/Control Panel. In the Control Panel Window, select the Display icon. Inside the Display Control Panel, select the 'Settings' tab. Under the setting tab, in box labelled 'desktop area', move the sidebar to 2560 x 1440 pixels.
- Open 'Advanced Properties' and set the Refresh Rate to 60 Hz, then click OK.
- Restart your computer and repeat step 2 and 3 to verify that your PC is set at 2560 x 1440.
- Shut down your computer, disconnect your old monitor and reconnect your Philips LCD monitor.
- Turn on your monitor and then turn on your PC.
- Q2: What is the recommended refresh rate for LCD monitor?
- Ans.: Recommended refresh rate in LCD monitors is 60 Hz, In case of any disturbance on screen, you can set it up to 75 Hz to see if that removes the disturbance.
- Q3: What are the .inf and .icm files? How do I install the drivers (.inf and .icm)?
- Ans.: These are the driver files for your monitor. Your computer may ask you for monitor drivers (.inf and .icm files) when you first install your monitor. Follow the

instructions in your user manual, monitor drivers (.inf and .icm files) will be installed automatically.

- Q4: How do I adjust the resolution?
- Ans.: Your video card/graphic driver and monitor together determine the available resolutions. You can select the desired resolution under Windows<sup>®</sup> Control Panel with the "Display properties".
- Q5: What if I get lost when I am making monitor adjustments via OSD?
- Ans.: Simply press the → button, then select [Reset] to recall all the original factory settings.
- Q6: Is the LCD screen resistant to scratches?
- Ans.: In general it is recommended that the panel surface is not subjected to excessive shocks and is protected from sharp or blunt objects. When handling the monitor, make sure that there is no pressure or force applied to the panel surface side. This may affect your warranty conditions.
- Q7: How should I clean the LCD surface?
- Ans.: For normal cleaning, use a clean, soft cloth. For extensive cleaning, please use isopropyl alcohol. Do not use other solvents such as ethyl alcohol, ethanol, acetone, hexane, etc.
- Q8: Can I change the color setting of my monitor?
- Ans.: Yes, you can change your color setting through OSD control as the following procedures.
- Press ⇒ button to show the OSD (On Screen Display) menu

- Press ♥ button to select the option [Color Temperature] then press ➡ button to enter color setting, there are three settings as below.
  - 1. Color Temperature: The settings are Native, 5000K, 6500K, 7500K, 8200K, 9300K and 11500K. With settings in the 5000K range the panel appears "warm, with a red-white color tone", while a 11500K temperature yields "cool, bluewhite toning".
  - sRGB: This is a standard setting for ensuring correct exchange of colors between different device (e.g. digital cameras, monitors, printers, scanners, etc).
  - 3. User Define: The user can choose his/her preference R.G.B. settings by adjusting red, green, blue color.

### Note

A measurement of the color of light radiated by an object while it is being heated. This measurement is expressed in terms of absolute scale, (degrees Kelvin). Lower Kevin temperatures such as 2004K are red; higher temperatures such as 9300K are blue. Neutral temperature is white, at 6504K.

- Q9: Can I connect my LCD monitor to any PC, workstation or Mac?
- Ans.: Yes. All Philips LCD monitors are fully compatible with standard PCs, Macs and workstations. You may need a cable adapter to connect the monitor to your Mac system. Please contact your Philips sales representative for more information.

- Q10: Are Philips LCD monitors Plugand- Play?
- Ans.: Yes, the monitors are Plug-and-Play compatible with Windows 11/10, Mac OSX.
- Q11: What is Image Sticking, or Image Burn-in, or After Image, or Ghost Image in LCD panels?
- Ans.: Uninterrupted display of still or static images over an extended period may cause "burn-in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burn-in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your LCD monitor will display unchanging static content.

### Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "afterimage" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

- Q12: Why is my Display not showing sharp text, and is displaying jagged characters?
- Ans.: Your LCD monitor works best at its native resolution of 2560 x 1440. For best display, please use this resolution.

- Q13: How to unlock/lock my hot key?
- Ans.: Please press ↓ for 10 seconds to unlock/lock the hot key, by doing so, your display pops out "Attention" to show the unlock/ lock status as shown below illustrators.



- Q14: Where can I find Important information manual mentioned in EDFU?
- Ans.: Important information manual can be download on the Philips website support page.

# Q

2024  $\odot$  TOP Victory Investments Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice.

Version: 24M2N5500LE1T