

# PHILIPS



Kids' on-ear  
headphones

2000 series

On-ear wired headphones

Volume limited to 85 dB

Customizable. Audio share

Durable and foldable



TAK2000MP

## Super safe, super fun!

Let the kids rock with these colorful wired headphones! They're light, tough, and volume-limited for safe listening. Got friends over? Audio share lets children daisy chain their headphones with a friend's so they can listen together.

### **On-ear wired headphones. Built for kids.**

- Always safe, always fun. Volume limited to 85 dB\*
- Kid-friendly comfort and easy to use
- Audio sharing for double the fun
- Colorful design with customizable ear cups

### **Take them anywhere**

- Tough, durable, and foldable
- Compatible with most devices. 3.5 mm to USB-C cable in box

### **Cool for calls, and great sound too**


- Clear calls with friends and family
- Warm, natural sound. Philips sound signature
- Thoughtful design. Responsible packaging

## 2000 series

Kids' on-ear headphones


# Highlights

### Volume limited to 85 dB\*

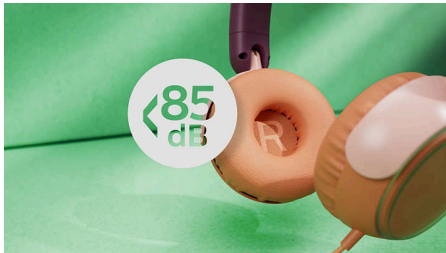

Specially designed to be safe for young ears, these headphones have been volume limited to 85 dB\*. Music, cartoons, movies, educational videos: whatever they're into, you can relax knowing they won't be listening too loud.

### Kid-friendly comfort

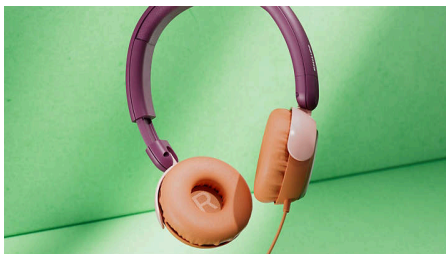

Smaller ear cups with soft ear-cup cushions keep these lightweight headphones comfortable for kids. The cushioned headband also adjusts easily for the perfect fit and features dots on the back that help children see which way around to put the headphones on.

### Customizable ear cups



The multi-colored design makes the headphones stand out in all the right ways—and kids can customize their headphones using their own works of art! Simply lift the transparent ear-cup window, add their drawings or paintings, and click the window closed again.

### Audio sharing

A built-in audio-sharing port means you can daisy chain these headphones so kids can listen together from the same device. Simply connect a standard 3.5 mm headphone cable to the audio-sharing port on these headphones, then plug the other end of the cable into the headphone socket on the second pair of headphones.

### Tough, durable, and foldable

Made from durable, non-toxic materials, these headphones are built to withstand the rigors of daily use by kids. When not in use, they can be folded flat for easy storage in a drawer. Or you can fold them flat and inwards, creating a compact bundle that easily fits into pockets and bags.

### 3.5 mm to USB-C cable

These wired headphones connect to devices via USB-C, which makes them compatible with most laptops, phones, and tablets. The detachable USB-C headphone jack adapter with attached 3.5mm cable is included in the box.

### Clear calls

A built-in microphone lets kids take calls with family and friends. A dedicated mic picks up the sound of their voice, while a noise-reduction algorithm quietsens some of the background noise from the world around them.

### Philips sound signature

Movies to music, they'll love what they hear! These on-ear kids' headphones feature large 32 mm drivers, tuned to the Philips sound signature. Whatever they're into, they'll enjoy a warm, natural sound with deep bass.

### Responsible design

These headphones feature recycled materials, while our plastic-free packaging uses FSC-certified recycled cardboard and soy-based ink. To avoid shipping unwanted cables, the 3.5 mm standard audio cable required to daisy chain headphones is not included in the box.

TAK2000MP/00

# Specifications

### Sound

**Acoustic system:** Closed  
**Frequency range:** 20 - 20,000 Hz  
**Speaker diameter:** 32 mm  
**Impedance:** 32 Ohm  
**Maximum power input:** 20 mW  
**Sensitivity:** 112 dB (1K Hz, 179 mV)  
**Driver type:** Dynamic

### Connectivity

**Cable length:** 1.2 m  
**3.5mm headphone jack**

### Outer Carton

**Length:** 20.30 cm  
**Number of consumer packagings:** 3  
**Width:** 15.00 cm  
**Gross weight:** 0.910 kg  
**Height:** 21.70 cm  
**GTIN:** 1 48 95229 15895 2  
**Nett weight:** 0.41 kg  
**Tare weight:** 0.50 kg

### Packaging dimensions

**Height:** 21.7 cm  
**Packaging type:** Carton  
**Type of shelf placement:** Hanging  
**Width:** 18.8 cm  
**Depth:** 4.6 cm  
**Number of products included:** 1  
**EAN:** 48 95229 15895 5  
**Gross weight:** 0.245 kg  
**Nett weight:** 0.135 kg  
**Tare weight:** 0.110 kg

### Product dimensions

**Height:** 18.00 cm  
**Width:** 16.00 cm  
**Depth:** 4.00 cm  
**Weight:** 0.135 kg

### Accessories

**Quick Start Guide**  
**Included adapters:** USB-C jack adapter

### Design

**Color:** Magenta Purple  
**Wearing style:** Headband  
**Foldable design:** Flat/In-wards  
**Ear coupling material:** Synthetic leather  
**Ear fitting:** On-ear  
**Earcup type:** Closed-back

### Telecommunication

**Microphone for call:** 1 mic

### UPC

**UPC:** 8 40063 20593 2

© 2025 Koninklijke Philips N.V.  
All Rights reserved.

Issue date 2025-02-13  
Version: 3.3.1

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

EAN: 48 95229 15895 5

[www.philips.com](http://www.philips.com)



\* \*Volume limited to 85 dB in accordance with EN 50332 standards for safe listening.