

PHILIPS




LED Display

Signage Solutions

44"

Direct View LED

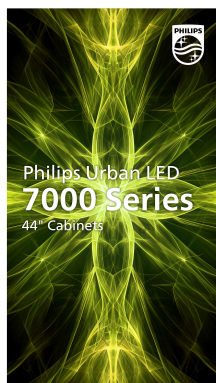

44HUL7029DP

Philips Urban LED 7000 Series

Versatile brilliance. Outdoor mastery

Offering a series of fine pixel pitches, the range ensures high brightness for advertising displays at bus stations, arenas, airports, and more. Housed in a die cast aluminum cabinet, with front and rear access for simplified maintenance.

Efficient and versatile solution

- Fine pixel pitch outdoor fixed installations
- Range of cabinet sizes to suit space requirements
- Narrow pixel pitch options (mm) : 2.9, 3.9, or 4.8
- High brightness for optimal visibility
- Die cast aluminum cabinet
- Front and rear access for easier servicing and maintenance
- IP66 rated - resilient against environmental factors

Highlights

Fine pixel pitch outdoor fixed installations

Adapted shader mask design for outdoor NPP solutions and the underlying technologies bring Philips Urban LED 7000 series unparalleled high contrast ratio and high refresh rate, delivering smooth broadcasting with more colour subtlety, shading, and saturation.

Range of cabinet sizes

The Philips Urban LED 7000 Series is designed to enable different cabinet sizes and pixel pitches to be mixed to create your perfect dimensions and enable many options for splicing.

High brightness

Make the ultimate impact with crisp, clear and vibrant content in bright locations. The high brightness Philips Urban LED 7000 Series ensures optimal viewing performance even in direct sunlight.

Front and rear access

All modules and components can be maintained from the front and rear. Modules can be unlocked from front or rear. The internal electronics are also easy to access for servicing or maintenance. Each of the LED modules in a cabinet can be unlocked using a T-hex tool, enabling removal of the module from the front or via the rear.

IP66 rated

Dustproof, waterproof, and salt spray resistant, IP66 tested and confirmed to meet ingress protection level 6.

Specifications

Picture/Display

Brightness after calibration: 3500
 Brightness before calibration: 4000
 Calibration(brightness/color): Color and Brightness
 Color temperature adjust range: 3000~10000
 Color temperature default: 8000
 Contrast ratio: 5000:1
 Bit-depth(bit): 14
 Frame frequency (Hz): 50 & 60
 Refresh rate(Hz): 3840 Hz (with CE report and cert.)
 Viewing angle (°) H/V: 160/90

Power

Input voltage: AC100~240V (50 & 60Hz)
 BTU/M2 (BC): 1977.80
 BTU/M2 (AC): 1636.80
 Cabinet Typical Power consumption (W) (AC): 96
 Power consumption/M2 (W)(BC): 580
 Power consumption/M2 (W)(AC): 480

Operating conditions

Temperature range (operation): -30~50 °C
 Temperature range (storage): -40~60 °C
 Humidity range (operation)[RH]: 10%-90%
 Humidity range (storage) [RH]: 10%-90%
 Working environment (indoor/outdoor): outdoor
 IP Rating (front/rear): IP66/65

Cabinet

Cabinet area (m2): 0.5
 Cabinet pixels (Dot): 56448
 Cabinet resolution (W x H): 168x336 pixels
 Data connector: Seetronic
 Power connector: Seetronic
 Weight (KG): 16.5±0.5kg
 Cabinet diagonal (inch): 44"
 Cabinet construction: Profile Aluminum
 Cabinet Size (WxHxD in mm): 500x1000x80.4
 Control System: Novastar

Module

LED type: SMD
 Pixel constitution: 1R1G1B
 Module resolution (WxH pixels): 84x84
 Pixel pitch (mm): 2.9
 Module size (WxH in mm): 250x250
 Weight(KG): 1±0.1kg
 LED size: SMD1515
 LED Lifetime (Hrs, half brightness): 100,000

Miscellaneous

Warranty: 24 months
 Regulatory approvals: CB, CE, ETL, FCC
 Certification: TUV, ITS

