

# PHILIPS

Home Projector

NeoPix 200

Vivid Display

Multiple connections

Built-in speakers

Remarkably compact

NPX200



## Easy to connect, Ultra accessible

Enhance your viewing with the NeoPix 200, dynamic sound, and versatile media player. Connect devices effortlessly via HDMI, or 3.5mm jack and power your smart dongles with the dedicated USB output.

### Amazing Images

- Advanced LED Light Source
- Personalize your projection
- Full HD 1080p

### Easy Connection

- Compact and Transportable
- Built-in media player
- Fully connectable options

# Highlights

## Compact and Transportable




Big entertainment doesn't need a big package. The NeoPix 200, with its lightweight design (1.35kg), promises a massive visual treat wherever you venture.

## Advanced LED Light Source



The high-quality LED light system delivers rich, vivid colors that last up to 30,000 hours. With an average use of 4 hours per day, this projector will last for up to 20 years! In addition, its energy consumption is much lower than that of a regular lamp projector, allowing you to enjoy a bigger screen and a fully immersive cinema experience, all from an environment friendly device.

## Built-in media player

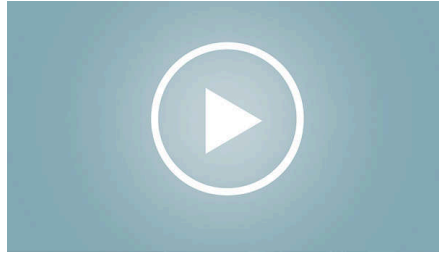

Your multimedia essentials, now at your fingertips. Watch videos, groove to your favorite tunes, or relive your holiday memories — all accessible from your USB sticks, hard drives, or even MicroSD cards.


## Fully connectable options



Connect all your favorite devices via HDMI (like smartphone, tablet, laptop, gaming console), and play all your videos, pictures, and audio files from a USB thanks to the built-in multimedia player. Access to unlimited content by connecting to any smart gaming consoles or TV boxes like Fire Stick or Apple TV (dongles can be


connected to the HDMI and USB port for power). There is also a 2x HDMI, USB, AV in, and Jack 3.5 to connect external speakers.

## Personalize your projection

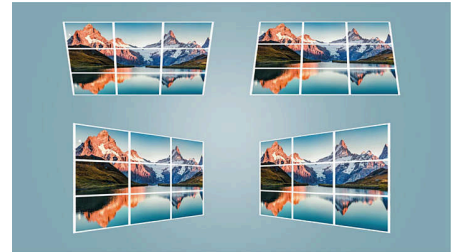

Optimize your placement options with image options! The keystone correction and focus technology enable you to customize images according to your preferences and position your projector at your desired distance.

## Full HD 1080p

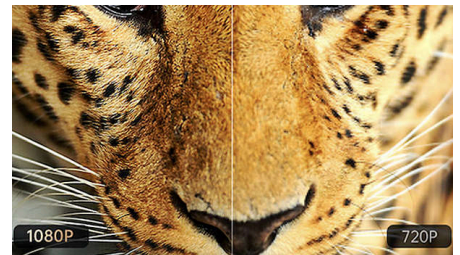

Experience movies, TV shows, or gaming session on a nice 80" screen. The NeoPix 200's short-throw engine produces a massive picture from 2 meters away and produce a bright and colorful image in native Full HD 1080p in a dark room.

## Specifications

### Technology

**Display technology:** LCD  
**Light source:** LED  
**Brightness:** up to 200 lumens\*  
**Contrast ratio:** 3000:1  
**Resolution:** 1920 x 1080 pixel  
**Throw ratio:** 1,35:1  
**Aspect ratio:** 16:9  
**Focus adjustment:** Manual  
**Integrated media player**

**Keystone correction:** Manual  
**LED lifetime:** Up to 30.000h  
**Projection image size:** up to 80" (200cm)  
**Projection distance:** 80 cm - 200 cm / 24"- 60"  
**Recommended usage:** 80" in dark room

### Connection

**HDMI:** x2  
**USB:** x1  
**Micro SD:** x1  
**Audio out:** 3.5 mm jack

### Dimensions

**Weight:** 1.35 kg  
**unpacked (WxDxH):** 231.5x182x99.7

