



PHILIPS

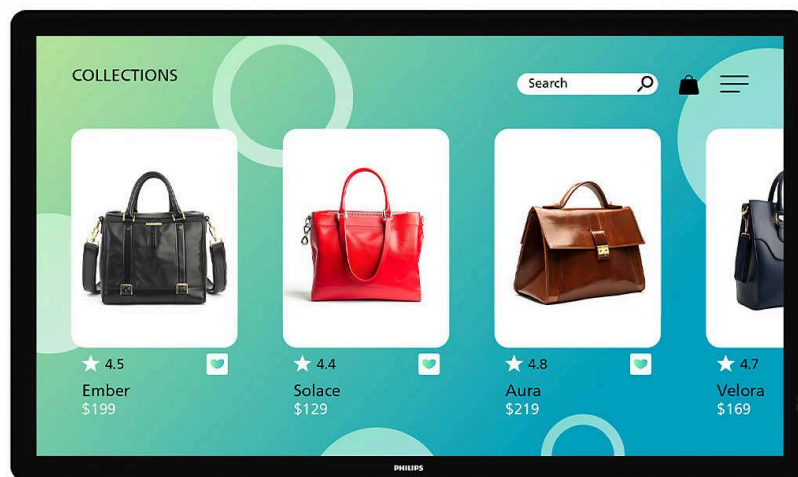

Philips Interactive
3000 Series

Signage Solutions

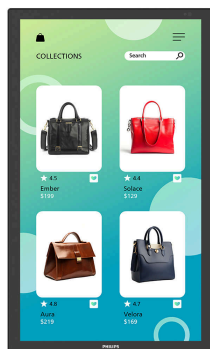

32BDL3751T

Better connected – versatile multi-touch display

Delivering 24/7 operation with 350 nits of brightness, this versatile PCAP display is also designed to reduce energy consumption across the range. Engage. Inspire. Connect. With Android 13, Wave ready and no need for an external media player.

Wave ready

- Remote monitoring, maintenance and management.

Wi-Fi and Bluetooth built in

- Better connecting customers with content.

Lower power consumption

- Supporting business sustainability and energy savings.

24/7 operation

- Better visibility even in bright daylight

Three-year warranty as standard

- Activated out of the box for hassle-free peace of mind.

Highlights

Edge to edge PCAP touch screen

A flush design with no bezel bringing an edge to edge experience augmented with anti-glare glass. Easy to clean, these interactive touch screens also feature anti-fingerprint coating.

Flexible mounting

Install in portrait or landscape orientations, with the option to tilt to 30° and size variants to suit a range of installation purposes. Whether on a shelf – ideal for the 24", angled or upright for Point of Sale, configurators, order points and kiosks – with the 32" and 43", or for wayfinding – think 55".

24/7 operation

With 350 cd/m2 brightness for better visibility under bright lights, the Philips Interactive 3000 Series is designed to be used 24/7, making it a

great selection for travel and transportation hubs, retail centres, food and beverage locations, and more. FailOver is also included enabling your display to switch automatically between primary and secondary inputs should an outage occur.

Plug and play with Android 13

The ultimate in intuitive user experience, with a professional Android 13 SoC built in for easy apps and solutions integrations, and no need for an external media player. Connections include Wi-Fi and Bluetooth, as well as a USB-C port.

Wave ready

Manage your display and control content remotely with PPDS Wave Controller – your evolutionary ecosystem designed to support time, energy and cost efficiencies. Discover

software applications to support your interactive vision from our network of proven partners on the PPDS ProStore.

Lower power consumption

Reduced power consumption compared to previous models, supporting business sustainability and energy savings.

Wi-Fi and Bluetooth built in

Allows seamless connectivity, enabling easily access and engagement with content.

Three-year warranty as standard

Reliable, worry-free protection for your displays, with a three-year warranty automatically in place from the start, eliminating any setup effort.

Specifications

Picture/Display

Diagonal screen size (metric): 80 cm
Diagonal screen size (inch): 31.5" inch
Aspect ratio: 16:9
Panel resolution: 1920 x 1080p
Pixel pitch: 0.364 mm
Optimum resolution: 1920 x 1080 @ 60 Hz
Display colours: 16.7 M
Brightness (after glass): 350 cd/m²
Brightness (before glass): 400 cd/m²
Contrast ratio (typical): 1200:1
Response time (typical): 8 ms
Viewing angle (horizontal): 178 degree
Viewing angle (vertical): 178 degree
Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Dynamic contrast enhancement, Motion compens. deinterlacing, Progressive scan
Panel technology: IPS
Operating system: Android 13
OS UI resolution: FHD
Surface treatments: Anti-Glare coating, Anti-Fingerprint coating

Connectivity

Audio output: 3.5 mm jack
Video input: HDMI 2.0 (x 2), Display Port 1.3 (x 1), USB-C (with 15 W power delivery)
Other connections: Micro USB (x 1) (OTG), USB 3.0 A (x 2), USB 3.0 B (x 1), Wi-Fi: 2 T/2 R 2.4/5/6 GHz, Bluetooth 5.2
External control: Gigabit LAN RJ45, IR (in/out) 3.5 mm jack, RS232 (in/out) 2.5 mm jack

Convenience

Placement: Landscape (24/7), Portrait (24/7), Tilted installation up to 30° backwards
Screen-saving functions: Pixel Shift, Low Brightness
Keyboard control: Hidden, Lockable
Remote control signal: Lockable
Signal loop through: IR Loop through, RS232
Network controllable: RS232, RJ45

Sound

Built-in speakers: 2 x 10 W

Power

Mains power: 100 ~ 240 VAC, 50/60 Hz
Consumption (Typical): 35 W
Consumption (Max): 87 W
Standby power consumption: <0.5 W
Energy Label Class: G

Supported Display Resolution

Computer formats: 720 x 400, 70 Hz, 640 x 480, 60, 67, 75 Hz, 800 x 600, 60 Hz, 832 x 624, 75 Hz, 1024 x 768, 60 Hz, 1152 x 870, 75 Hz, 1280 x 720, 60 Hz, 1920 x 1080, 60 Hz, 1680 x 1050, 60 Hz, 3840 x 2160, 30, 60 Hz
Video formats: 480i, 60 Hz, 480p, 60 Hz, 576p, 50 Hz, 576i, 50 Hz, 720p, 50, 60 Hz, 1080i, 50, 60 Hz, 1080p, 50, 60 Hz, 3840 x 2160, 30, 60 Hz

Dimensions

Set Width: 749.1 mm
Set Height: 443.6 mm
Set Depth: 69.5 mm (Wall mount)/73.5 mm (AC connector) mm
Set Width (inch): 29.49" inch
Set Height (inch): 17.46" inch
Wall Mount: 100 mm x 100 mm, 200 mm x 200 mm, M4
Set Depth (inch): 2.74" (Wall mount) / 2.89" (AC connector) inch
Bezel width: 24.4 mm touch black border (T/R/L/B)

Weight

Product with packaging (kg): 10.75 kg
Product with packaging (lb): 23.70 lb
Product without packaging (kg): 8.31 kg
Product without packaging (lb): 18.32 lb

Operating conditions

Altitude: 0 ~ 3000 m
Temperature range (operation): 0 ~ 40 °C
MTBF: 50,000 hour(s)
Temperature range (storage): -20~60 °C
Humidity range (operation)[RH]: 20~80% (without condensation)
Humidity range (storage) [RH]: 5~95% (without condensation)

Multimedia Applications

USB Playback Video: MPEG 1/2 (1080p 60 Hz), MPEG 4 (1080p 60 Hz), H.263 (1080p 60 Hz), H.264 (4K2K 120 Hz), H.265 (4K2K 120 Hz), VP8 (1080p 60 Hz), VP9 (4K2K 120 Hz)
USB Playback Picture: JPEG, PNG, BMP, WEBP
USB Playback Audio: AAC, HEAAC, MPEG 1/2/2.5 Layer 3, MPEG 1/2 Layer 1, MPEG 1/2 Layer 2

Internal Player

CPU: Quad-Core Cortex A55
GPU: Multi-Core Mali-G52
Memory: 4 GB DDR3
Storage: 32 GB eMMC

Accessories

Included Accessories: Philips logo (x 1), Power supply cable (3 m), Quick start guide (x 1), Remote control and AAA batteries, RS232 cable (3 m) (x 1), USB A to B cable (3 m) (x 1)
Optional accessories: Open frame kit (BM03752)
Stand: BM05911 (Optional)

Miscellaneous

On-Screen Display Languages: Arabic, English, French, German, Italian, Japanese, Polish, Spanish, Turkish, Russian, Simplified Chinese, Traditional Chinese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
Warranty: 3 year warranty
Regulatory approvals: CB, CE, FCC, Class A, RoHS, BSMI, CU, ETL, IMDA, PSB, Energy Star 8.0

Interactivity

Multi-touch technology: Projected capacitive
Touchpoints: 10 simultaneous touch points
Plug and play: HID compliant
Protection glass: 2 mm tempered safety glass

