

# PHILIPS

Wet & Dry electric  
shaver

Shaver Series 6000

Nano SkinGlide coating

SteelPrecision blades

Power Adapt sensor

360-D Flexing heads

S6830/95



## Powerful shave, gentle on skin

with SkinIQ Technology

The Philips Series 6000 delivers a powerful shave, cutting now even more hair per stroke\*. Equipped with advanced SkinIQ technology, the shaver senses and adapts to your hair density, for improved skin comfort.

### A powerful shave

- Powerful performance in every pass
- Engineered for precision and cutting efficiency
- Flexible heads follow your facial contours

### SkinIQ technology

- Adjusts to your beard for effortless shaving
- Reduces friction on skin to minimize irritation

### For a convenient shave

- Shave wet, dry and even under the shower
- LED display with icons to use the shaver intuitively
- Up to 60 minutes of cordless shaving when fully charged
- 1-hour charging time and 5-min quick charge
- One-touch open for easy cleaning

### Sustainability

- Shaver comes with Eco passport

## Shaver Series 6000

Wet & Dry electric shaver

S6830/95

# Highlights

### Nano SkinGlide coating



A protective coating lies between the shaver heads and your skin. Made of up to 250.000 micro-tech beads per square centimetre, improves gliding on skin by up to 30%\*\*\*, to minimize irritation.

### SteelPrecision blades



With up to 90.000 cutting actions per minute, the SteelPrecision blades shave close, cutting more hair per stroke\*. The 45 high-performance blades are self-sharpening and made in Europe.

### Power Adapt sensor



The intelligent facial-hair sensor reads hair density 250 times per second. The technology dynamically auto-adapts cutting power for an effortless and gentle shave.

### 360-D Flexing heads




Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and comfortable shave.

### Hair-Guide Precision heads




The new shape of the shaving heads is engineered for precision. The surface is enhanced with hair guiding channels, designed to move hair into an effective cutting position.

### One-touch open

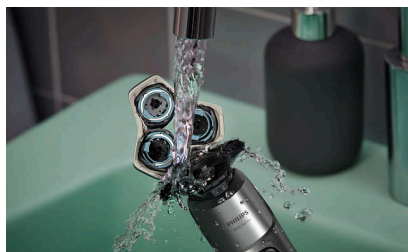


Clean the shaver with ease. At the touch of a button, flip open the shaver head and rinse with water.

### Wet & Dry

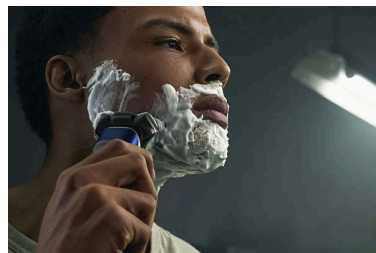

Adapt your shaving routine to your needs. With Wet & Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam even under the shower.

### 60 minutes of cordless shaving

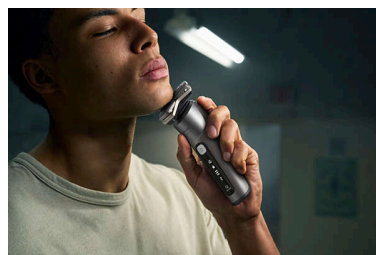

Shave cordlessly for up to 60 minutes after one full battery charge.

### 1-hour charging time



Charge your shaver fully in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

## Shaver Series 6000

Wet & Dry electric shaver

S6830/95

# Highlights

### USB-A charging



At Philips, we drive sustainability in all aspects of product creation. Our ambition is to reduce waste and minimize the number of USB adaptors we put in the market. Should you need an adapter, a suitable supply unit is available via: [www.philips.com/support](http://www.philips.com/support)

### Sustainable shaving innovation



Our production facility for blades uses 100% renewable electricity, and our packaging is made with recyclable materials. All shavers come with an Eco passport.

### LED display



The intuitive display shows relevant information, enabling you to get the best experience out of your shaver. This interface includes: 3-level battery status, cleaning advice and travel lock indicator.

### Replacement shaving heads



Within two years, your shaver heads cut 9 million hairs on your face. Replace the shaver heads and get back to 100% performance

# Shaver Series 6000

Wet & Dry electric shaver

S6830/95

## Specifications

### Accessories

**Maintenance:** Cleaning brush

**Attachments:** Nose trimmer, Precision Trimmer

**Travel and storage:** Travel Pouch

**USB-A cable included:** Power adapter not included

### Power

**Automatic voltage:** 5 V

**Run time:** 60 minutes

**Charging:** 1 hour full charge, 5 min quick charge

**Battery type:** Li-ion

**Stand-by power:** 0.04 W

**Max power consumption:** 9 W

### Design

**Color:** Black Metallic Chrome

**Handle:** Rubber grip

**Shaving heads:** Angular

### Service

**2-year guarantee:** Yes, Plus 3-years with registration

**Replacement head SH71:** Replace every 2 yrs with SH71

### Shaving Performance

**Contour following:** 360-D Flexing heads

**Shaving system:** SteelPrecision blades

**SkinIQ technology:** Power Adapt sensor, Nano SkinGlide Coating

### Ease of use

**Cleaning:** One-touch open, Fully washable

**Charging:** USB-A (Adapter not included)

**Display:** LED display, Battery level indicator, Travel lock

**Wet & Dry:** Wet and dry use

