

# PHILIPS

## Gaming Projector

### GamePix 900

Up to 240Hz refresh rate

6ms low input lag

4K resolution

Up to 120" screen size

GMX900



## Unleash the power of 4K gaming

Elevate your gaming experience with the GamePix 900, the perfect projector for avid gamers seeking an immersive, high-performance home setup. The GamePix 900 delivers outstanding 4K resolution, ensuring crisp and vibrant visuals.

### **Built to deliver performance**


- Gaming presets
- 240Hz refresh rate
- Low input lag

### **Stunning visuals**

- Home cinema
- 4K resolution
- Compact


# Highlights

## Gaming presets

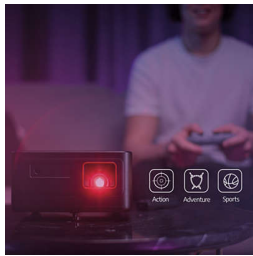


Designed with gamers in mind, the GamePix 900 includes 3 dedicated gaming presets: Action Gaming, Adventure Gaming, and Sports Gaming. These presets optimize the display settings for each gaming genre, ensuring you get the best visuals and performance for your favorite games.

## Home cinema

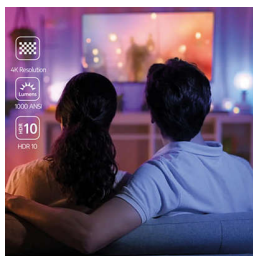


Enjoy a movie night from the comfort of your couch with HDR10 technology that enhances the contrast and brightness levels of videos, resulting in a more dynamic and visually stunning viewing experience.

## 4K resolution

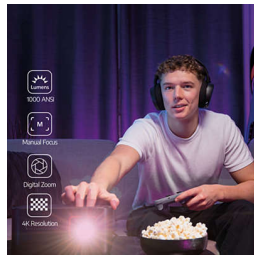


Play games and watch movies in 4K UHD sharpness, full of fine details. The picture remains lifelike when displayed at up to 120" or more. Texas Instrument DLP cinema technology delivers amazing home cinema viewing with vivid pictures, deep contrast and a bright image in any conditions.

## 240Hz refresh rate

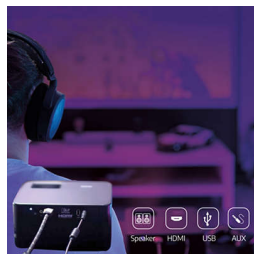


Capable of supporting up to 240Hz refresh rate, the GamePix 900 is built to handle the fastest-paced action, providing smooth and fluid motion for high-intensity games. The HDMI connectivity and the 5 watt speaker with sound chamber will complete the entertainment experience.

## Low input lag

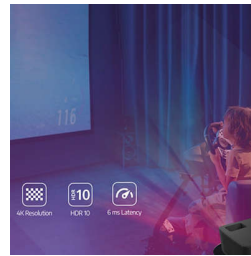

A low input lag is crucial for precise, real-time gameplay, and the GamePix 900 offers an incredibly responsive 6ms latency. Whether you're battling it out in a high-stakes online shooter or racing against opponents, the low latency ensures your moves are always in sync with what you see on screen, making it the ideal choice for all types of games.

## Compact

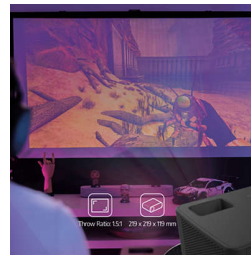

Compact yet powerful, the GamePix 900 is incredibly portable, weighing just 2kg, making it easy to set up in any room for an epic gaming session. Powered by DLP technology by Texas Instruments, it provides stunning image quality with deep contrast, bright colors, and sharp details, transforming your space into the ultimate gaming theater.

# Specifications

## Technology

**Display technology:** DLP  
**Light source:** LED  
**Brightness:** up to 1000 lumens\*  
**Resolution:** 3840 x 2160 pixel  
**Throw ratio:** 1,5:1  
**Aspect ratio:** 16:9  
**Focus adjustment:** Manual  
**Keystone correction**  
**LED lifetime:** Up to 30.000h

**Projection image size:** up to 120" (300cm)  
**Projection distance:** 398cm (13.05 feet) / 120"  
**Resolution supported:** 4K  
**Recommended usage:** 120" max in dark room  
**Color gamut:** 95% Rec.709  
**Refresh rate:** 240Hz@1080p  
**Digital Zoom**  
**Input lag:** 6ms@240Hz / 8ms@120Hz  
**HDR10**

## Connection

**HDMI:** x1  
**USB:** x1  
**Audio out:** 3.5 mm jack  
**DC-IN**

## Dimensions

**Weight:** 2 kg  
**unpacked (WxDxH):** 219x219x119

