

PHILIPS

Kids' on-ear
headphones

2000 series

On-ear wired headphones

Volume limited to 85 dB

Customizable. Audio share

Durable and foldable

TAK2000BL



Super safe, super fun!

Let the kids rock with these colorful wired headphones! They're light, tough, and volume-limited for safe listening. Got friends over? Audio share lets children daisy chain their headphones with a friend's so they can listen together.

On-ear wired headphones. Built for kids.

- Always safe, always fun. Volume limited to 85 dB*
- Kid-friendly comfort and easy to use
- Audio sharing for double the fun
- Colorful design with customizable ear cups

Take them anywhere

- Tough, durable, and foldable
- Compatible with most devices. 3.5 mm to USB-C cable in box

Cool for calls, and great sound too

- Clear calls with friends and family
- Warm, natural sound. Philips sound signature
- Thoughtful design. Responsible packaging

2000 series

Kids' on-ear headphones

TAK2000BL/37


Highlights

Volume limited to 85 dB*



Specially designed to be safe for young ears, these headphones have been volume limited to 85 dB*. Music, cartoons, movies, educational videos: whatever they're into, you can relax knowing they won't be listening too loud.

Kid-friendly comfort

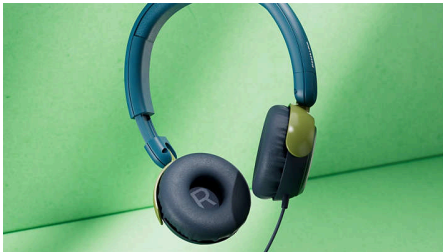

Smaller ear cups with soft ear-cup cushions keep these lightweight headphones comfortable for kids. The cushioned headband also adjusts easily for the perfect fit and features dots on the back that help children see which way around to put the headphones on.

Customizable ear cups



The multi-colored design makes the headphones stand out in all the right ways—and kids can customize their headphones using their own works of art! Simply lift the transparent ear-cup window, add their drawings or paintings, and click the window closed again.

Audio sharing

A built-in audio-sharing port means you can daisy chain these headphones so kids can listen together from the same device. Simply connect a standard 3.5 mm headphone cable to the audio-sharing port on these headphones, then plug the other end of the cable into the headphone socket on the second pair of headphones.

Tough, durable, and foldable

Made from durable, non-toxic materials, these headphones are built to withstand the rigors of daily use by kids. When not in use, they can be folded flat for easy storage in a drawer. Or you

can fold them flat and inwards, creating a compact bundle that easily fits into pockets and bags.

3.5 mm to USB-C cable

These wired headphones connect to devices via USB-C, which makes them compatible with most laptops, phones, and tablets. The detachable USB-C headphone jack adapter with attached 3.5mm cable is included in the box.

Clear calls

A built-in microphone lets kids take calls with family and friends. A dedicated mic picks up the sound of their voice, while a noise-reduction algorithm quietens some of the background noise from the world around them.

Philips sound signature

Movies to music, they'll love what they hear! These on-ear kids' headphones feature large 32 mm drivers, tuned to the Philips sound signature. Whatever they're into, they'll enjoy a warm, natural sound with deep bass.

Responsible design

These headphones feature recycled materials, while our plastic-free packaging uses FSC-certified recycled cardboard and soy-based ink. To avoid shipping unwanted cables, the 3.5 mm standard audio cable required to daisy chain headphones is not included in the box.

2000 series

Kids' on-ear headphones

TAK2000BL/37

Specifications

Sound

Acoustic system: Closed
Frequency range: 20 - 20,000 Hz
Speaker diameter: 32 mm
Impedance: 32 Ohm
Maximum power input: 20 mW
Sensitivity: 112 dB (1K Hz, 179 mV)
Driver type: Dynamic

Connectivity

Cable length: 1.2 m
3.5mm headphone jack

Outer Carton

Length: 20.30 cm
Number of consumer packagings: 3
Width: 15.00 cm
Gross weight: 0.910 kg
Height: 21.70 cm

GTIN: 1 08 40063 20501 4

Nett weight: 0.41 kg
Tare weight: 0.50 kg

Packaging dimensions

Height: 21.7 cm
Packaging type: Carton
Type of shelf placement: Hanging
Width: 18.8 cm
Depth: 4.6 cm
Number of products included: 1
Gross weight: 0.245 kg
Nett weight: 0.135 kg
Tare weight: 0.110 kg

Product dimensions

Height: 18.00 cm
Width: 16.00 cm
Depth: 0.135 cm
Weight: 4.00 kg

Accessories

Included adapters: USB-C jack adapter

Design

Color: Blue
Wearing style: Headband
Foldable design: Flat/In-wards
Ear coupling material: Synthetic leather
Ear fitting: On-ear
Earcup type: Closed-back

Telecommunication

Microphone for call: 1 mic

UPC

UPC: 8 40063 20501 7

