

PHILIPS

Series 9000

All-in-One Trimmer

The ultimate grooming kit

20-in-1: face, head and body

Precision trimming comb

Unique OneBlade technology



MG9553/15

Stainless steel precision

Precise trim, sharp edges and convenient shave

Craft your personal look with this ultimate grooming set for face, head and body. This combination of our most advanced stainless steel trimmer and OneBlade offers ultimate precision trimming and styling to achieve the style you want.

Ultimate precision: even trim and sharp edges

- Even trim in one pass
- A trimmer that adjusts to your beard
- OneBlade for clean lines and sharp edges
- Long-lasting performance for precise results

Versatile styling for face, head and body

- Ultimate styling for face, head and body
- Ultimate precision grooming set
- Say goodbye to body hair
- Trim eyebrows easily and comfortably
- 30% faster hair trimming**

Quality & Ease of use

- Trimmer runs for 4 weeks on a single charge*
- Water-resistant for convenient use and easy cleaning
- Always know when it's time to charge


All-in-One Trimmer

Series 9000

MG9553/15

Highlights

Precision trimming comb

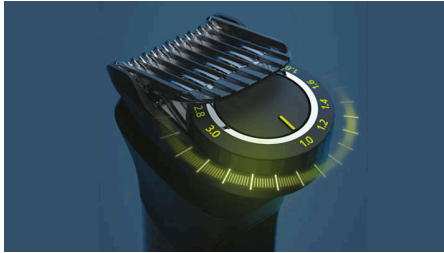


The patented trimming comb offers 11 length settings between 1–3 mm, so you can achieve an even trim at the exact length you want.

Unique OneBlade technology



Fast-moving cutter (6000 x per minute) powers through even the longest hair, with glide coating and rounded tips to protect your skin, so you can comfortably style and shave your beard. Clean up your cheeks, chin and neck to shape your beard precisely.

Self-sharpening steel blades

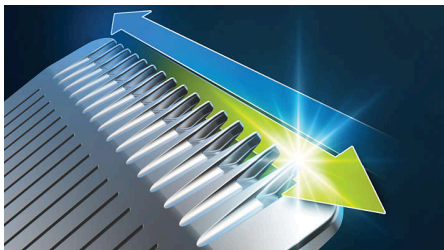

The trimmer's stainless steel blades remain as sharp as on day one for long-lasting performance. No oil required.

BeardSense technology



The trimmer scans the beard density 125 x per second and boosts power exactly when you need it to tackle dense, bushy or longer beards.

20-in-1 grooming set



This complete grooming set is composed in a way that perfectly complements your grooming routine: The durable trimmer is crafted to deliver a precise and powerful trim for facial, head and body hair, while OneBlade and its unique technology is ideal to style and shave any length of facial hair.

Precision beard styling (IVP w. detailer)



This grooming set with its multi-comb set offers 27 length settings from 0.2 to 20 mm in up to 0.2 mm precision steps for an even trim on shorter and longer beard styles. The narrow design of the precision trimmer attachment makes it ideal to style the small details around the mouth. For the perfect beard, edge your style

precisely with OneBlade. The dual-sided blade shaves in either direction and protects your skin while shaving your cheeks, chin or neck.

Comfortable body grooming



Shave comfortably below the neck with our body shaver attachment. A unique skin-protection system guards sensitive areas while you shave as close as 0.5 mm. You can also trim body hair with the two click-on combs.

Fast hair clipping



Hair clipping is 30% faster** thanks to an extra-wide 41 mm stainless steel hair clipper that cuts more with every stroke. Create your hairstyle with length settings with the 4, 9, 12 and 16 mm extra-wide hair combs.

Eyebrow trimming



Easily keep your eyebrows neat and tidy with the dedicated eyebrow comb.

All-in-One Trimmer

Series 9000

MG9553/15

Highlights

Up to 120 minutes of runtime (IVP)



The trimmer's powerful lithium-ion battery provides up to 120 minutes of runtime with a 5 minutes quick-charge option for long life and maximum power. OneBlade runs for up to 30 minutes, so you have sufficient time to style and shave your beard.

100% showerproof (OneBlade incl.)




The grooming set is water resistant, so you can use it comfortably in the shower and clean it easily under the tap.

Battery indicator (incl. OneBlade)



The trimmer's battery indicator lets you know your battery status: low, empty, charging or full, so you never get caught with an empty battery in the middle of your trim.

Premium ergonomic design

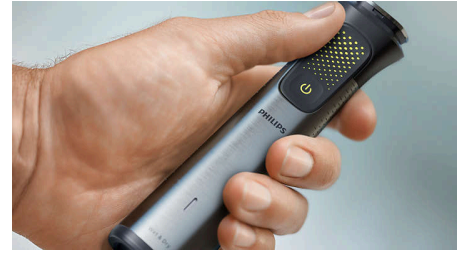

The premium stainless steel trimmer and OneBlade are easy to hold and manoeuvre with an ergonomic rubber grip for superior comfort and control.

Specifications

Power

Run time: Up to 120 minutes (trimmer), Up to 30 minutes (OneBlade)

Battery type: Lithium-Ion (trimmer), NiMH (OneBlade)

Charging: 60 minutes (trimmer), 8 hours (OneBlade), 5-minutes quick charge (trimmer)

Maximum power consumption: 5 W

Input voltage: 5 V

Charging method: USB-A (no adapter included)

Design

Handle: Ergonomic rubber grip

Service

2 year warranty

Ease of use

Display: Battery low indicator (trimmer), Battery full indicator (trimmer), Battery charging indicator (trimmer & OneBlade)

Wet & Dry: 100% shower proof

Maintenance-free: No blade oil required

Charging: USB-A Charging (5 V[~] / ≥1 A)

Operation: Cordless use only

Versatile styling

Styling tools: Steel trimmer, Steel precision trimmer, Body shaver with skin protector, OneBlade handle, OneBlade blade, Extra-wide hair trimmer, Precision trimming comb, 3–7 mm adjustable comb, 9–13 mm adjustable comb, 16–20 mm adjustable comb, 2 body combs, Eyebrow

comb, 2 wide fading hair combs, 4 wide hair combs

Accessories: Large soft pouch with zipper, Cleaning brush, USB-A (adapter not included), OneBlade blade protection cap

of attachments: 20

Precise trim

Cutting performance: Self-sharpening steel blades, BeardSense technology, OneBlade technology

Precision trimming: Precision trimming comb

Length settings: 27 (0.2–20 mm)

Precision steps: Up to 0.2 mm

