

PHILIPS

32:9 SuperWide curved
monitor with USB-C

Curved Business Monitor

6000 series

45 (44.5" / 113 cm diag.)

5120 x 1440 (Dual QHD)

49B2U6900CH



Redefining workflow productivity with pop-up webcam

This monitor is designed with everything you need for a collaborative remote workspace. Its webcam fashions new features like auto-framing, a busy light, and an adjustable webcam for an unmatched video conferencing experience.

Superb Picture Quality

- DisplayHDR 400 for more lifelike and outstanding visuals

Single cable USB-C connection

- RJ-45 to USB-C gives easy network connection with security

Designed for the way you work

- Eyesafe certified blue light protection and color accuracy
- 32:9 SuperWide screen designed to replace multiscreen setups
- Collaboration-ready webcam with noise-cancelling mic.
- Busylight: for setting your working status
- Earphone Hook: for customizable storage
- SmartKVM: for easily switching between sources.
- AI-enhanced Webcam Autoframing: for dynamic video calls.
- Adjustable Webcam: for video conferencing in comfort.
- SoftBlue Technology: for comfortable viewing

Curved Business Monitor

32:9 SuperWide curved monitor with USB-C

49B2U6900CH/75

Highlights

DisplayHDR 400



VESA-certified DisplayHDR 400 delivers a significant step-up from normal SDR displays. Unlike other 'HDR compatible' screens, true DisplayHDR 400 produces astonishing brightness, contrast and colors. With global dimming and minimum 400 nits brightness, images come to life with notable highlights while featuring deeper, more nuanced blacks. It renders a fuller palette of rich new colors, delivering a visual experience that engages your senses.

AI-enhanced Webcam Autoframing




This AI-enhanced feature is perfect for multi-person video conferencing. When one or more people join the webcam view, the AI-powered feature will automatically adjust and zoom to fit all team members in the frame. Likewise, when participants leave the webcam view, the AI-enhanced webcam will adjust accordingly; thereby making it ideal for long meetings as well as team calls.

Adjustable Webcam




Level up the comfort of video conferencing with this feature. By adjusting the webcam back and forth by 30 degrees, users can now comfortably call and attend meetings from any position that best suits them.

Busylight

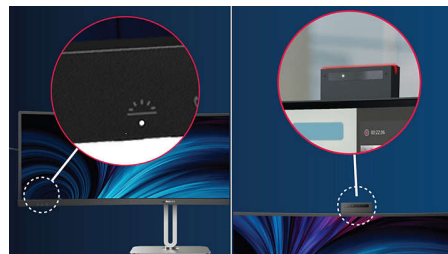

This feature allows for privacy and optimal collaboration when working in a busy office setting. To transmit to others that they are busy, users can simply press the Busylight hotkey located on the bottom left menu of the monitor bezel and the light located on the webcam will turn red. In addition to this, the Busylight feature can also sync with user's Microsoft Teams status.


32:9 SuperWide

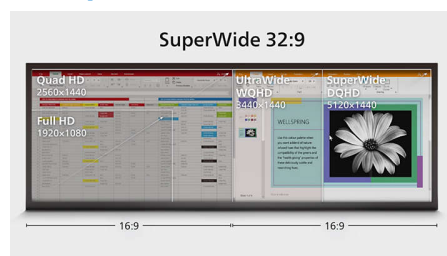

32:9 SuperWide 49" screen, with 5120 x 1440 resolution, is designed to replace multiscreen setups for massive wide view. It's like having two

27" 16:9 Quad HD displays side-by-side. SuperWide monitors offer screen area of dual monitors without the complicated setup.

SoftBlue Technology

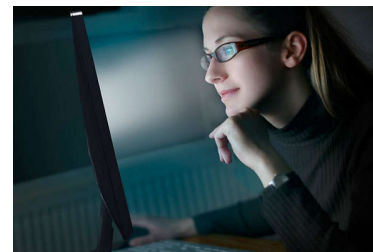

SoftBlue LED technology, combined with the monitor's low blue light panel, is an effective solution to reducing the adverse health effects caused by high exposure to blue light. In this monitor's panel, the ratio of light is reduced by nearly 50 percent while the SoftBlue LED technology works simultaneously by reducing harmful blue light rays emitted from the screen. Not to mention, the SoftBlue LED technology is tested and certified by TUV Rheinland Eyesafe® for its effectiveness in reducing blue light emissions.

Earphone Hook



Earphone storage is unmatched with this feature. Carefully pull down the hook located on the side of the monitor: This feature makes for a tidy desktop and provides a handy cable management solution for your workspace.

Curved Business Monitor

32:9 SuperWide curved monitor with USB-C

49B2U6900CH/75

Highlights

TUV Rheinland Eyesafe



Philips display meets TUV Rheinland Eyesafe® standard to truly protect you from the long exposure to blue light. The always-on blue light filter not only helps reduce digital eye strain, but also guarantees color integrity.

Webcam & noise cancelling mic



This Philips monitor comes with a built-in 5MP webcam, noise-cancelling microphone, and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5-watt integrated speakers ensure clear communication.

USB-C Docking with RJ45



Simplify all peripherals from monitor to PC using one-cable-docking USB Type-C connector, includes networking, high resolution video output from PC to monitor, and surfing on Internet without an additional network cable, even without LAN port on your notebook. RJ45 connection through USB-C offers a fast and secure connection when needed. Getting the fastest data speeds allows you to transfer data from a HDD to your PC faster than ever. Additionally, USB-C with power delivery can even enable you to power and charge your notebook from the monitor, eliminating the need for extra power cables.

Specifications

Picture/Display

Panel Size: 48.8 inch / 124 cm
 Aspect ratio: 32:9
 LCD panel type: VA LCD
 Backlight type: W-LED system
 Pixel pitch: 0.2328 x 0.2328 mm
 Brightness: 450 cd/m²
 Display colors: 1.07 B (8 bit + FRC)
 Color gamut (typical): NTSC 97%*, sRGB 119%*
 Contrast ratio (typical): 3000:1
 SmartContrast: 80,000,000:1
 Response time (typical): 4 ms (Gray to Gray)*
 Viewing angle: 178° (H) / 178° (V), @ C/R > 10
 Picture enhancement: SmartImage
 Maximum resolution: 5120 x 1440 @ 75 Hz
 Effective viewing area:
 1191.936(H)x335.232(V)mm
 Scanning Frequency: HDMI: 30 - 140 kHz (H) / 48-75 Hz (V); DP: 30 - 114 kHz (H) / 48-75 Hz (V); USB-C: 30 - 75 Hz
 sRGB
 Delta E: < 2
 Flicker-free
 Pixel Density: 109 PPI
 LowBlue Mode
 Display Screen Coating: Anti-Glare, 3H, Haze 25%
 SmartUniformity: 93 ~ 105%
 Adaptive sync
 HDR: DisplayHDR 400 certified

Connectivity

Signal Input: HDMI 2.0 x 2, DisplayPort 1.4 x 1, USB-C x 2 (upstream, DP Alt mode, Data, PD up to 100W)
 Sync Input: Separate Sync
 Audio (In/Out): Audio out / Microphone in combo jack
 RJ45: Ethernet LAN up to 2.5G*, Wake on LAN
 HDCP: HDCP 1.4 (HDMI / DisplayPort / USB-C), HDCP 2.2 (HDMI / DisplayPort / USB-C)
 HBR3: HBR3 (USB-C / DisplayPort)
 USB Hub: USB3.2, Gen2, 10G, upstream: USB-C1x1, USB-C2 x1, downstream: USB-A x4 (with x1 fast charge B.C 1.2), USB-C3x1 (15W)

Power Delivery

Max power delivery: USBC1, USBC2: 140W (5V/3A, 7V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/4.8A, 28V/5A), USBC3: Power supply up to

15W(5V/3A), USB-A: x1 fast charge B.C 1.2, up to 7.5W (5V/1.5A)
 Version: USB PD version 3.1

Convenience

Built-in Speakers: 5 W x 2
 Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10
 User convenience: Mic, SmartImage, Input, User, Menu, Power On/Off
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
 Other convenience: Kensington lock, Earphone hook, VESA mount (100x100mm)
 Control software: SmartControl
 MultiView: PIP/PBP mode, 2x devices
 Built-in webcam: 5.0 megapixel camera with microphone and LED indicator
 Webcam with auto framing: Yes*
 Webcam tilt function: Yes, +/-30 degree
 Busylight
 KVM: Yes (USB-C1/USB-C2)
 Noise cancellation

Stand

Height adjustment: 150 mm
 Swivel: +/-30 degree
 Tilt: -5/15 degree

Power

ECO mode: 37.5 W (typ.)
 Power supply: Built-in, 100-240VAC, 50-60Hz
 Off mode: Zero watts with AC switch
 On mode: 48.1 W (typ.) (EnergyStar test method)
 Standby mode: 0.3 W (typ.)
 Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

Packaging in mm (WxHxD): 1290 x 300 x 475 mm
 Product without stand (mm): 1193 x 373 x 164 mm
 Product with stand(max height): 1193 x 583 x 268 mm

Weight

Product with packaging (kg): 22.68 kg
 Product with stand (kg): 15.21 kg
 Product without stand (kg): 11.58 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
 Temperature range (operation): 0°C to 40 °C
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60 °C
 MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: PowerSensor, LightSensor, EnergyStar 8.0, EPEAT*, RoHS, TCO Certified Edge
 Post consumer recycled plastic: 85%+OBP 5%
 Recyclable packaging material: 100 %
 Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, CU-EAC, EAEU RoHS, TUV Ergo, TUV/GS, eyesafe® CERTIFIED 2.0, cETLus, EAC, MEPS, PSE, TCO Certified, TCO Certified Edge, TÜV Rheinland Low Blue Light (Hardware Solution)

Cabinet

Finish: Texture
 Foot: Silver
 Front bezel: Charcoal
 Rear cover: Charcoal

- * Radius of the arc of the display curvature in mm
- * Response time value equal to SmartResponse
- * NTSC Area based on CIE1976
- * sRGB Area based on CIE1931
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * Activities such as screen sharing, on-line streaming video and audio over the Internet can impact your network performance. Your hardware, network bandwidth and its performance will determine overall audio and video quality.
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * The USB-C power delivery of this display is up to 100 W (96 W in typical), the maximum power delivery will depend on your device.
- * When calculating energy costs saving from PowerSensor, both USB and Power delivery are excluded.
- * EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
- * The monitor may look different from feature images.
- * When Webcam Autoframing is on, the pixel quality of the webcam would be 2M. When Webcam Autoframing is off, the pixel quality of the webcam would be 5M.
- * If your Ethernet connection seems slow, please enter OSD menu and select USB 3.0 or higher version which can support the LAN speed to 2.5G.

