

# PHILIPS

## sonicare

Advanced Clean

Sonic electric  
toothbrush

Smart screen

Advanced sonic technology

Pressure sensor

5 brushing modes

HX3792/11



## Smart brushing for a personalised, gentle clean

Enjoy a new level of oral care!

Displays everyday brushing performance with a built-in smart screen. Gentle on gums with the new gum pro mode and pressure sensor for oral health. Clean with the G3 Premium Gum Care brush head for an exceptional brushing experience.

### Optimise your brushing

- Smart screen for an instant brushing performance check
- Optimise your brushing with SmarTimer and QuadPacer
- Easy-Start to ease the transition

### Provides superior clean

- Our technology brings you an effective yet gentle clean

### Protects your gums

- G3 brush head to absorb excessive pressure on your gums
- Pressure sensor helps protect your teeth and gums

### Personalised, gentle clean

- 5 Modes: Clean, Gum Pro, Deep Clean, Sensitive, White


# Sonic electric toothbrush

Advanced Clean

HX3792/11

## Highlights

### Pressure sensor

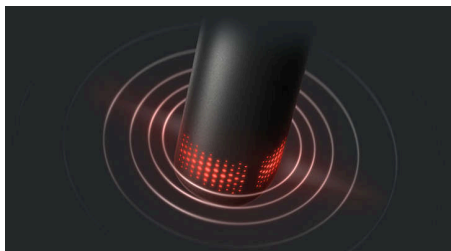

Your Philips Sonicare Advanced Clean is equipped with an advanced sensor that measures the pressure you apply while brushing. If you apply too much pressure, the toothbrush will provide immediate feedback to indicate that you need to adjust the pressure. This feedback is given by an orange light ring at the bottom of the handle.

### Smart screen



The built-in smart screen provides instant feedback on your brushing pressure, duration and battery life, and even notifies you when you need to replace the brush head. One click to master key messages for better brushing habits without installing an app.

### Advanced Sonic Technology



Our unique sonic sweeping motion is carefully calibrated to create gentle microbubbles that reach deep between the teeth. 31,000 brush strokes per minute\*\* gently clean your teeth, break up plaque and sweep it away for an exceptional daily clean.

### SmartTimer and QuadPacer



2 minute SmartTimer and 30 second QuadPacer guide you to brush for the recommended time in all areas of your mouth to ensure a complete clean.


### G3 Premium Gum Care brush head



G3 Premium Gum Care brush head is wrapped with gel. It gently absorbs excessive pressure on your gums and teeth for the best cleaning


experience. The top of the bristles is rounded, and the arc design was chosen to increase the contact surface of the bristles, protect the gums and clean them efficiently.

### 5 brushing modes

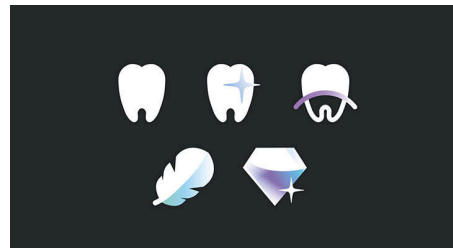

Philips Sonicare Advanced Clean 6800 Series has 5 modes for all of your brushing needs. Clean mode provides an exceptional daily clean. Gum Pro mode with triple frequency conversion provides cleaning and care in one go. Deep mode provides invigorating and thorough cleaning. Sensitive mode gently takes care of delicate gums and cleans teeth. White mode removes stains efficiently.

### Easy-Start

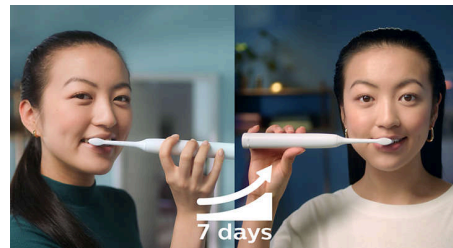

Our Easy-Start programme gives you the option of a gradual, gentle increase in brushing power the first 14 times you use your new toothbrush.

# Sonic electric toothbrush

Advanced Clean

HX3792/11

## Specifications

### Power

Voltage: 5 Vdc

### Technical specifications

Operating time (full to empty): Up to 14 days

Battery: Rechargeable

Battery type: Lithium ION

### Design and finishing

Colour: Black Metallic

### Service

Warranty: 2-year limited warranty

### Ease of use

Brush head system: Easy click-on brush heads

### Items included

Brush heads: 1 G3 Premium Gum Care

Charger: 1 charger

Handle: 1 Philips Sonicare Advanced Clean

### Cleaning performance

Timer: BrushPacer and SmarTimer

Pressure feedback: Ring lights up in orange at the bottom of the handle

### Modes

Clean: For exceptional everyday clean (2 minutes)

Deep Clean: For an invigorating and thorough clean (3 minutes)

White: Removes stains on teeth (2 minutes 30 seconds)

Sensitive: Gentle clean for gums (2 minutes)

Gum Pro: Exceptional clean and gentle massage for gums (3 minutes)

### Smart sensor technology

Pressure sensor: Alerts when brushing too hard

BrushSync Replacement Reminder: Always know when to, replace brush heads

