

PHILIPS


Televisão

Guia Rápido de Instalação

70PUG7019/78
75PUG7019/78
86PUG7019/78





7314700J1U00SFLP11


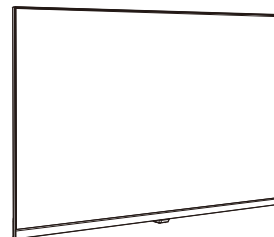


70"/75"/86"










70"/75"
(M5 × 17mm): ×6
86"
(M5 × 25mm): ×8




4 pedaços

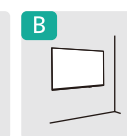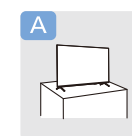



Registre seu produto e obtenha suporte em
www.philips.com/TVsupport

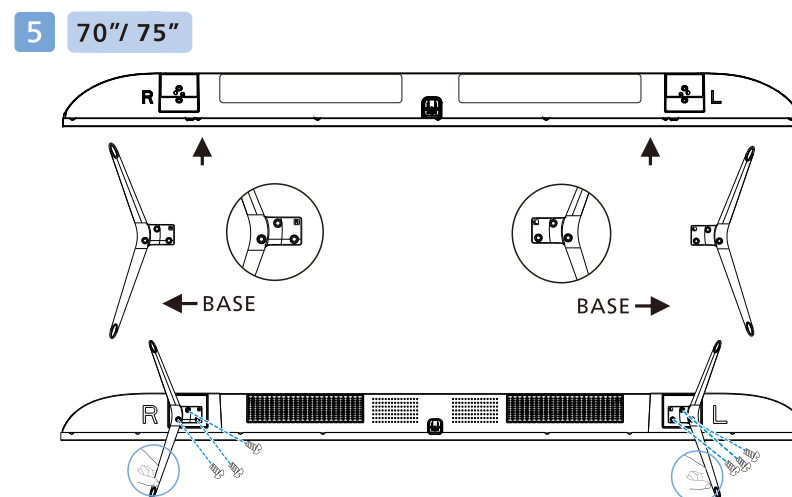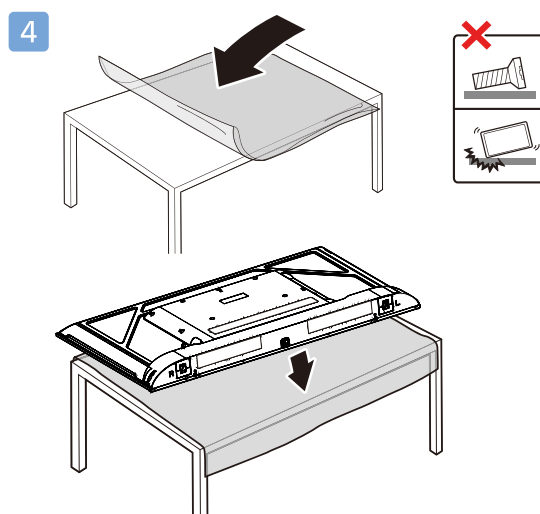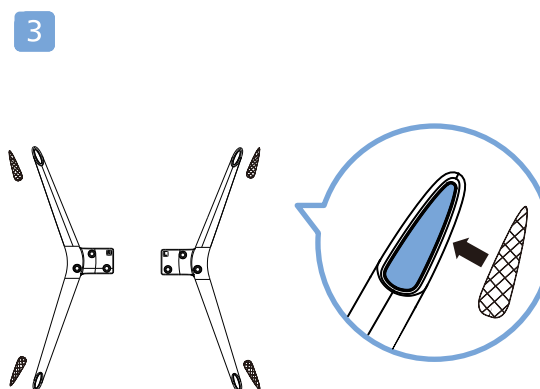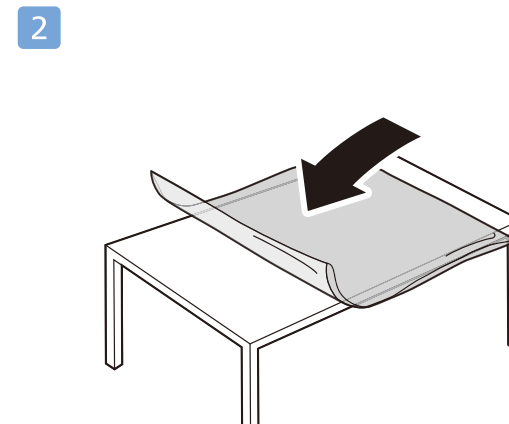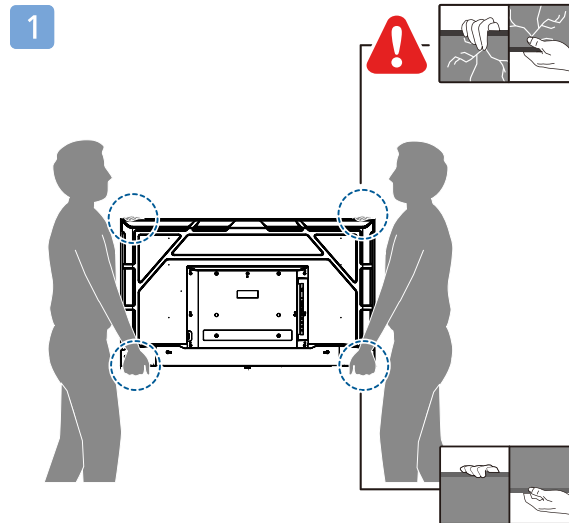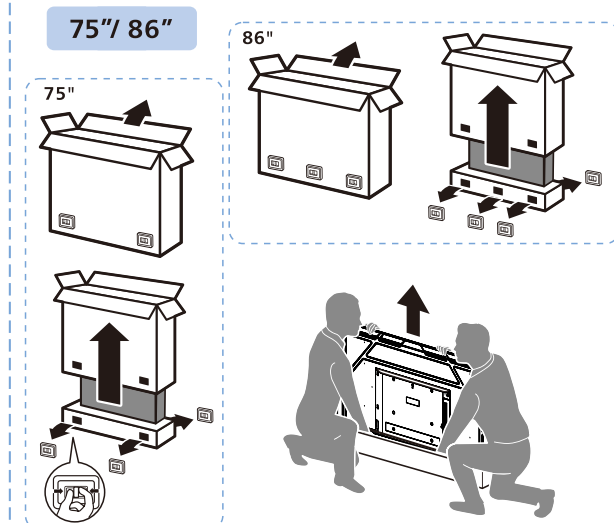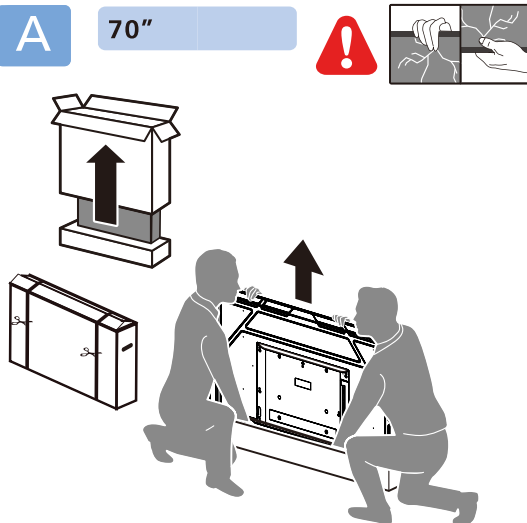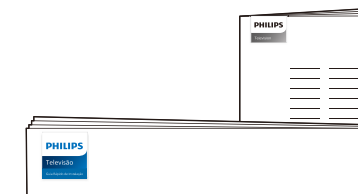

86"

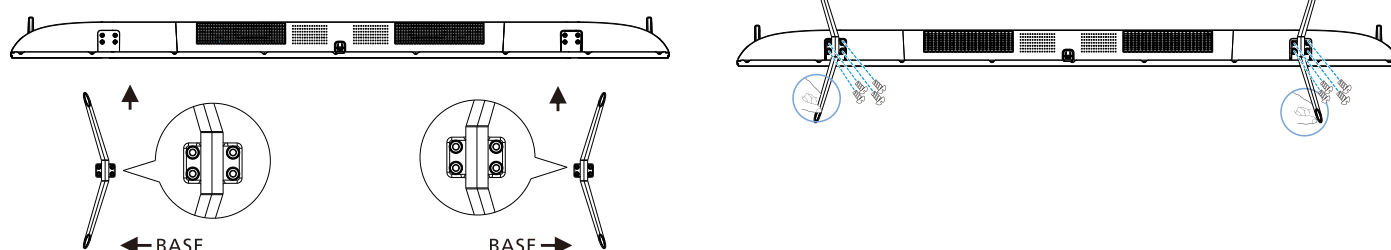

Não apertar os parafusos com força excessiva, caso contrário pode causar danos ao produto.
Não utilize um screwdriver elétrico para evitar colocar o momento alto demais, o que pode causar danos ao produto.

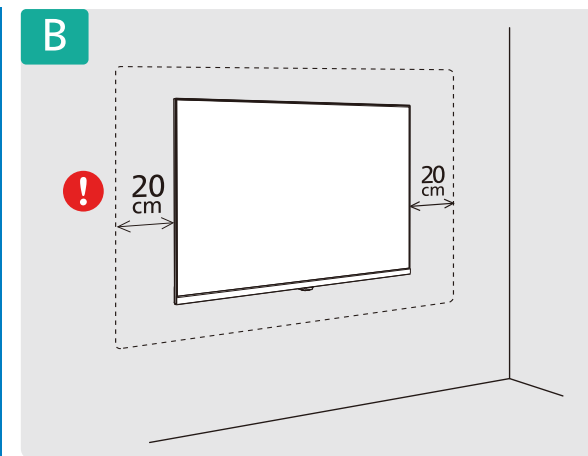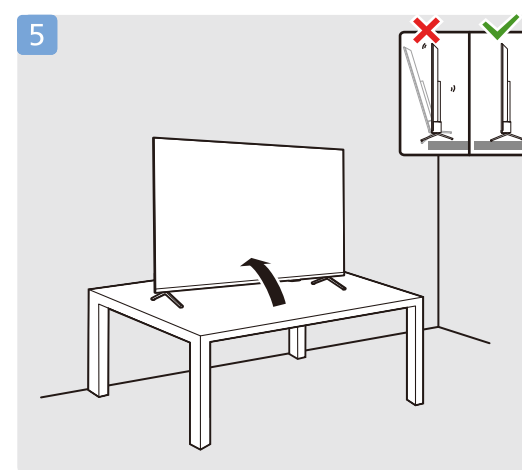


Dimensões para montagem na parede (x, y)

70" 300x300mm 177cm
Para cima: M6 (L:22 mm ~ 32mm)
Para baixo: M6 (L:8mm ~ 11.5mm)






75" 500x300mm 189cm
Para cima: M8 (L:22 mm ~ 29mm)
Para baixo: M8 (L:22 mm ~ 29mm)

86" 500x300mm 217cm
Para cima: M8 (L:22 mm ~ 29mm)
Para baixo: M8 (L:22 mm ~ 29mm)


M: Parafuso métrico

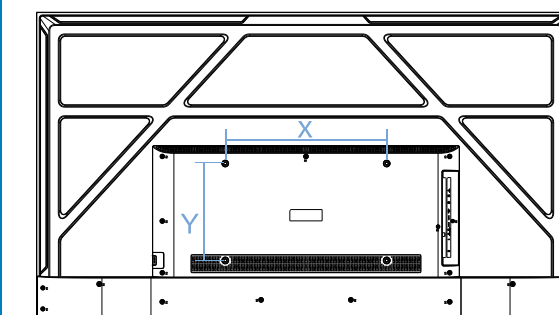

	A	B
70"	1305.1	353
75"	1272.6	353
86"	1475.4	441.4

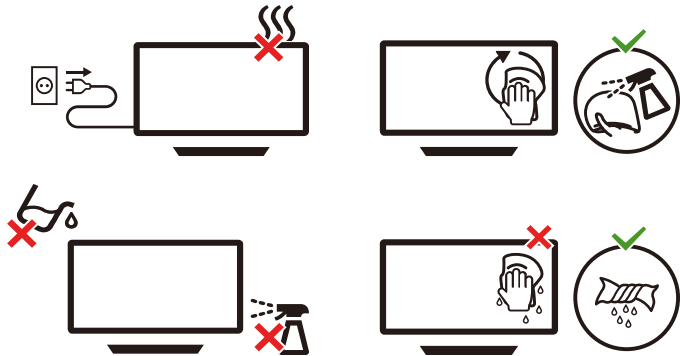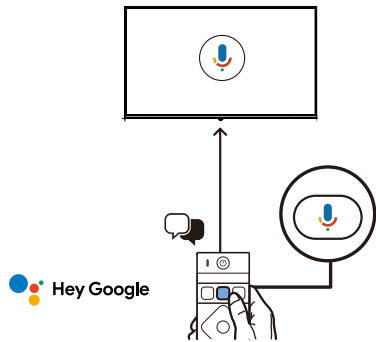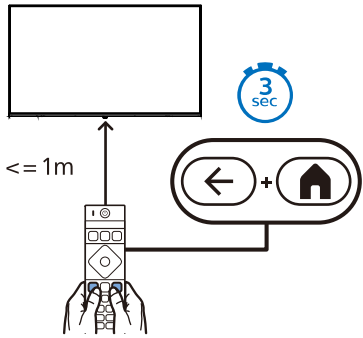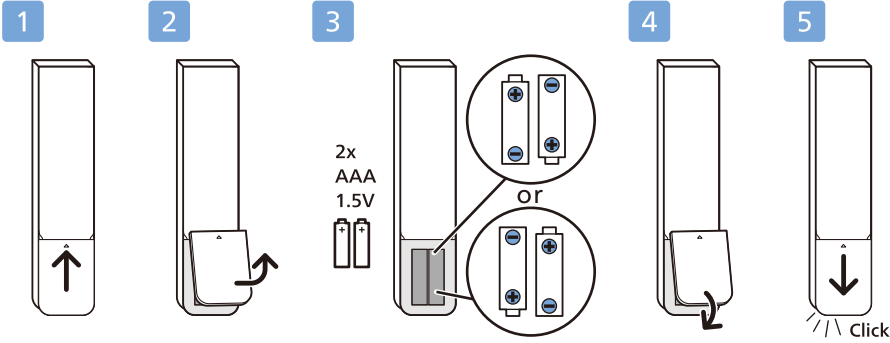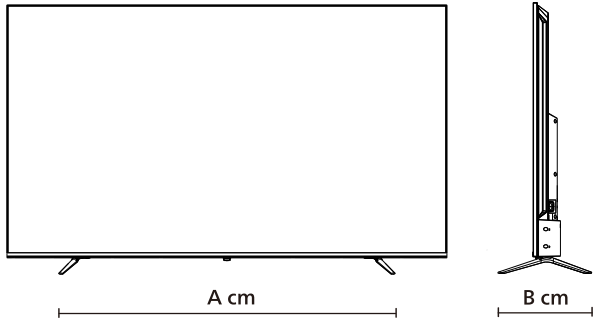

English Read the safety instructions.
Português Leia as instruções de segurança.

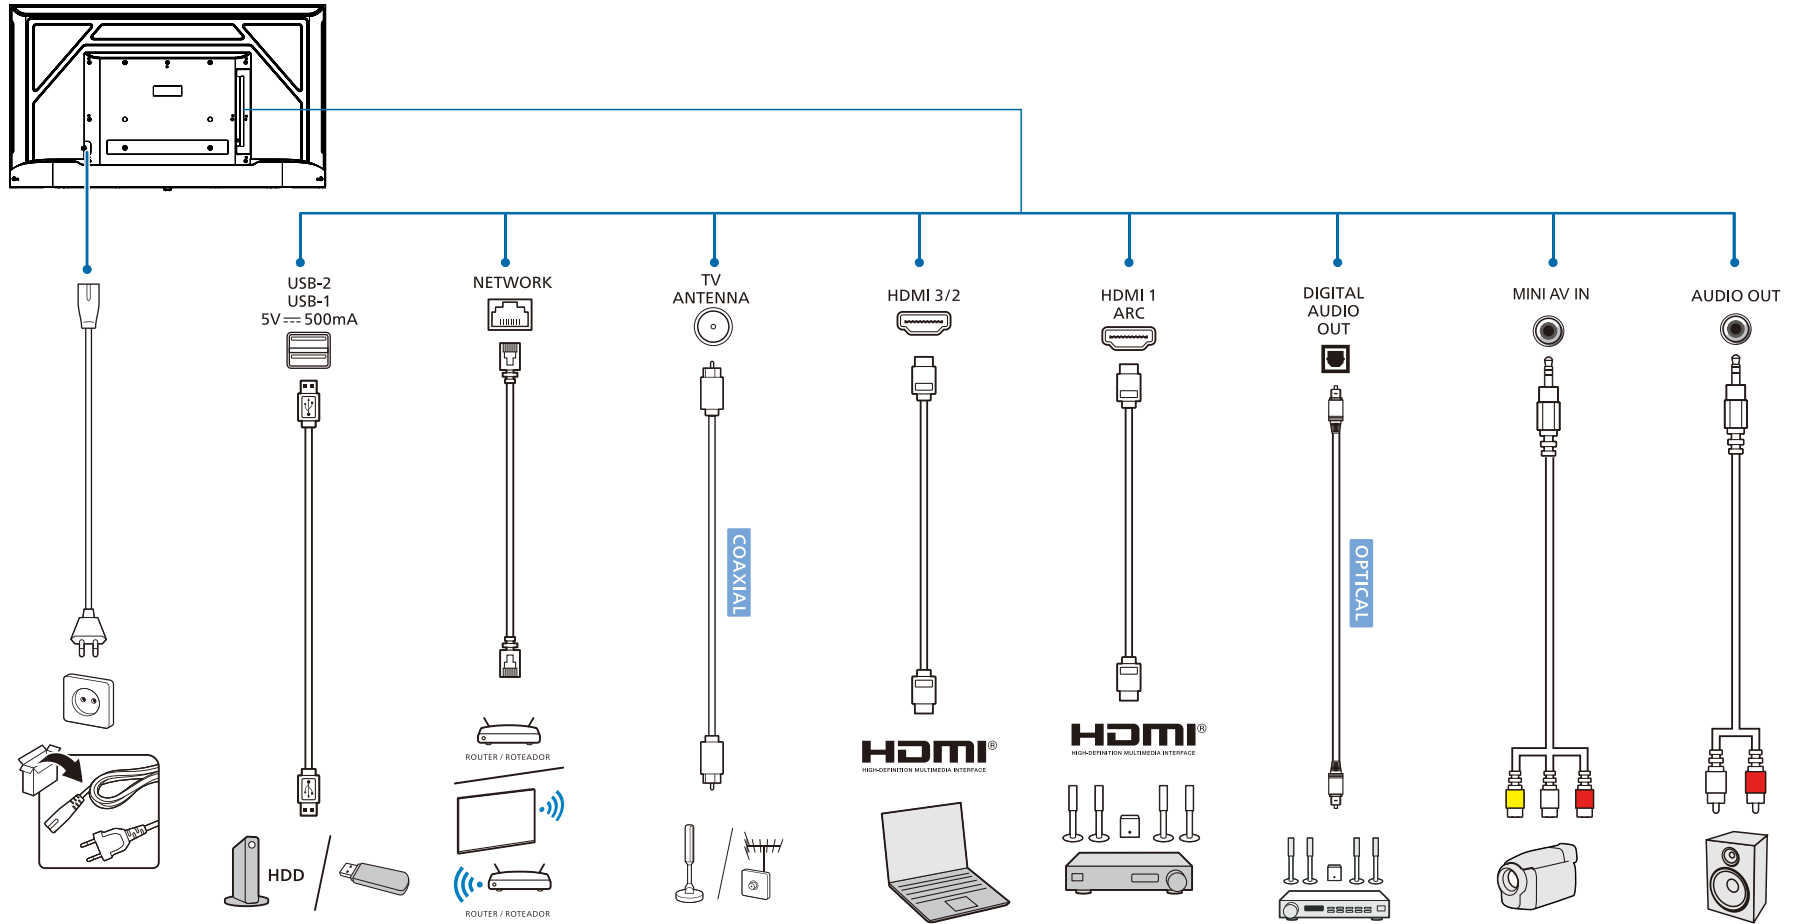

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2024 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome