

# PHILIPS

Wireless on-ear  
headphones

2000 series

Retro design, great sound

Grab-and-go style

Up to 26 hours play time

Bluetooth multipoint

TAH2000TL



## The Ringo

Everybody's in a hurry but you! Slip on these retro-inspired wireless on-ear headphones and rock a laid-back style as you stroll to the beats you love. You get great sound, 26 hours of play time, and a fit so light you'll barely feel it.

### **Century Series. Wireless on-ear headphones.**

- Looks from back then, sound from now
- Long battery life and quick charging
- Stable Bluetooth multipoint connection and easy pairing
- Up to 26 hrs of play time. Quick 15-min charge for 6hrs

### **The Ringo celebrates 100 years of Philips sound**

- Large 40 mm drivers with deep bass
- Clear calls. They'll hear what you're saying
- Handy on-ear button controls
- Featherlight headband and spare ear-cup cushions

### **Retro looks. Modern comfort and performance.**

- Philips Headphones app. The Ringo companion
- Warm, natural sound. Philips sound signature
- Responsible design and packaging


## 2000 series

Wireless on-ear headphones

TAH2000TL/97


# Highlights

### Retro design, great sound

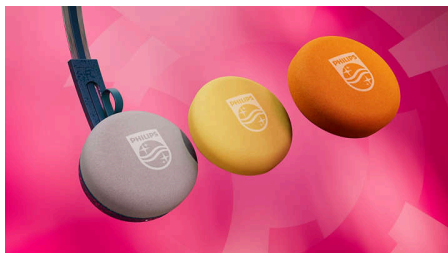

These on-ear headphones bring back the style you love—and add a generous helping of warm, modern sound from their 40 mm drivers! With the eye-catching rounded ear cups, you'll look like you're rocking a personal cassette player from back in the day. You get a great choice of colors too.

### Up to 26 hrs play time

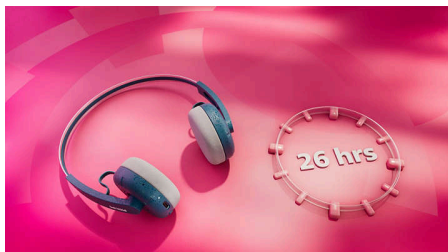

You get up to 26 hours of play time from a full charge, which takes 2 hours via USB-C. If you need a quick boost, charging these on-ear headphones for just 15 minutes will get you an extra 6 hours of play time.


### Bluetooth 5.4 multipoint



Bluetooth 5.4 brings you a steadier connection for seamless streaming without annoying dips in the sound. You can connect to two Bluetooth


devices at the same time, and you can use the Philips Headphones app to manage your connected devices.

### Clear calls

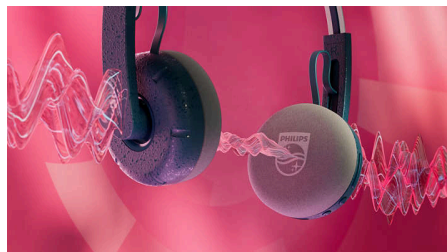


Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise-reduction algorithm quietsens some of the background noise from the world around you.

### On-ear controls

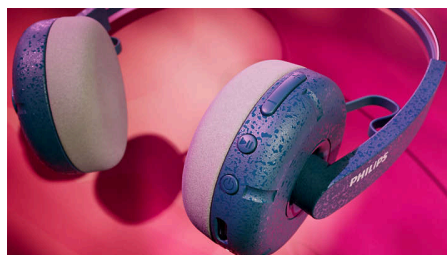

Back in the day, you had to push big, clunky buttons on your cassette player to control the music! Now you get handy button controls on the ear cups for playback, volume, and calls.

### Modern comfort

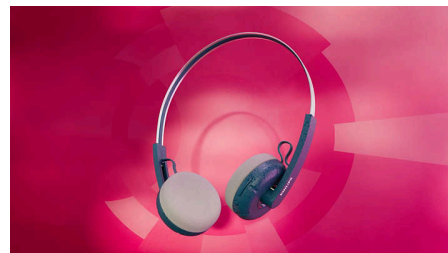

Come for the iconic looks. Stay for the modern comfort. The Ringo boasts a featherlight headband that easily adjusts for the perfect fit, and you get an extra two sets of soft ear-cup cushions for when you need them.

### Philips Headphones app

Our handy companion app features an in-app equalizer for your sounds, and you can activate dynamic bass when you want to feel the full power of your favorite basslines! You can also use our app to keep your headphones up to date with the latest firmware, manage connected devices, and more.

### Philips sound signature

Music to podcasts, you'll love what you hear! These wireless headphones feature large drivers tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

### Responsible design

We're continually working to make our supply chain more sustainable and transparent. These headphones are made with RCS-certified post-consumer recycled plastics, and our packaging uses FSC-certified recycled cardboard and soy-based ink.

## 2000 series

Wireless on-ear headphones

TAH2000TL/97

# Specifications

### Sound

Acoustic system: Closed  
Frequency range: 20 - 20,000 Hz  
Impedance: 32 Ohm  
Maximum power input: 10 mW  
Sensitivity: 123 dB (1k Hz)  
Speaker diameter: 40 mm  
Driver type: Dynamic

### Connectivity

Bluetooth version: 5.4  
Bluetooth profiles: A2DP, AVRCP, HFP  
Maximum range: Up to 10 m  
Multipoint connection  
Supported codec: SBC

### Outer Carton

Length: 19.80 cm  
Number of consumer packagings: 3  
Width: 17.50 cm  
Gross weight: 0.69 kg  
Height: 21.20 cm  
GTIN: 1 48 95229 16642 1  
Nett weight: 0.29 kg  
Tare weight: 0.40 kg

### Convenience

Volume control  
Philips Headphones app support  
Firmware updates possible  
Type of controls: Button

### Power

Number of batteries: 1 pcs  
Music play time: 26 hour(s)  
Charging time: 2 hour(s)  
Fast charging time: 15 mins for 6 hrs  
Battery weight (Total): 5 g  
Battery capacity(Headphones): 200 mAh  
Battery type(Headphones): Lithium Polymer (built-in)

### Packaging dimensions

Height: 18.8 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 16.8 cm  
Depth: 6 cm  
Number of products included: 1  
EAN: 48 95229 16642 4  
Gross weight: 0.194 kg  
Nett weight: 0.095 kg  
Tare weight: 0.099 kg

### Product dimensions

Height: 15.50 cm  
Width: 14.70 cm  
Depth: 5.00 cm  
Weight: 0.08 kg

### Accessories

Others: 2 pairs of extra cushion  
Quick Start Guide

### Design

Color: Teal  
Wearing style: Headband  
Foldable design: Flat  
Ear coupling material: Foam  
Ear fitting: On-ear  
Earcup type: Closed-back

### Telecommunication

Microphone for call: 1 mic

### Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant  
Voice assistant activation: Press Play/Pause button  
Voice assistant support

