

PHILIPS


Televisão

Guia Rápido de Instalação



50PUG7019/78
55PUG7019/78
58PUG7019/78
65PUG7019/78





7314550GFU10UFLP11

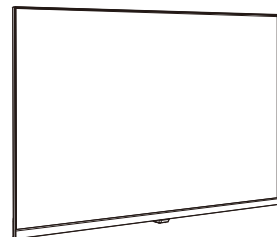



50"/55"/58"/65"

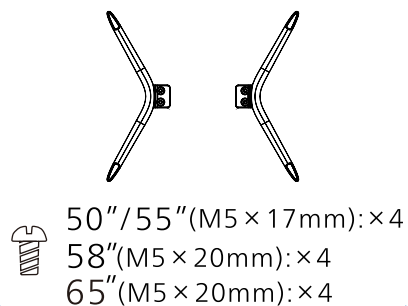


Parafuso para suporte de parede
(parte inferior) (ST6 - 2x / saco)

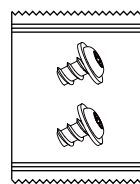

4 pedaços

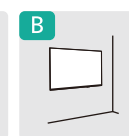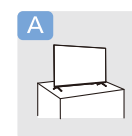


Registre seu produto e obtenha suporte em
www.philips.com/TVsupport




A


50"/55"/58"

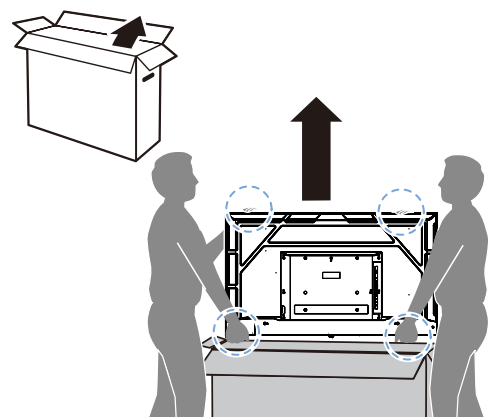


65"

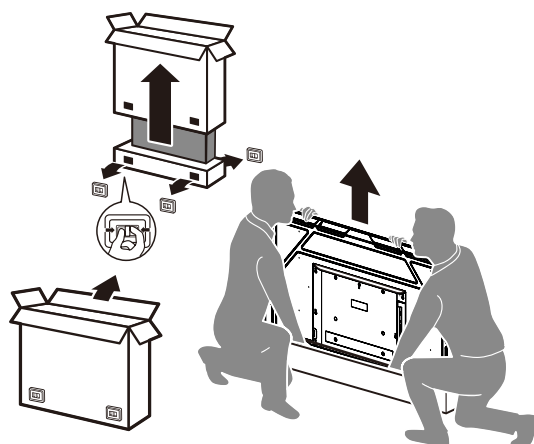


1

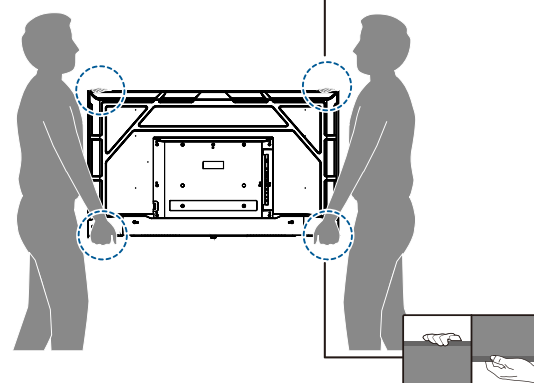


2

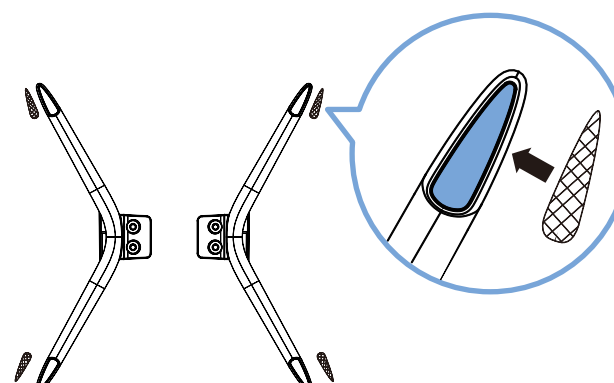

3


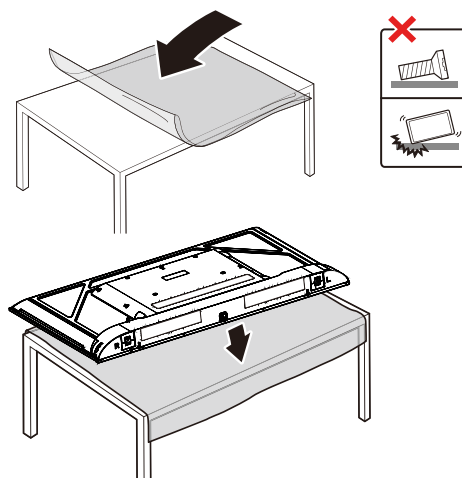


4

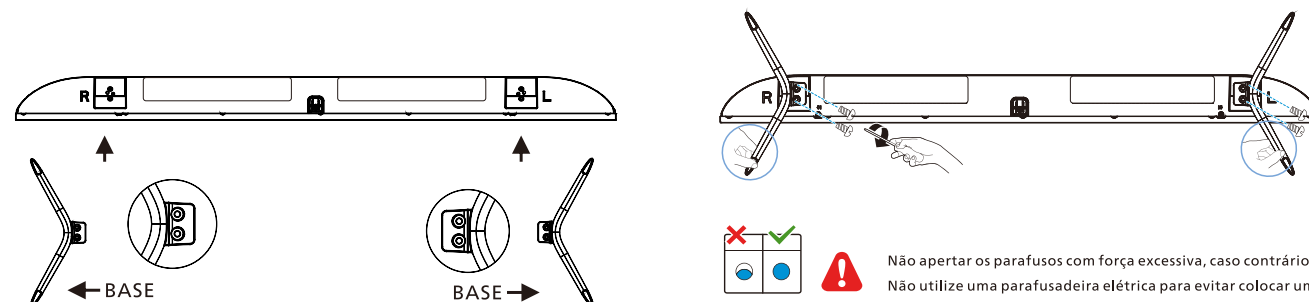

Não apertar os parafusos com força excessiva, caso contrário pode causar danos ao produto.
Não utilize uma parafusadeira elétrica para evitar colocar um torque alto demais, o que pode causar danos ao produto.

B

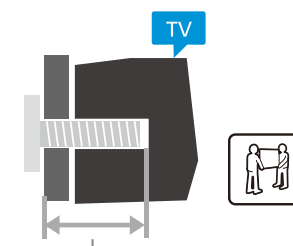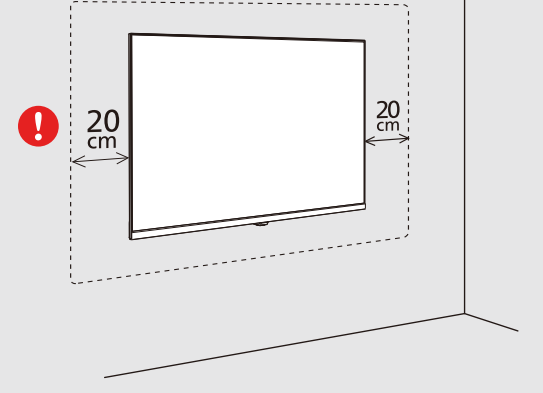

Dimensões para montagem na parede (x, y)


50" 300x300mm 126cm
Para cima: M6 (L:20.5mm ~ 32mm)
Para baixo: ST6 (L:8mm ~ 11.5mm)

55" 300x300mm 139cm
Para cima: M6 (L:20.5mm ~ 32mm)
Para baixo: ST6 (L:8mm ~ 11.5mm)






58" 300x300mm 146cm
Para cima: M6 (L:20.5mm ~ 32mm)
Para baixo: ST6 (L:8mm ~ 11.5mm)

65" 300x300mm 164cm
Para cima: M6 (L:20.5mm ~ 32mm)
Para baixo: ST6 (L:8mm ~ 11.5mm)



M:	Parafuso métrico
ST:	Parafuso auto atarraxante

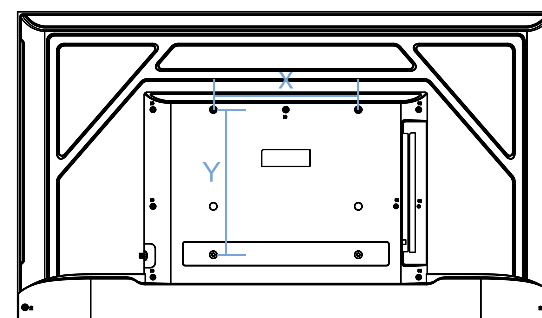

	A	B
50"	101.8	30.2
55"	103.0	30.2
58"	114.0	34.5
65"	129.1	34.5

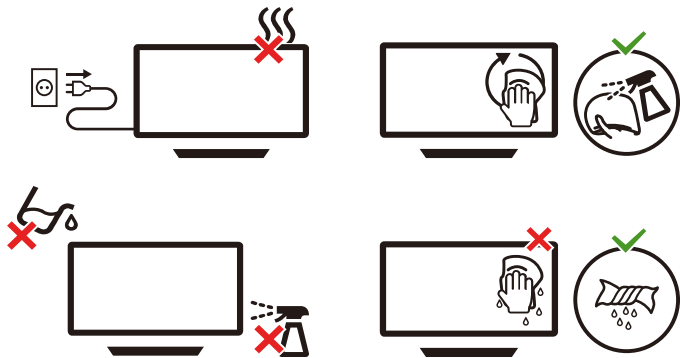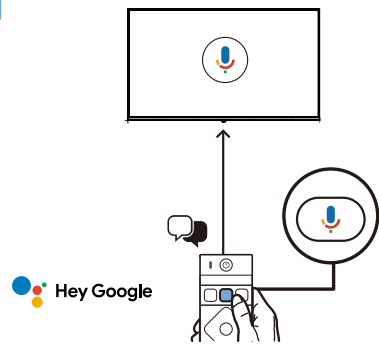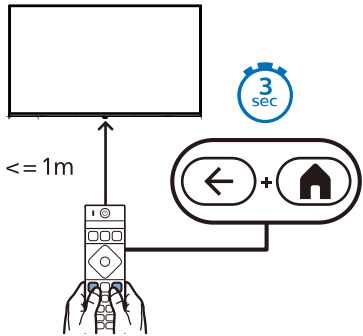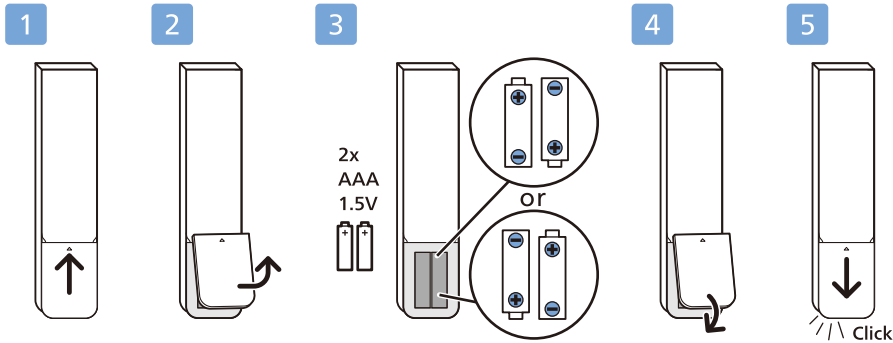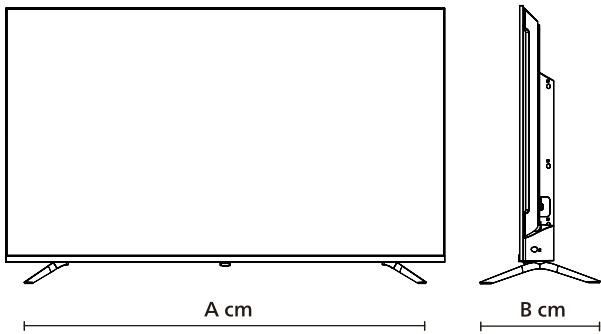

English Read the safety instructions.
Português Leia as instruções de segurança.

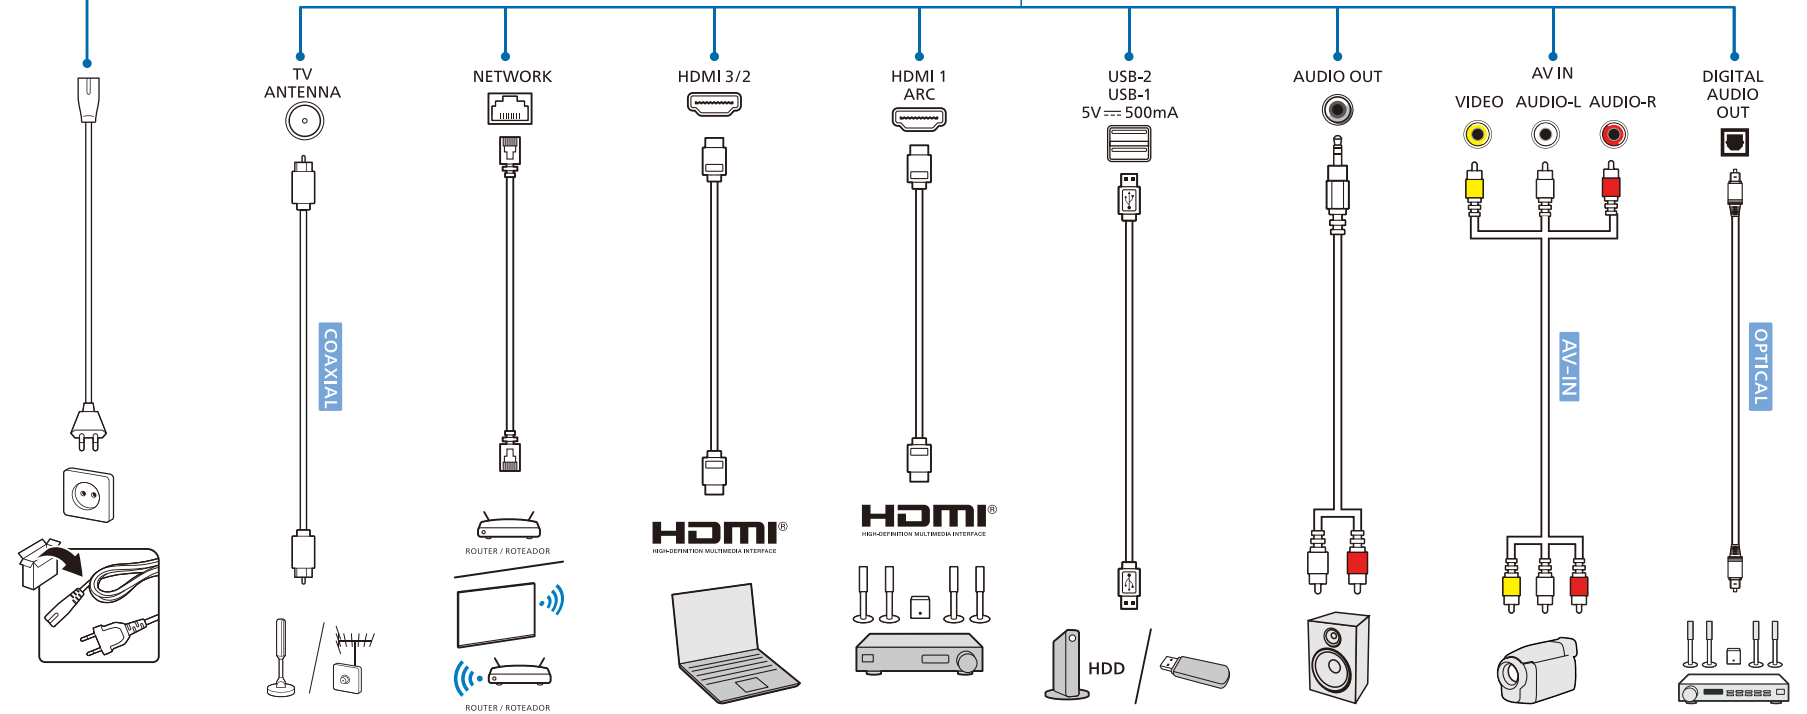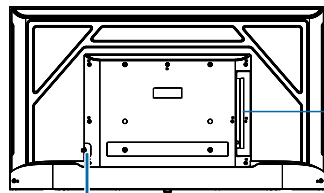

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2024 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome