

PHILIPS


AMBILIGHT tv

Guía de inicio rápido


8100 Series




Herramienta necesaria para el ensamble

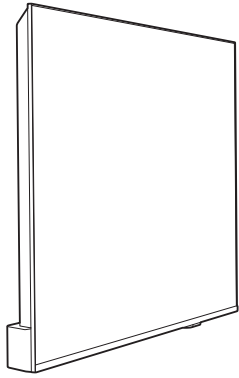



43"/50"/55"/65"

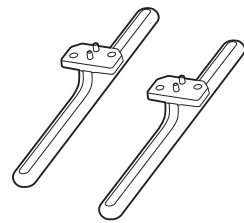


75"

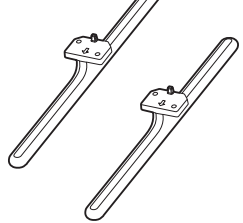


43"(Q4xL16) : x4
50"/55"(Q4xL18) : x4
65"(M4xL20) : x4
75"(M5xL20) : x4

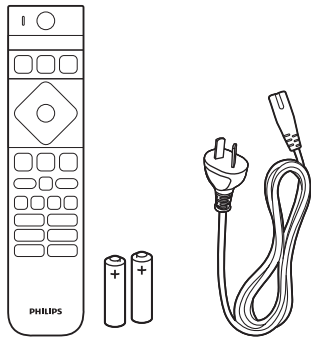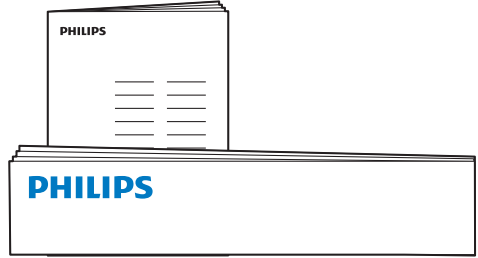


1 43"/50"/55"

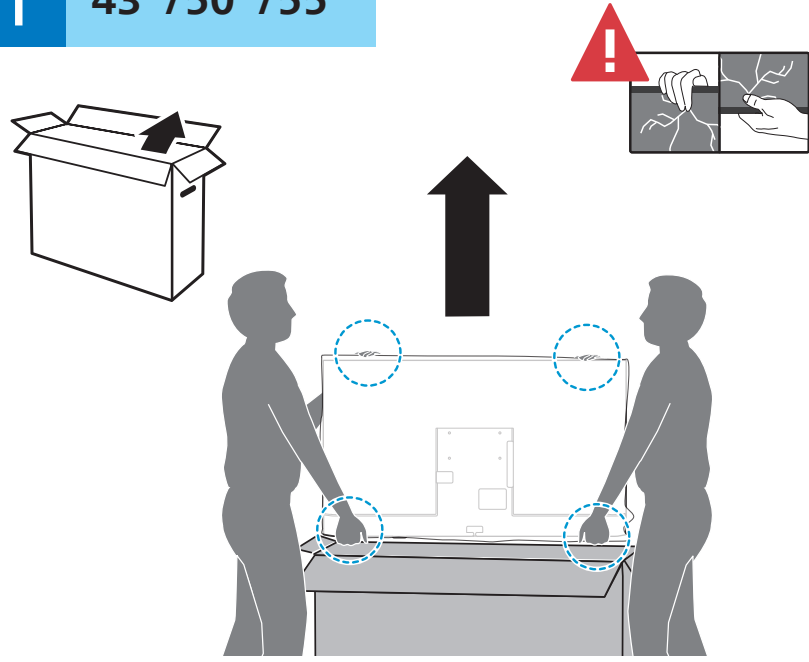


65"/75"

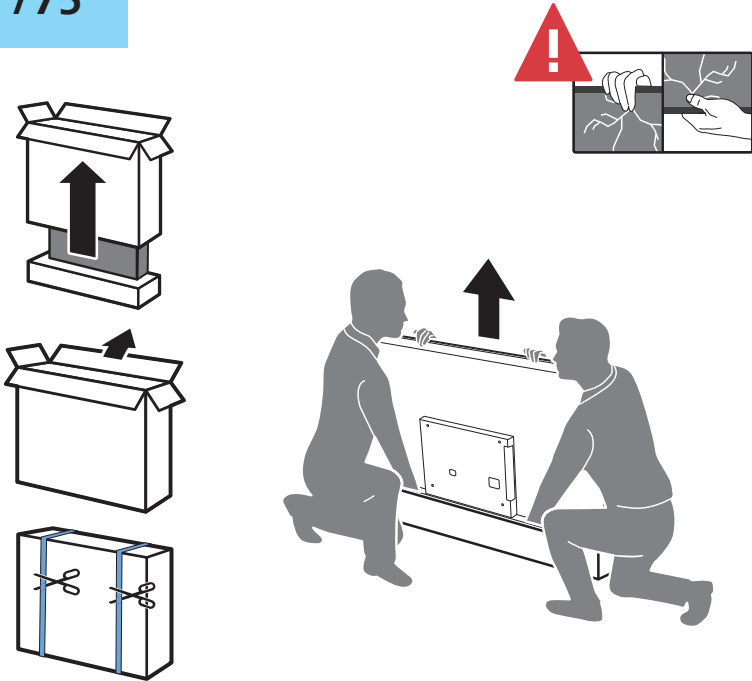


2

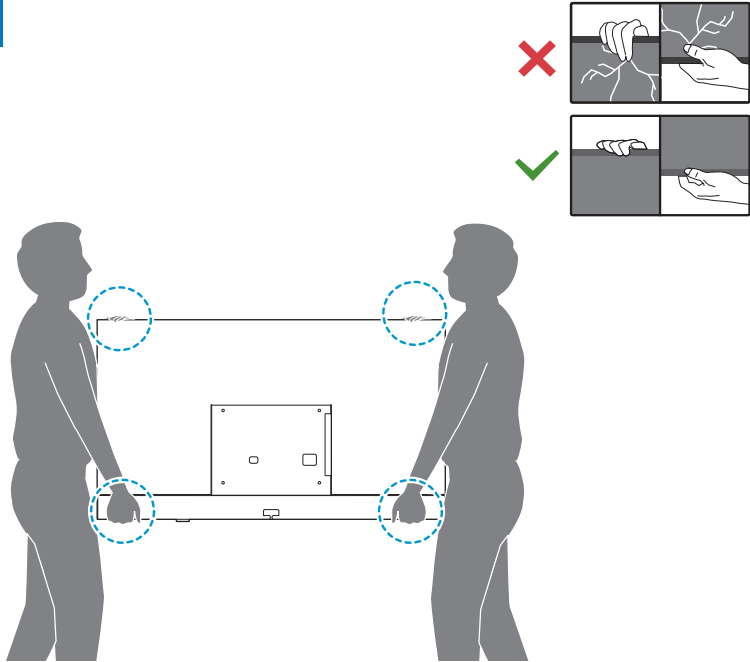



3

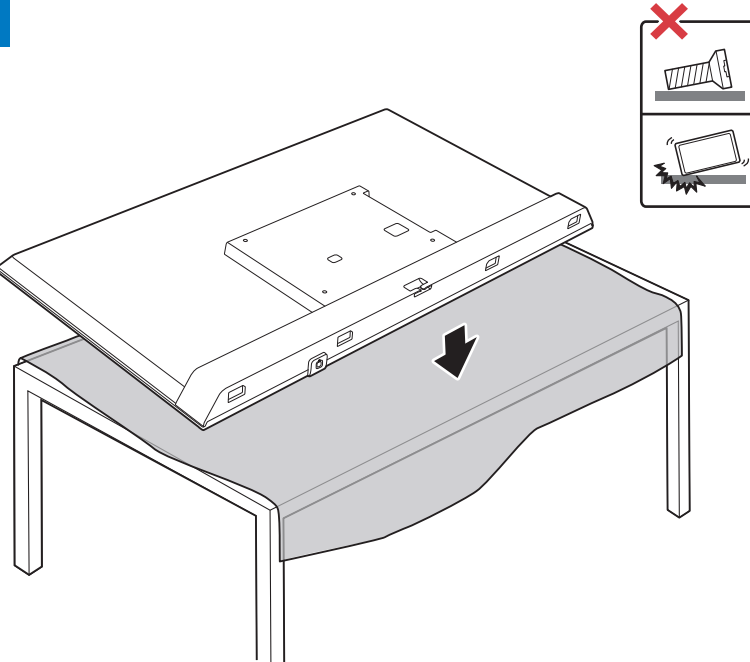

A Instalación en el escritorio

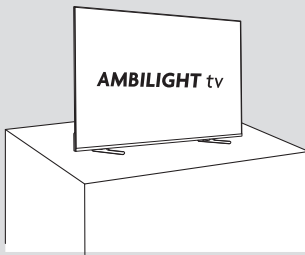

B Instalación en la pared

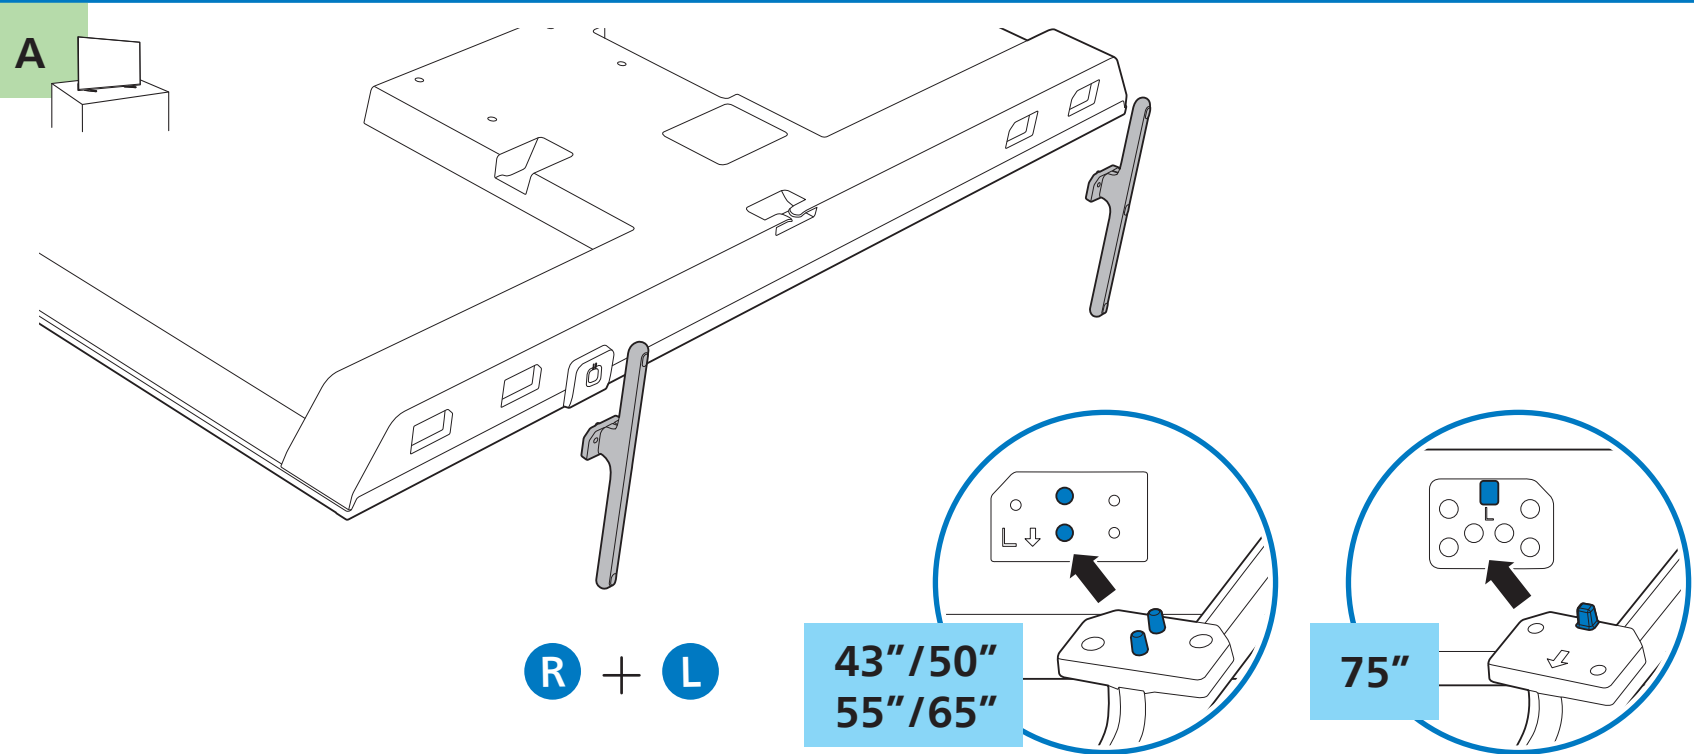
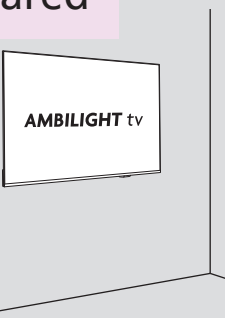


43"

R


L

50"/55"/65"/75"

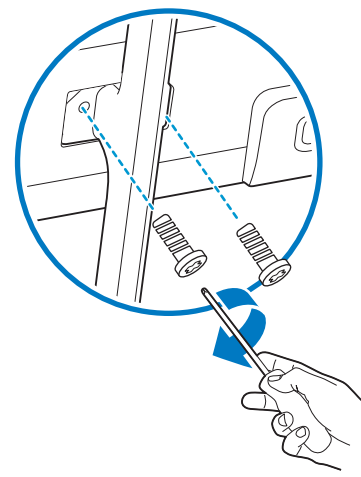
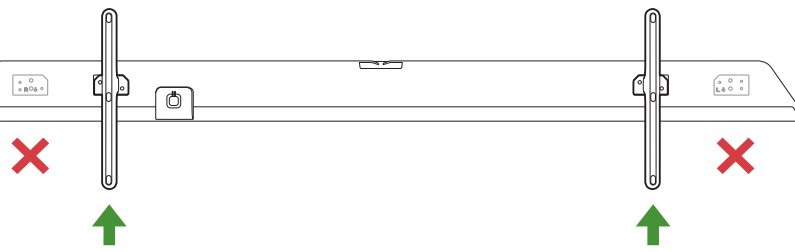


Distancia recomendada con la pared

10-20 cm

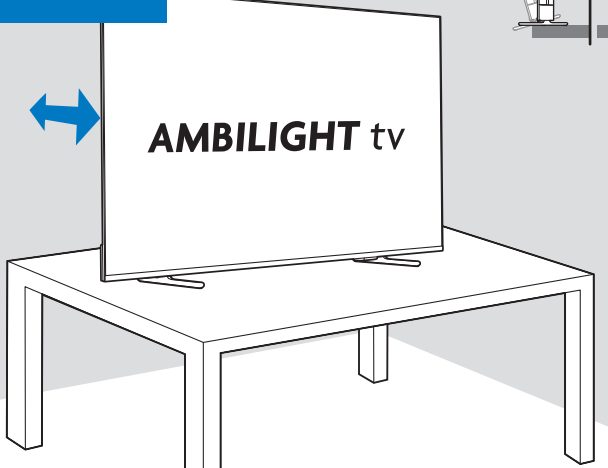


Diagonal (pulgadas/cm)	X (mm)	Y (mm)	Tamaño del tornillo	Largo del tornillo (mm)
43" / 108	200	100	M6	9-10
50" / 126	200	100	M6	9-10
55" / 139	200	100	M6	9-10
65" / 164	400	300	M8	12-22
75" / 189	400	300	M8	12-22

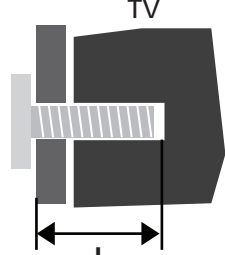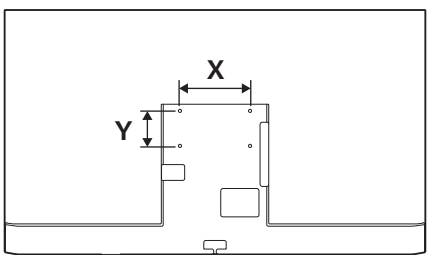

Distancia recomendada con la pared

7-10 cm

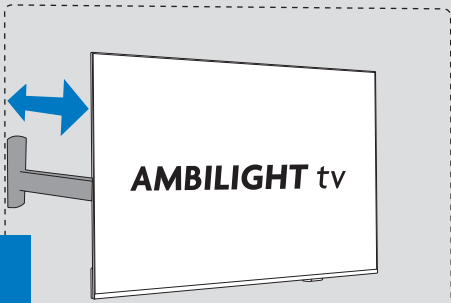

4

Conectate



www.philips.to/smartTV

La aplicación Philips Smart TV te permite cambiar de canal y ajustar el volumen, como si fuera un control remoto.

5

Registro y Soporte



www.philips.com/TVsupport

Regístrá tu televisor, obtén más información, descarga el manual de usuario y recibí asistencia

1

2

3

1 2 3 4

3 sec

Para instalar las pilas, deslízala tapa hacia arriba.

Utilice 2 pilas AAA LR03 1,5 V (incluidas)

Deslice la tapa del compartimento de las pilas hacia atrás.

Click

1 2 3 4 5 6 7 8 9

$\leq 1m$

PAIR

Help


English

Español

Read the safety instructions.

Lea la información de seguridad.

FSC Logo H:12mm

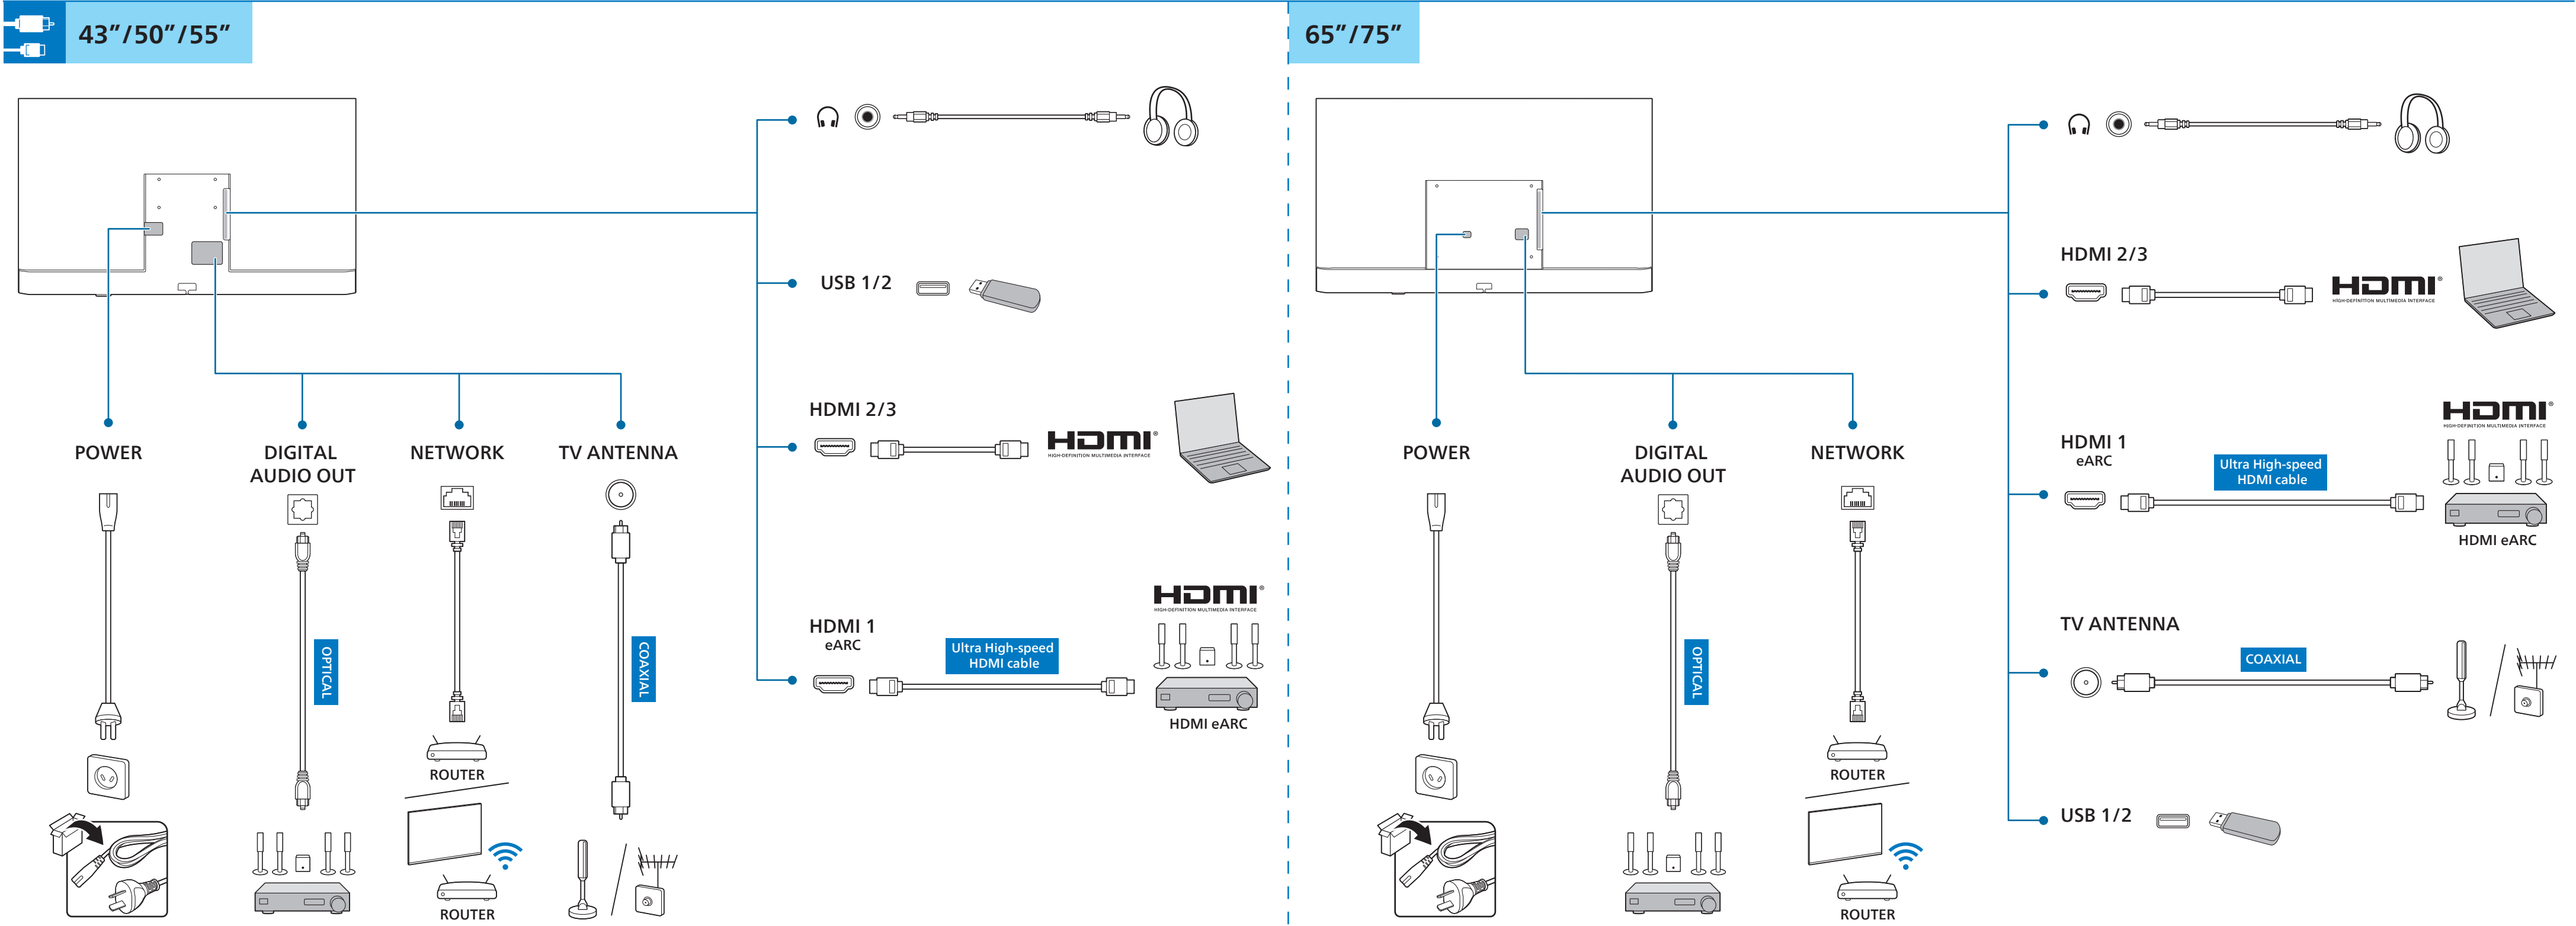

Distancia a la pared recomendada para obtener la mejor experiencia Ambilight

Pared

B 7 a 10 cm

A 10 a 20 cm

TV

cm

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome