

# PHILIPS

Full HD LCD monitor

Monitor

1000 series

24 (23.8" / 60.5 cm diag.)

1920 x 1080 (Full HD)

24E1N1300A



## Better your productivity with USB-C connectivity

This monitor is made to keep you connected. With features like USB-C 3.2 with power delivery, users can charge their linked device and work seamlessly, all with one cable. In addition, the singular cable makes for a clean workspace.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing

### Easy to experience

- Connect your notebook with one USB-C cable
- Built-in stereo speakers for multimedia
- VESA mount for convenience
- HDMI ensures universal digital connectivity

### Superb Picture Quality

- 100Hz refresh rates for ultra-smooth images
- 16:9 Full HD display for crisp detailed images
- IPS LED wide view technology for image and color accuracy
- 1ms (MPRT) fast response for crisp image and smooth gameplay

# Monitor

Full HD LCD monitor

24E1N1300A/94

## Highlights

### 100Hz Fast refresh



This Philips display refreshes the screen image up to 100 times per second which makes this monitor much faster than a standard display. With a 100Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in an ultra-smooth motion so that they are easily targetable.

### 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers shaper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

### USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

### LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

### Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

### EasyRead mode



EasyRead mode for a paper-like reading experience

### EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.




# Monitor

Full HD LCD monitor

24E1N1300A/94

## Highlights

### IPS technology

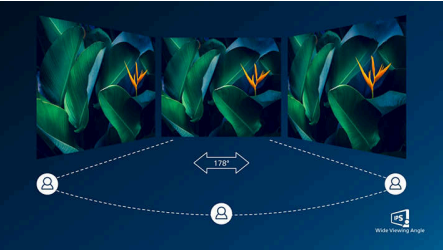

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also

for professional applications which demand color accuracy and consistent brightness at all times.


### 16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080

resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

### Cable management

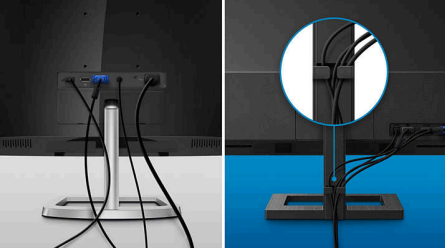

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.



USB-C



LowBlue Mode



Built-in Speaker



EasyRead

# Monitor

Full HD LCD monitor

24E1N1300A/94

## Specifications

### Picture/Display

**Panel Size:** 23.8 inch / 60.5 cm  
**Aspect ratio:** 16:9  
**LCD panel type:** IPS technology  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.2745 x 0.2745 mm  
**Brightness:** 300 cd/m<sup>2</sup>  
**Display colors:** 16.7 M  
**Color gamut (typical):** Adobe RGB 84.49%; DCI-P3:81.39%, sRGB: 102.66%, NTSC 89.36%\*  
**Contrast ratio (typical):** 1500:1  
**SmartContrast:** Mega Infinity DCR  
**Response time (typical):** 4 ms (Gray to Gray)\*  
**Viewing angle:** 178° (H) / 178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage game  
**Maximum resolution:** 1920 x 1080 @ 100 Hz  
**Effective viewing area:** 527.04 (H) x 296.46 (V)  
**Scanning Frequency:** 30 KHz - 115 KHz (H) / 48 Hz - 100 Hz (V)  
**sRGB**  
**Flicker-free**  
**Pixel Density:** 92.56 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**MPRT:** 1 ms  
**EasyRead**  
**Adaptive sync**

### Connectivity

**Signal Input:** HDMI 1.4 x 1, USB-C x 1 (DisplayPort Alt mode, data and Power Delivery)  
**Sync Input:** Separate Sync  
**Audio (In/Out):** Audio out

**HDCP:** HDCP 1.4 (HDMI / USB-C)

**USB Hub:** USB 3.2 Gen 1, USB-A downstream x 2 (with 1 fast charge B.C 1.2)

### Power Delivery

**Max power delivery:** USB-C: Up to 65W (5V/3A, 7V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)

**Version:** USB PD version 3.0

### Convenience

**Built-in Speakers:** 2 W x 2  
**Plug & Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 11 / 10  
**User convenience:** Power On/Off, Menu, Volume, Input, SmartImage Game  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100x100mm)

### Stand

**Tilt:** -5/20 degree

### Power

**Power supply:** 100-240VAC, 50-60Hz, Internal  
**Off mode:** 0.3 W (typ.)  
**On mode:** 18.3 W (typ.)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode- White (blinking)  
**Energy Label Class:** E

### Dimensions

**Product with stand (mm):** 542 x 417 x 180 mm  
**Packaging in mm (WxHxD):** 610 x 370 x 124 mm  
**Product without stand (mm):** 542 x 316 x 45 mm

### Weight

**Product with packaging (kg):** 5.26 kg  
**Product with stand (kg):** 3.41 kg  
**Product without stand (kg):** 3.06 kg

### Operating conditions

**Altitude:** Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)  
**Temperature range (operation):** 0 to 40 °C  
**MTBF:** 50,000 hrs (excluding backlight) hour(s)  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20 to 60 °C

### Sustainability

**Environmental and energy:** RoHS  
**Recyclable packaging material:** 100 %  
**Specific Substances:** Mercury free, PVC / BFR free housing

### Compliance and standards

**Regulatory Approvals:** CB, CE Mark, ICES-003, TUV/ISO9241-307, TUV-BAUART, EAC, FCC, VCCI, PSB, PSE, EnergyStar 8.0

### Cabinet

**Color:** Black  
**Finish:** Textured



\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.  
\* Adobe RGB and DCI-P3 Coverage based on CIE1976, sRGB Area based on CIE1931, NTSC Area based on CIE1976.  
\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.  
\* Response time value equal to SmartResponse  
\* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.  
\* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.  
\* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode  
\* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.  
\* The products and accessories listed on this leaflet may differ by country and region.  
\* The monitor may look different from feature images.