

PHILIPS

AVENT

Premium

2-in-1 Warmer & Sterilizer

Gentle warming, no hotspots

Chemical-free sterilisation

Quick and easy set-up

Compatible with most essentials



SCF359/00



One simple routine, from one feed to the next

Fast, safe warming and sterilisation. Every time.

The most trusted way to warm and sterilise keeps you a step ahead. Our hospital-standard water-bath warming better preserves milk proteins while the smart sensor prevents overheating. Time to clean up? Natural steam removes 99.9% of germs.

Thorough, safe and fast

- Warm bottles in 3 minutes with one button*
- Safely eradicate 99.9% of bacteria using natural steam

Hospital-standard water-bath warming

- Uses hospital-standard water-bath warming
- Constant milk circulation prevents hotspots

No guesswork. No overheating

- Smart sensor prevents overheating
- Automatically shuts off and stays warm

Universally compatible

- Compatible with most baby bottles and food jars
- Get the most out of your baby's everyday essentials

Intuitive design

- Warm and sterilise with one intuitive button

2-in-1 Warmer & Sterilizer

Premium

SCF359/00

Highlights

Warms in 3 minutes*



Time for a feed? Hospital-standard water-bath warming better preserves milk nutrients without compromising on efficiency. Whether you or another caregiver are feeding the baby, the best warming technology ensures that it's all ready in 3 minutes.*

Eradicates 99.9% of bacteria



When it's time to clean up, use the power of natural steam to eradicate 99.9% of bacteria. Steam, known for its ability to reach into nooks and crevices, is perfect for sterilising every corner of your baby's bottle, soother and small toys. And it's all chemical-free.

Better preserves milk proteins



Warm milk the way nurses do in hospitals using water-bath warming. Compared to other methods, it better preserves milk proteins essential for building up a baby's immune system. Gentle and quick, our technology helps promote your baby's healthy development with every feed.

Prevents hotspots




Our warming technology protects the proteins that promote your baby's healthy development by circulating heat evenly and constantly. Thanks to water-bath warming, there's no need to worry about hotspots that can cause milk to spoil. Instead, your baby can enjoy evenly warmed, nutrient-rich feeds every time.

Prevents hotspots



Whatever the milk's starting temperature is, our smart sensor takes care of the details for you. It adjusts the warming time automatically by detecting the milk's starting temperature. No guesswork. And no risk of overheating.

Auto shut-off and stays warm

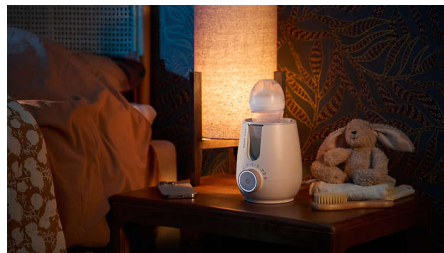

No second-guessing yourself. Make day and night feeds easier and safer knowing that the device automatically shuts off once it's done, and keeps the bottle at feeding temperature for up to 60 minutes.

One button controls everything



Whether it's your first time at warming, or you're a feed prep expert, our one-button interface makes it simple for any caregiver to warm and sterilise. You'll receive visual and audio alerts throughout each process before it automatically shuts off.

See-through window



Our new see-through window makes feed prep intuitive for everyone. Use it to quickly check the water level before warming cycles and get it right every time. No guessing. Everything you need to know is right there in front of you.

Clever, space-saving design



Keep your home clutter-free with one multi-functional tool that takes up minimal counterspace. The small yet mighty design allows you to sterilise a bottle as well as small toys and soothers in one go.

2-in-1 Warmer & Sterilizer

Premium

SCF359/00

Highlights

Easy to clean



Our beautifully simple design makes cleaning just as easy as warming and sterilising. Wipe the warmer and steriliser down with a cloth, using the wide-neck basin to easily reach in. The sterilising attachment can also be placed in the dishwasher if need be.

Compatible with most brands



As your little one grows, know that our warmer works with all kinds of baby bottle brands, as well as different bottle materials and sizes. And when they're ready to graduate, our warmer works with food jars too.

Get the most out of essentials



Our steam sterilisation technology is the safest way to sanitise your baby's items. It's effective on germs while still respecting all kinds of materials, which prolongs an item's lifespan. Using the sterilisation attachment for small items, it's easy to sterilise bottles, soothers, spare parts and small toys all in one go.

2-in-1 Warmer & Sterilizer

Premium

SCF359/00

Specifications

Product Material

Product Material: Plastic (PP and ABS)

Technical specifications

Power consumption: 400 W

Voltage (S_0000156): 220-240 V ~ 50-60 Hz,
120-127 V ~ 50-60 Hz (US, Canada, Mexico)

Weight and dimensions

Weight: 1000 g

Product dimensions (W x H x D):
260.4 x 150 x 210.5 mm

Country of origin

Produced in: China

What is included

2-in-1 Warmer and Steriliser: 1 pcs

Consumer Trade Item

Height: 26.4 cm

Width: 21.5 cm

Length: 15 cm

Net weight: 0.74 kg

Gross weight: 1.036 kg

GTIN: 8720689045407

Country of origin: CN

Outer Carton

Height: 47.6 cm

Width: 28.2 cm

Length: 46.2 cm

Net weight: 6.21 kg

Gross weight: 6.65 kg

GTIN: 18720689045404

Pallet Layer

Height: 47.6 cm

Width: 100 cm

Length: 120 cm

Pallet

Height: 196.8 cm

Width: 100 cm

Length: 120 cm

Net weight: 142.08 kg

Gross weight: 227.8 kg

GTIN: 68720689045409

