

PHILIPS

Business Projector

ProPix 650

4000 ANSI lumens

Up to 150" screen

WXGA resolution

Philips UHP lamp

PRX650



Deliver impactful presentations

The perfect choice for corporate and educational settings, offering great clarity and detail with its impressive 4000 ANSI lumens of brightness.

Connectivity and quality

- Adaptable connectivity
- Philips UHP lamp

Flexible and powerful

- Powerful integrated sound system
- Designed for adjustable installations

Bright Image

- WXGA resolution
- New standards for the Pro

Highlights

Adaptable connectivity



The ProPix 650 features both HDMI and dual VGA inputs, ensuring seamless integration with legacy systems commonly found in educational institutions and established corporate environments. Also includes a RS232 ports for professional AV control systems, USB connectivity and a 3.5 mm audio output for external sound solutions.

Philips UHP lamp




This revolutionary lamp technology transformed the projection industry through its innovative high-pressure operation, enabling exceptional brightness and efficiency in a compact form factor.

Powerful integrated sound system




Immerse yourself in outstanding sound quality with the audio system, featuring two speakers for a truly exceptional audio experience. Need a bigger sound? The 3.5 mm jack output is there to connect your earphones or external speakers.

WXGA resolution

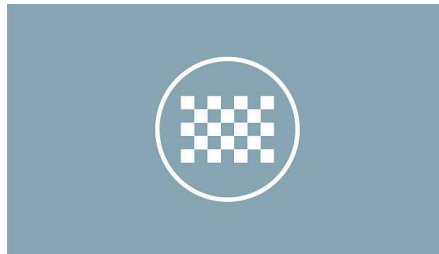

Bring your entertainment to life with WXGA resolution — enjoy razor-sharp images, deep contrast and crystal-clear text for an unforgettable viewing experience with 4000 Lumens.

Designed for adjustable installations

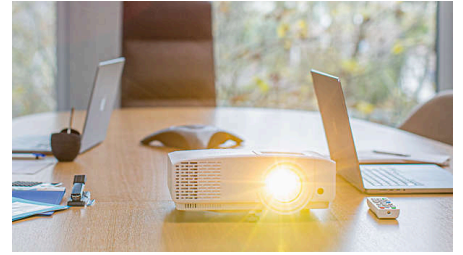

Engineered for versatile installation scenarios, projecting impressive images from 70" up to 150" diagonal. With a throw ratio of 1.49:1, create a professional 120" display from a distance of just 4 metres. The lightweight design of 2.5 kg makes it easily portable, while support for multiple aspect ratios (4:3/16:9/16:10/Native) ensures compatibility with various content formats

New standards for the Pro



The unique design of the UHP lamps results in superior stability and longevity compared to conventional modern lamp technologies. This innovative approach sets new standards for projection performance, making it the preferred choice for professional installations worldwide.

Specifications

Technology

Display technology: DLP
Light source: Philips UHP lamp 200 W
Brightness: up to 4000 lumens*
Contrast ratio: 2000:1
Resolution: 1280 x 800 pixels
Focus adjustment: Manual
Keystone correction: Manual
Projection image size: up to 380 cm (150")
Lamp lifetime: 6000/10,000 hours (normal/eco)

Connection

HDMI: x 1
USB: x 2
VGA: Input x 2 Output x 1
Audio out: 3.5 mm jack
Audio in: 3.5 mm jack
S-video in: x 1

Sound

Internal speaker: 2 W

Dimensions

Weight: 2.5 kg
unpacked (W x D x H): 302 x 218 x 99 mm

