

# PHILIPS

Business Projector

ProPix 850

4000 ANSI lumens

Up to 150" screen

Full HD resolution

Philips UHP lamp

PRX850



## Deliver impactful presentations

The perfect choice for corporate and educational settings, offering great clarity and detail with its impressive 4000 ANSI lumens of brightness.

### **Bright Image**

- New standards for the Pro
- Full HD resolution

### **Connectivity and quality**

- Philips UHP lamp
- Versatile connectivity

### **Flexible and powerful**

- Powerful integrated sound system
- Designed for flexible installations

## Highlights

### New standards for the Pro



The unique design of the UHP lamps results in superior stability and longevity compared to conventional modern lamp technologies. This innovative approach sets new standards for projection performance, making it the preferred choice for professional installations worldwide.

### Powerful integrated sound system



Immerse yourself in outstanding sound quality with the audio system, featuring two speakers for a truly exceptional audio experience. Need a bigger sound? The 3.5 mm jack output is there to connect your earphones or external speakers.

### Philips UHP lamp




This revolutionary lamp technology transformed the projection industry through its innovative high-pressure operation, enabling exceptional brightness and efficiency in a compact form factor.

### Designed for flexible installations



Engineered for versatile installation scenarios, projecting impressive images from 70" up to 150" diagonal. With a throw ratio of 1.49:1, create a professional 120" display from a distance of just 4 metres. The lightweight design of 2.5 kg makes it easily portable, while support for multiple aspect ratios (4:3/16:9/16:10/Native) ensures compatibility with various content formats.

### Full HD resolution

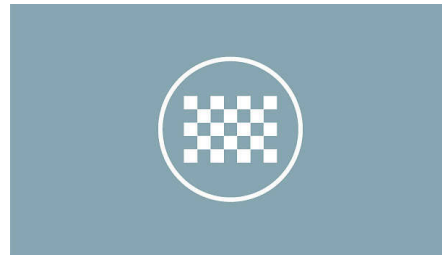

Bring your entertainment to life with Full HD resolution — enjoy razor-sharp images, deep contrast and crystal-clear text for an unforgettable viewing experience with 4000 Lumens.

### Versatile connectivity



The ProPix 850 features dual HDMI inputs, ensuring seamless integration with legacy systems commonly found in educational institutions and established corporate environments. Also includes a RS232 ports for professional AV control systems, USB connectivity and a 3.5 mm audio output for external sound solutions.

# Specifications

## Technology

**Display technology:** DLP  
**Light source:** Philips UHP lamp 200 W  
**Brightness:** up to 4000 lumens\*  
**Contrast ratio:** 1600:1  
**Resolution:** 1920 x 1080 pixels  
**Focus adjustment:** Manual

**Keystone correction:** Manual  
**Projection image size:** up to 380 cm (150")  
**Lamp lifetime:** 6000/10,000 hours (normal/eco)

## Connection

**HDMI:** x 2  
**USB:** x 1  
**Audio out:** 3.5 mm jack

## Sound

**Internal speaker:** 2 W

## Dimensions

**Weight:** 2.5 kg  
**unpacked (W x D x H):** 302 x 218 x 99 mm

