

PHILIPS

Business Projector

ProPix 860

2600 ANSI Lumens

Up to 150" screen

Full HD resolution

LED light source

PRX860



Experience brilliance that captivates

Elevate your presentations and home entertainment with the Philips ProPix 860 projector, the ultimate choice for crystal-clear visuals in any setting

Connectivity and quality

- Versatile connectivity
- LED light source

Flexible and powerful


- Designed for flexible installations
- Powerful integrated sound system

Bright Image

- Full HD resolution
- Performance for everyone

Highlights

Full HD resolution

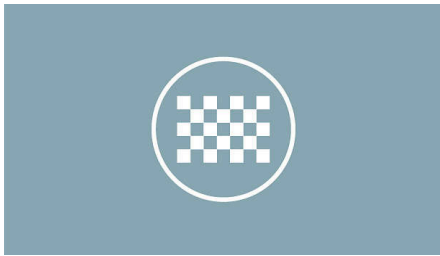

Bring your entertainment to life with Full HD resolution — enjoy razor-sharp images, deep contrast and crystal-clear text for an unforgettable viewing experience with 2600 Lumens.

Performance for everyone



The unique LED design results in sustainability and longevity compared to other technologies of the time. This innovative approach sets new standards for projection performance, making it the smartest choice for professionals and also home entertainment.

Designed for flexible installations



Engineered for versatile installation scenarios, projecting impressive images from 70" up to 150" diagonal. With a throw ratio of 1.49:1, create a professional 120" display from a distance of just 4 metres. The lightweight design of 2.5 kg makes it easily portable, while support for multiple aspect ratios (4:3/16:9/16:10/Native) ensures compatibility with various content formats

Powerful integrated sound system



Immerse yourself in outstanding sound quality with the audio system, featuring two speakers for a truly exceptional audio experience. Need a bigger sound? The 3.5 mm jack output is there to connect your earphones or external speakers.

Versatile connectivity



The ProPix 860 features dual HDMI inputs, ensuring seamless integration with legacy systems commonly found in educational institutions and established corporate environments. Also includes a RS232 ports for professional AV control systems, USB connectivity and a 3.5 mm audio output for external sound solutions.

LED light source



The high-quality LED light system delivers rich, vivid colours that last up to 30,000 hours. With an average use of 4 hours per day, this projector will last for up to 20 years! In addition, its energy consumption is much lower than that of a regular lamp projector, allowing you to enjoy a bigger screen and a fully immersive cinema experience, all from an environmentally friendly device.

Specifications

Technology

Display technology: DLP

Light source: LED

Brightness: up to 2600 lumens*

Contrast ratio: 1500:1

Resolution: 1920 x 1080 pixels

Focus adjustment: Manual

Keystone correction: Manual

LED lifetime: Up to 30,000 h

Projection image size: up to 380 cm (150")

Connection

HDMI: x 2

USB: x 1

Audio out: 3.5 mm jack

Sound

Internal speaker: 5 W with sound chamber

Dimensions

Weight: 2.6 kg

unpacked (W x D x H): 302 x 218 x 99

