

PHILIPS

Cordless phone

4.6cm display/ white backlight

Handset speakerphone

D4701B



Smart Elegance

Faunting a modern design and premium finish, this exquisitely sleek cordless phone features a large reverse display, metal-plated keys and crystal clear sound. Superb style and functionality make it your ideal connection companion.

Eco-conscious product

- Low radiation and power consumption

As convenient as it should be

- Large, 4.6cm (1.8") full graphical display
- Up to 16 hours of talk time on a single charge
- Caller ID – so you always know who is calling*
- Keypad backlight for fast access even in dark room
- Privacy settings: call block, silence mode, call barring
- Two-field entries for assigning 2 numbers to one contact

Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- Freestanding handset with a speaker for easy handsfree calls
- MySound profiles to match your sound preference

Highlights

4.6cm (1.8") graphical display

Large, 4.6cm (1.8") full graphical display

Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

Handset speakerphone




Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

HQ-Sound




Philips cordless phones with HQ-Sound: build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything – high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Multiple privacy settings

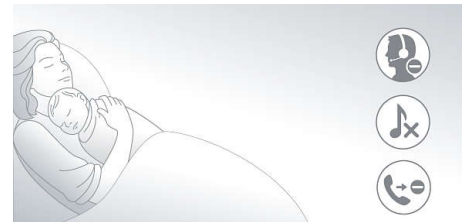

Black list restricts receiving calls from specific numbers or starting with certain digits, keeping you away from unwanted calls. You can block 4 sets of numbers. Each set of numbers can consist between 1 to 24 digits. When there is an incoming call that starts with one of these numbers or being one of 4 exact Caller numbers, the phone will not ring. With silence mode you can disable the ringtones for specific times to enjoy peace and silence. Thanks to Call barring you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits.

MySound profiles

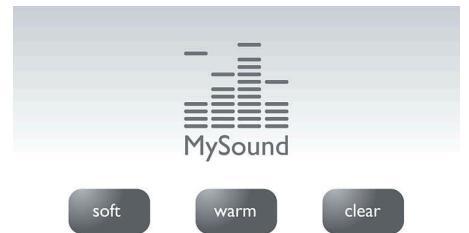

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear – to make voices sound crisper and clearer; Soft – for friendly, softer tones; Warm – to make voices sound welcoming and warm.

Highlights

Two-field phonebook entries



These days most people have multiple contact numbers. Our contact list makes it easier for you to manage your phone contacts. Simply save two phone numbers out of a choice of three different field names for home, work or mobile.

Up to 16 hours talk time



Up to 16 hours of talk time on a single charge

Keypad backlight



The soft white backlight makes keys easy to read in low light conditions and at night.

Specifications

Sound

Sound Profile: MySound
Volume control on handset
Ringtones on handset: 10 polyphonic
HQ-Sound

Convenience

Menu structure in the handset: List Menu
Base Station keys: Paging key
Number of keys: 20
Speakerphone - talk handsfree
Call Management: Call Waiting*, Caller ID*,
Microphone mute, Missed Calls, Received Calls,
Dialed calls
Call barring: Restrict the phone from ringing on
specific incoming numbers
Backlit keypad: White
Signal strength indicator: 3-bar indicator
Battery level indicator: 3-bar battery icon
Date / Time display
Alarm Clock
Event light on the handset
Programmable hot keys: Key 1 and 2
Keypad lock
Key tone on/off
Auto Registration
Auto hang up
Illuminated keypad
Enlarge dialing digit

Up to 16 hrs talk time
Up to 250 hrs standby time
Charge time: 8 hours
Line cord length: 1.8m
Power cord length: 1.8m
Range: Open field <300m; indoor <50m
Block callers/ Blacklist*: Restrict the phone from
ringing on specific incoming numbers
Event notifications: for missed calls
Non-slip grip: Pinstripe texture

Power

Battery Capacity: 500 mAh
Mains power: AC 100-240V ~50/60Hz
Battery type: AAA NiMH Rechargeable
Power Consumption: <0.7 W

Packaging dimensions

Height: 13.6 cm
Packaging type: Carton
Type of shelf placement: Laying
Width: 18.5 cm
Depth: 6 cm
Number of products included: 1
EAN: 48 95229 14020 2
Gross weight: 0.3696 kg
Nett weight: 0.2906 kg
Tare weight: 0.079 kg

Picture/Display

Display size: 4.6cm / 1.8"
Backlight color: White
Display type: Reversed dot matrix
Backlight: Yes

Memory Capacity

Call log entries: 50 entries
Phonebook: 50 names and numbers
Redial List Capacity: 20 last numbers
Phonebook store in the base
Multiple phonebook entries: up to 2 numbers

Security

Transmission encryption : Yes

SAR Value

Philips handsets: <0.1 W/kg

Eco Design

Eco+

Network Features

Compatible: GAP

