

PHILIPS

Bluetooth® turntable

CENTURY

Retro design, modern sound

3-speed turntable

Bluetooth® 5.4

Bass-reflex speakers



TAV3000B



The Stevie

Vinyl singles and LPs. Gramophone records. Playlists. Vibe to it all with the retro Bluetooth® turntable that spins as good as it streams. You don't even need separate speakers to party—this deck has built-in stereo speakers.

Century range. All-in-one Bluetooth® turntable.

- Looks from back then, sound from now
- 3-speed belt-driven turntable. Plays all your records
- Streams tunes too. Two-way Bluetooth® and Auracast™

The Stevie celebrates 100 years of Philips sound

- Rich stereo sound from built-in speakers
- Two 2.5" full-range drivers and a bass-reflex port
- Replaceable stylus, removable dust cover, auto-stop

Retro. Also, modern.

- The connections you want. Aux-out, audio-in, headphone out
- Philips Entertainment app. Simple sound control
- Responsible design and packaging

Highlights

Retro. Also, modern

It might look like your uncle's deck, but this turntable comes right up to date with its rich, warm sound and modern functionality. The all-in-one design fits perfectly on desks and sideboards—plus you get Bluetooth® convenience and our handy companion app to go with your vinyl.

3-speed belt-driven turntable

From crate-digging finds to your most prized limited editions, you can spin 33 1/3 and 45 records—or even listen to 78 rpm gramophone records from way back in the day. Simply slide the selector to select the speed you want, then sit back and get lost in the music.

Bluetooth® 5.4 and Auracast™

Two-way Bluetooth® connectivity lets you stream playlists to the turntable's built-in speakers—or play your records through your wireless speakers or headphones. You can also broadcast music out from this record player to as many Auracast™-compatible speakers as you want.

Great sound

With two 2.5" full-range drivers and a bass-reflex port, The Stevie is powerful enough to fill a small room with music. Sit back and relax or break out those dance moves as you enjoy rich, warm stereo sound that doesn't skimp on the bass and can get loud without distortion.


Replaceable stylus

The included Audio-Technica ATN3600L stylus tracks just right to keep those grooves sounding fresh and can be replaced if needed. Auto-Stop prevents records spinning when they're finished, which also helps reduce wear on the stylus. You can remove the dust cover to better operate the tonearm—or because you like how The Stevie looks without it.

The connections you want

Ports include an RCA aux-out to connect to your hi-fi set up, and a 3.5 mm headphone out to connect to your wired headphones. There's also an audio-in port so you can connect external devices like a CD or MP3 player and use The Stevie's internal speakers for the music.

Philips Entertainment app

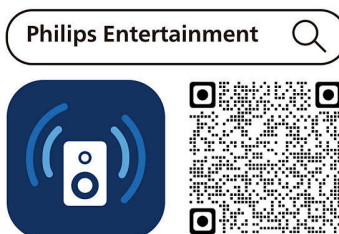

Download our companion app and you can use your smart device to select preset sound styles from the Digital Sound Control menu, fine-tune

bass and treble frequencies in the equaliser or create your own custom EQ setting: perfect for tweaking the vibe to suit the genres you love.

Responsible design



We're continually working to make our supply chain more sustainable and transparent. This turntable is made with post-consumer recycled plastics and our packaging uses FSC-certified recycled cardboard and soy-based ink.

Specifications

Sound

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equaliser (on app)

Volume control: rotary

Frequency response: 60 Hz - 20 kHz

Sound mode: Bright, Warm, Balanced, Powerful, Clear

Maximum output power (RMS): 6 W (phono), 12 W (BT, audio in)

Speaker impedance: 6 ohm

Loudspeakers

Full-range driver diameter: 2.5"

Number of full-range drivers: 2

Driver configuration: 1-way

Number of sound channels: 2.0

Connectivity

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Streaming
Format: SBC, LC3

Bluetooth range: Line of sight, 30 m or 100 ft

Headphone jack: 1 x 3.5 mm

Audio in: 1 x 3.5 mm

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Broadcasting, Receiving

Multiple speaker technology: Auracast

Smart Home: n.a.

Aux out: 1 x RCA (L/R)

Audio playback

Playback media: Bluetooth, Audio-in, Vinyl, LP, Gramophone records

Convenience

Buttons and controls: Power on/off, Main unit volume, Source switch, Play/Pause, Previous/Next track, Auracast, BT out

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240 VAC, 50/60 Hz

Standby power consumption: <0.5 W

Packaging dimensions

Height: 25.5 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 49.5 cm

Depth: 40.4 cm

Number of products included: 1

Gross weight: 6.25 kg

Net weight: 4.5 kg

Tare weight: 1.75 kg

Accessories

Included accessories: AC/DC Adapter, Quick start guide, Warranty Leaflet, Safety warranty sheet, Slipmat, 45 rpm adapter

Dimensions

Main Unit (W x H x D): 420 x 179 x 348 mm

Main Unit Weight: 4.35 kg

Turntable

Turntable type: Auto-stop

Drive method: Belt-driven

Supported record size: 7 inch, 12 inch

Rotation speed (rpm): 33 1/3, 45, 78

Stylus: Replaceable

Dust cover: removable

