

# PHILIPS

## Wireless speaker

LED lightshow

Bass+ and Auracast™

20 hours play time

Wrist strap and splash proof

TAS2000B



## Lights up and packs a punch

Get out there with the splash-proof compact speaker that gives you up to 20 hours play time on a single charge. Funky LED lights set the vibe, Bass+ delivers deep bass at any volume, and you can connect to other speakers for bigger sound.

### **Portable speaker. Plays long, packs easy**

- Bold sound with surprisingly deep bass at any volume
- 20 W max (10 W RMS), Bass+ tech, and passive radiators
- Plays long, travels easily, and doesn't mind a little rain
- 20 hours play time and built-in mic for calls

### **Anywhere you go. Your music, your way.**

- Wrist strap and IPX5 splash proof
- Bluetooth® streaming, multipoint, USB playback
- TWS and Auracast™ for multi-speaker setups
- Philips Entertainment app. Smart control for your speaker

### **Funky, compact, and made responsibly**

- Beat-synced lightshow. Rainbow LEDs pulse to the music
- GRS-certified recycled plastic
- Dimensions: (WxHxD) 18.1x7.1x7.1 cm
- Responsible packaging

# Highlights

## Bold sound, Bass+

This compact portable speaker packs a punch for its size with 20 W max (10 W RMS) of rich sound. Twin passive radiators and our exclusive Bass+ technology keep the bass deep and tight—even if you're listening at lower volumes. There's also a built-in mic, so if a call comes in you can take it hands-free.

## Up to 20 hours play time

With up to 20 hours play time on a single charge, you can keep the tunes coming all day and into the night. The handy wrist strap makes it easy to carry this speaker, and the IPX5 splash-proof build protects from raindrops and spills. A 30-minute charge gets you 5 hours of play time, and a full recharge takes around 2.5 hours.

## Bluetooth® 5.4, USB playback

Playlists ready? Bluetooth® 5.4 brings you a steady connection for seamless streaming. Multipoint lets you connect to two Bluetooth® devices at the same time, and you can plug a portable music player or a thumb drive into the USB-A port on the speaker.

## TWS and Auracast™ compatible


Want more? You can pair with another TAS2000 speaker for True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what

you're playing out to other compatible speakers: the LC3 codec is supported for better sound, and setup is simple via our companion app.

## Beat-synced party lights

As the beats flow, colorful RGB LED lights pulse over and around the twin passive radiators. There are five different light modes to choose from. Simply press the light button on the speaker or use our companion app to get started—and let everyone know you came to party.

## Philips Entertainment app

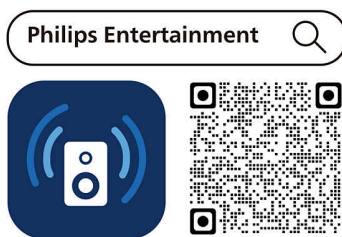

Our handy companion app lets you select a source, control playback and Bass+, switch between different light modes, check battery life, and more. Plus, an in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

## GRS-certified recycled plastic



We use post-consumer recycled plastics in this product, and our packaging is plastic-free.

## Responsible packaging



Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

# Specifications

## Sound

Output power (RMS): 10W  
Sound System: Mono  
Sound enhancement: Bass+  
Frequency response: 90 Hz - 20 KHz  
Output power (MAX): 20W

## Loudspeakers

Full range driver diameter: 48mm  
Number of full range drivers: 1  
Driver configuration: Full range  
Number of sound channels: 1  
Passive radiators: 2

## Connectivity

Type of cable: USB charging cable (Type-C)  
USB: Type-A (playback), Type-C (charging)  
Bluetooth version: 5.4  
Bluetooth profiles: A2DP, AVRCP, HFP, Multipoint (Multipair) support, Streaming Format: SBC, LC3  
Bluetooth range: Line of sight, 30m or 100ft  
DLNA Standard: No  
Multiple speaker connection  
Multiple speaker scenario: Broadcasting, Receiving, Stereo  
Multiple speaker technology: Auracast TX/RX, TWS

## Supported Audio Formats

Bluetooth: SBC  
USB: MP3

## Convenience

Automatic power off  
Ease of Installation: Automatic pairing  
Call Management: Answer/End Call  
Volume control: Tact switch  
Water resistance: IPX5  
Built-in microphone  
Light Effect: Yes, 5 light modes  
Display screen: No  
Handsfree calling

## Compatibility

Smartphone/tablet APP control

## Power

Battery Capacity: 2500mAh, 3.7V  
Battery type: lithium (built-in)  
Operating time on battery: 20 hour(s)  
Charging time: 2.5 hour(s)  
Power bank: No

## Packaging dimensions

Height: 20.7 cm  
Packaging type: Box  
Type of shelf placement: Laying

Width: 8.9 cm  
Depth: 8.2 cm  
Number of products included: 1  
Gross weight: 0.622 kg  
Nett weight: 0.524 kg  
Tare weight: 0.098 kg

## Product dimensions

Height: 7.1 cm  
Width: 18.1 cm  
Depth: 7.1 cm  
Weight: 0.477 kg

## Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet  
Cable: USB charging cable

## Design

Color: Black

## Sustainability

Plastic shell: contains GRS-certified 37% recycled post-consumer PC + 16% recycled post-consumer ABS TE-00132492

