

PHILIPS



Wet & Dry electric
shaver

Shaver Series 8000

Dual SteelPrecision blades

Nano SkinGlide

Motion Control sensor

360-D Flexing heads



S8696/86

Excellent closeness, smooth skin feel with SenseIQ Technology

The Philips Norelco Series 8000 delivers a smooth skin feel and skin-level closeness - even on 5-day beards. Equipped with advanced SenseIQ technology, the shaver senses, adapts and guides on the correct motion, for better skin protection.

A close shave

- Flexible heads follow your facial contours
- Engineered for precision and cutting efficiency

SkinIQ technology

- Guides you to an improved technique with fewer passes
- Enhanced shaving experience with app**
- Adjusts to your beard for effortless shaving
- 30% smoother*** gliding with Nano SkinGlide Coating

For a convenient shave

- 1-hour charging time and 5-min quick charge
- 50 minutes of cordless shaving
- Deep cleaning in just 1 minute for hygienic shaving

Sustainability

A closer shave

Shaver Series 8000

Wet & Dry electric shaver

S8696/86

Highlights

Dual SteelPrecision blades



Philips rotary shavers are specifically designed to match your natural hair growth, capturing all the hairs growing in any direction, thanks to 360-degree rotating blades. With up to 150,000 cutting actions per minute, the Dual SteelPrecision blades cut more hair per stroke*.

Nano SkinGlide Coating



A protective coating lies between the shaver heads and your skin. Made of up to 250,000 micro-tech beads per square centimeter, improves gliding by up to 30%***, to minimize irritation.

Motion Control sensor



Motion-sensing technology tracks how you shave and guides you to the optimal movements. After just three shaves, the majority of men achieved a better shaving technique for fewer passes**

360-D Flexing heads



Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and comfortable shave.

Power Adapt sensor



The intelligent facial-hair sensor reads hair density 250 times per second. The technology dynamically auto-adapts cutting power for an effortless and gentle shave.


Personalization via app

Perfect your shave by pairing your shaver with the Philips GroomTribe app. Shave by shave, track the progress of your skin, personalize your shave and master your technique for a shave that's as close as it is kind to skin.

Cable-free Quick Clean Pod

Powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute, keeping it performing at its best for longer. The pod is 10x more effective than cleaning with water****. It is the world's smallest cleaning pod, so you can store it easily and use it anywhere.

Hair-Guide Precision heads

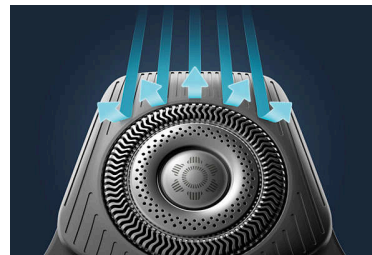

The new shape of the shaving heads is engineered for precision. The surface is enhanced with hair guiding channels, designed to move hair into an effective cutting position.

Wet & Dry

Adapt your shaving routine to your needs. With Wet & Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam even under the shower.

Pop-up trimmer

Complete your look using the shaver's pop-up precision trimmer. Integrated into the shaver's body, it's the perfect way to maintain a mustache and trim sideburns.

USB-A charging

At Philips, we drive sustainability in all aspects of product creation. Our ambition is to reduce waste and minimize the number of USB adaptors we put in the market.

Shaver Series 8000

Wet & Dry electric shaver

S8696/86

Highlights

1-hour charging time

Charge your shaver fully in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

Sustainable shaving innovation

Our production facility for blades uses 100% renewable electricity, and our packaging is made with recyclable materials. All shavers come with an Eco passport.

50 minutes of cordless shaving



Shave cordlessly for up to 50 minutes after one full battery charge.

Shaver Series 8000

Wet & Dry electric shaver

S8696/86

Specifications

SmartClick attachment

Fits product type: RQ585/51 DOES NOT fit angular head type

Accessories

Charging stand

Maintenance: Cleaning brush

Nose trimmer included

Quick Clean Pod

Integrated pop-up trimmer

Travel and storage: Travel case

USB-A cable included: Power adapter not included

Software

App: GroomTribe, Connects via Bluetooth®

Smartphone compatibility: iPhone and Android™ devices

Power

Run time: 50 minutes

Charging: 1 hour full charge, 5 min quick charge

Automatic voltage: 5 V

Battery type: Li-ion

Max power consumption: 9 W

Design

Color: Ink Black

Handle: Rubber grip

Shaving heads: Angular

Service

2-year warranty

Replacement head SH91: Replace every 2 yrs with SH91

Shaving Performance

Contour following: 360-D Flexing heads

Shaving system: SteelPrecision blades

SenseIQ technology: Nano SkinGlide coating, Motion Control sensor, Power Adapt sensor

Ease of use

Display: LED display, Battery level indicator, Motion control indicator, Travel lock

Cleaning: One-touch open, Fully washable

Charging: USB-A Charging (5V~ / ≥1A)

Wet & Dry: Wet and dry use

