

# PHILIPS



Wet and Dry electric shaver

Shaver series 9000

Skin-level closeness

Pressure Guard sensor

Dual SteelPrecision blades

Dermatologically tested



S9975/54

## Superior closeness\*, personalised skin comfort with SkinIQ Technology

Discover the world's most intelligent shaver powered by AI, Philips Shaver Series 9000. Cuts at skin level with Lift & Cut shaving system, while SkinIQ technology gives real-time pressure feedback to protect your skin.

### A closer shave

- Cuts hair in every direction with 360-degree rotating blades
- Skin-level closeness with Lift & Cut shaving system

### SkinIQ technology

- Always the optimal pressure with the Pressure Guard Sensor
- Adapts to your contours with 360 degree Flexing Heads
- 30% smoother\*\*\* gliding with Nano SkinGlide Coating

### For a convenient shave

- Precision trimmer integrated in the handle
- Effortless charging with convenient stand available to hand.
- Enhance your shaving experience with the Philips Shaving App\*\*\*\*
- Made with care for you and the planet
- OLED display for dynamic SkinIQ and shaver notifications

### Premium experience

- Deep cleaning in just 1 minute with the Quick Cleaning Pod

## Shaver series 9000

Wet and Dry electric shaver

S9975/54

# Highlights

### Lift & Cut System



Our patented, unique Lift & Cut rotary technology lifts the hair gently out of its root before cutting it precisely at skin level close (up to 0.00 mm to the skin) without the blades even touching your skin.

### Dual Steel Precision blades



Philips rotary shavers are specifically designed to match your natural hair growth, capturing all the hairs growing in any direction, thanks to 360-degree rotating blades. With up to 150,000 cutting actions per minute, the Dual Steel Precision blades cut more hair per stroke\*\*.

### Pressure Guard sensor



Using the right pressure is key for closeness and skin protection. Advanced sensors in the shaver read the pressure you apply, and the innovative light signal shows when you are pressing too hard or too little. For a personalised shave that is just right for you.

### 360 D Flexing heads



Designed to follow the contours of your face and even your neck, this Philips electric shaver has fully flexible heads that turn 360° for a thorough and comfortable shave.

### Up to 5 years' warranty\*\*\*\*\*



Our shavers are engineered for excellence and come with a 5 year warranty so you can enjoy ultimate reliability and performance, shave after shave.

### Nano SkinGlide Coating



A protective coating lies between the shaver heads and your skin. Made from up to 250,000 micro-tech beads per square centimetre, it improves gliding by up to 30%\*\*\*, to minimise irritation.

### Personalisation via app\*\*\*\*



Perfect your shave by pairing your shaver with the Philips Shaving app\*\*\*\*. Shave by shave, track the progress of your skin, personalise your shave and master your technique for a shave that's as close as it is kind to skin.

### Pop-up trimmer



Complete your look using the shaver's pop-up precision trimmer. Integrated into the shaver's body, it's the perfect way to maintain a moustache and trim sideburns.

### Sustainability



By replacing 30% of our internal plastics with recycled plastics, we are saving tons of virgin plastic in our production. On top of that, our blades are made from 80% recycled steel and produced in a factory that uses 100% renewable energy.

## Shaver series 9000

Wet and Dry electric shaver

S9975/54


# Highlights

### Charging stand



Fully charge your shaver within 1 hour in the stand. A stand created for both conveniently charging your device and neatly storing it away.

### Advanced OLED display

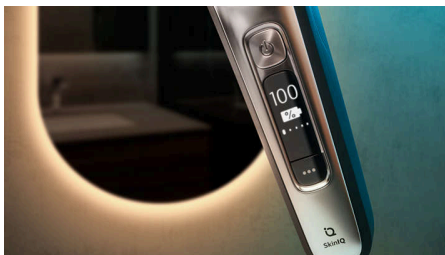

The first Philips shaver with a dynamic OLED display reveals every shaver feature and notification with sharp, fluid animation. The intuitive interface includes SkinIQ guidance, battery status, cleaning advice and more.

### 60 minutes of cordless shaving



This advanced charging system gives you two convenient options: 60 minutes of running time after a full charge, or a quick charge for one shave.

### Cable-free Quick Clean Pod



The powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute, keeping it performing at its best for longer. The pod is 10x more effective than cleaning with

water\*\*\*\*\*. It is the world's smallest cleaning pod, so you can store it easily and use it anywhere.

# Shaver series 9000

Wet and Dry electric shaver

S9975/54

## Specifications

### SmartClick attachment

Fits product type: RQ585/51 DOES NOT fit angular head type

### Accessories

Maintenance: Cleaning brush  
Charging stand  
Quick Clean Pod  
Integrated pop-up trimmer  
Travel and storage: Travel case

### Software

Software update: Philips offers relevant software updates for a period of 2 years after the date of purchase  
App: GroomTribe, Connects via Bluetooth®  
Smartphone compatibility: iPhone and Android™ devices

### Power

Run time: 60 minutes  
Battery type: Li-Ion  
Automatic voltage: 100-240 V  
Charging: 1 hour full charge, 5-min quick charge  
Max power consumption: 9 W  
Off mode (no attachments): < 0.1 W

### Design

Handle: Rubber grip  
Colour: Chrome Silver  
Shaving heads: Angular

### Service

Replacement head SH91: Replace every 2 yrs with SH91  
2 + 3 year warranty\*\*\*\*\*

### Shaving Performance

Contour following: 360 D Flexing heads  
Shaving system: Dual SteelPrecision blades  
SkinIQ technology: Pressure Guard sensor, Nano SkinGlide Coating, Motion Control sensor, Power Adapt sensor

### Ease of use

Display: Advanced OLED display, Pressure guidance, Battery level indicator, Motion control indicator, Travel lock  
Wet & Dry: Wet and dry use  
Cleaning: One-touch open, Fully washable

