

# PHILIPS

Push pull smart door  
lock

1000 series

Intuitive push-pull use

System wake-up by manual touch

Auto locking function

With 60 mm door backset

DDL111LAFBB



## Wonderful life starts from Alpha

Full automatic: more safety & freedom

With simplicity brought by speedy unlock and auto lock and safety ensured by dual verification and Class C lock cylinder, Alpha is a solid choice for a smart life. The ergonomic design even makes it a pleasure to push the door open.

### **Extraordinary design brings outstanding experience**

- Smooth and wearable, always like new

### **Easy life doesn't stop there**

- Enjoy the reassurance with each close
- Protect home security at all time
- Unlock swiftly at one go
- Unlock and open the door at one go

### **Multiple protection in one for overall home safety**

- Protect your PIN security in real time
- Security is never forgotten
- Instant alarm upon inside unloc
- No more safety risks, be reassured while away
- Higher reliability and security

## 1000 series

Push pull smart door lock

DDL111LAFBB/97

# Highlights

### Auto locking



Philips Alpha-5HB employs full automatic mortise. Without the need for any extra action, the deadbolt will spontaneously pop out after you close the door. If the door is not locked properly, the mortise will give an alarm to remind you of the door lock status.

### Hidden PIN code



Philips Alpha-5HB comes with the feature of Hidden PIN Code technology which allows you to enter random number combinations to successfully get identified as long as there is consecutive input of the real PIN code. This feature can effectively prevent peeping and safeguard your real PIN code.

### Multiple alerts



Philips Alpha-5HB is featured with all-around alerts, which not only improves the anti-theft level of your home, safeguard you and your family in real time, but also reminds you of the door lock status for better convenience.

### Dual verification unlocking



In dual verification mode, you can use a combination of any two access methods among fingerprint, PIN code and key tag to ensure double-layer security for your home.

### IML brushed finishing



The IML brushed surface has the hardness higher than 2H. Besides, it's waterproof, moisture proof and can keep fingerprint residue out.

### Intuitive fingerprinting



The fingerprint sensor is integrated in the push-pull handle so that when you hold the handle, your finger will naturally fall on the sensor. You can simply reach out and touch the sensor, then push to open after a successful fingerprint verification. The one-step unlocking will definitely bring you a fast and convenient door opening experience.

### One-key outside forced lock



Before leaving home, you can touch the outside forced lock key to enable the function. In this mode, opening the door from inside the room will trigger an alert. This feature can effectively warn you of security risks and upgrade the level of home security.

## 1000 series

Push pull smart door lock


DDL111LAFBB/97

# Highlights

### Patented full auto mortise



Full auto mortise

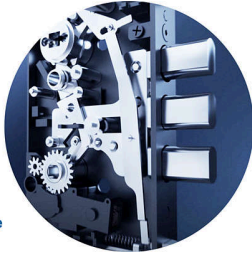

The upgraded full automatic mortise makes it possible for instant unlocking right after a successful verification. Once you are recognized, you can directly push or pull the handle to open the door, which greatly simplifies the use of your door lock and brings you a fast and convenient in and out experience.

### Safe handle switch



Enable safe handle function



You can enable the safe handle function before you leave home. After the door is locked, the indoor handle will be fixed to ensure that nobody could open the door by pushing the indoor handle. This feature can effectively prevent unlocking from indoor, thus eliminating security risks and improves anti-theft performance.

### Class C lock cylinder



C-grade lock cylinder



Lock cylinder is the key component that controls the opening of the lock and is compared to the heart of a lock. Class C lock cylinder employs multiple antitheft technologies with unique design of the pin tumbler and vane structure, and is able to give high performance on preventing technical lockpicking.

## 1000 series

Push pull smart door lock

DDL111LAFBB/97

# Specifications

### Design & Appearance

**Color:** Obsidian black

**Handle:** Push-pull handle

**Main Material:** Zinc alloy and aluminium alloy

**Surface Processing:** Electroplating

**Fingerprint Sensor:** Semiconductor

**Emergency Escape Design:** Indoor fast opening mortise

**Ergonomic Design:** Push-pull handle design

### Access Solution

Fingerprint

Password/PIN Code

Card/Key Tag

Mechanical Key

Bluetooth

### Lock Capacity

Fingerprint: Up to 100

Card/Key Tag: Up to 100

Master PIN Code: 1

User PIN Code: Up to 10

One-time PIN Code: 1

### Power Specification

**Power Supply:** 4 AA batteries

**Battery Type:** Alkaline Batteries

**Time of Use:** 10 months\*

**Maximum Batteries Capacity:** 8 batteries

**Emergency Power Supply:** 5V power bank

**Working Voltage:** 4.5-6V

### Easy Operation

**Indicator:** Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt

**Voice Guide:** Human voice guide

### Smart Lock Functions

**Mortise:** Full auto mortise, Class C lock cylinder

**Locking Function:** Indoor deadlock, System locking

**Safety Function:** Dual verification, Hidden PIN code, Outside forced lock function, Safe handle function

**Alarm Function:** Anti-dismantle alarm, Outside forced lock alarm

### Mode

**Operation Mode:** Auto mode, Manual mode

**System Setup Mode:** Dual verification mode, Normal mode

### Installation

**Door Thickness:** 38-60 mm, 60-90 mm, 90-120 mm, Other range\*

**Door Opening Direction:** Left inward opening, Left outward opening, Right inward opening, Right outward opening

**Door Type:** Antitheft door, Copper door, Wooden door

**Multi-lock Point:** No

### Accessory Parts

**Accessorial Battery:** 4 AA alkaline batteries

**Mechanical Key:** 2

**Smart Key Tag:** 2

**Installation Accessories**

**Mortise**

**Mounting Plate**

**Drilling Template**

**Certificate**

**Cleaning Pad**

**Warranty Card**

**Quick Start Guide**



\* 10 months: this is internal test data; actual duration may vary with usage frequency.

\* Other range: The included installation kit is suitable for doors with the mentioned thickness. For doors outside this range, please contact authorized consumer care centers or designated offline dealers.

\* The digital keypad shown in the product photos may differ from the actual display. Please refer to the digital keypad's appearance during actual use.