

PHILIPS

Hanging Air Conditioner

Ab1 b1 Inverter T3 1.5 ton


Air Deep Clean Technology

Wide voltage operation

Anti-cold Wind for Heating

One Button Turbo

FAC18VDAB1

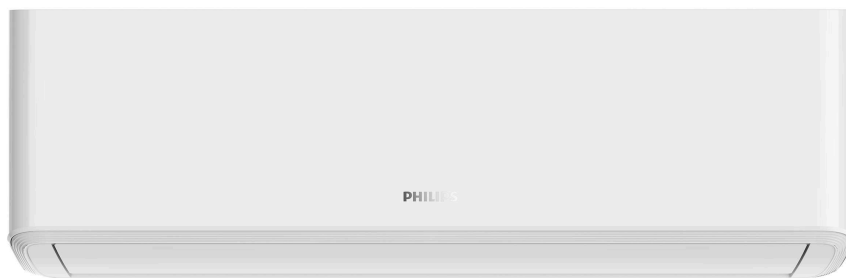


Air b1 Inverter T3 1 ton

R410a T3 Inverter Ampere Control Cooling and Heating

Iraq Ab1

- Air Deep Clean Technology
- Wide voltage operation
- Anti-cold Wind for Heating
- One Button Turbo
- Precise temperature control at 0.5°C
- Fault Detection
- Ampere Control
- Anti-corrosion
- Full DC / EEV
- Automatic Defrost
- Filter Cleaning Reminder
- Intelligent Detection of Operation
- Compact Design

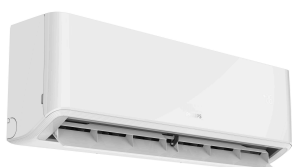

Ab1 b1 Inverter T3 1.5 ton

Hanging Air Conditioner

FAC18VDAB1/64

Highlights

Air Deep Clean Technology

Core intelligent wash +57°C sterilization Multi functional filter

Wide voltage operation

the measured 145V~270V can operate normally, and when the voltage is unstable, it can still meet the operation of the whole machine to satisfy the more severe conditions of use.

Anti-cold Wind for Heating

In heating mode , adjust angle of the guide louver before the air is heated, which can prevent the cool wind

One Button Turbo

12K airflow max 850m³/h

Precise temperature control at 0.5°C

0.5°C precise temperature control More comfortable and accurate

Fault Detection

Automatic fault detection Display fault code
Timely reminder Easy for troubleshooting

Ampere Control

Ampere control | 2A/3A/4A/5A/6A Make sure that the current value of the air conditioner matches the current value of the generator

Anti-corrosion

Golden fins Indoor & outdoor unit

Full DC / EEV

Full DC motor Japanese compressor SANYO
Electronic expansion valve

Automatic Defrost

Automatic & manual defrosting Improve the efficiency of heat exchange

Filter Cleaning Reminder

After powered up 1000h Remind to clean the filter Improve the heat exchange efficiency

Intelligent Detection of Operation

Intelligent detection Internal load & environmental load changes in frequency Meet the dynamic balance

Compact Design

Main board easily removed PCB main board vertically placed Easy disassembly & maintenance

Specifications

Classification

Air conditioning: Split air conditioning

Design and Appearance

Color: White

Indoor unit Size(W*H*D): 986x312x218

Outdoor unit Size(W*H*D): 913X608X384

Indoor Unit Weight(kg): 12

Outdoor Unit Weight(kg): 34.5

Performances

Air volume: 1050 m³/h

Noise Level(dB(A)): 32

Cooling Capacity(Btu/h): 18500

Heating Capacity(Btu/h): 19275

