

PHILIPS



On-ear wireless headphones

Lightweight on-ear headphones

BASS+ sound

Up to 60 hours play time

Clear calls



SHB3075M2PK

Superb comfort, great sound

Slip these wireless on-ear headphones on and you'll enjoy real comfort while you listen. You get rich sound with punchy bass, and up to 60 hours of playback. Headphones for those who need more bass in their beats without any extra bulk.

Rich sound with punchy bass

- BASS+ sound signature offers rich sound with punchy bass
- Powerful 32 mm neodymium drivers

On-ear wireless headphones. Comfort and style


- So light and comfy, you can wear them for hours
- Up to 60 hours play time with quick charging
- Stylish matte colorways

Everyday ease

- Bluetooth® multipoint connectivity
- Clear calls. They'll hear what you're saying
- Sleek portable adjustable design
- Convenient multi-function button on right ear cup

Highlights

BASS+ sound signature

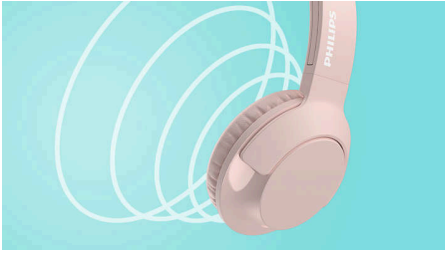

Music to podcasts, these wireless headphones make the most of the sounds you love! You'll enjoy warm, rich sound with punchy bass from the drivers, which are tuned to the Philips sound signature.

Lightweight and comfy



These on-ear headphones are primed for everyday comfort. The soft PU cushion is so light you'll barely feel it, and the headband's ear cups

can be adjustable so they feel just right. Each ear cup is padded with memory foam: the more you wear them, the more you'll love them.

Up to 60 hours play time



With up to 60 hours of play time, these wireless headphones will see you through plenty of playlists. If you need a quick boost, charging these on-ear headphones for just 15 minutes will get you an extra 6 hours of play time.

Bluetooth® 6.0

Bluetooth® 6.0 brings you a steadier connection for seamless, high-quality streaming, and multipoint connectivity lets you connect to two Bluetooth® devices at once. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

Clear calls

Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise-reduction algorithm quietsens some of the background noise from the world around you.

Adjustable design

Bring them with you! With their stylish matte colorways and adjustable design, there's nowhere you can't go with these on-ear wireless headphones. The ear cups feature a flat-fold design to ensure a great fit.

Convenient multi-function button

A handy multi-function button on the right ear cup lets you manage calls or control playback and volume. Button controls on the right ear shell enable you to control music and calls with a press.

Specifications

Sound

Acoustic system: Closed
Frequency range: 20 - 40,000 Hz
Impedance: 16 Ohm
Maximum power input: 20 mW
Sensitivity: 112dB (1k Hz, 126mV)
Speaker diameter: 32 mm
Driver type: Dynamic

Connectivity

Bluetooth version: 6.0
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: SBC

Outer Carton

Length: 18.8 cm
Number of consumer packagings: 3
Width: 16.5 cm
Gross weight: 0.981 kg
Height: 22.00 cm
GTIN: 1 48 95229 17120 3
Nett weight: 0.48 kg
Tare weight: 0.501 kg

Convenience

Volume control
Type of controls: Button

Power

Number of batteries: 1 pcs
Music play time: 60 hour(s)
Charging time: 2 hour(s)
Fast charging time: 15 mins for 6 hrs
Battery weight (Total): 8 g
Battery capacity(Headphones): 400 mAh
Battery type(Headphones): Lithium Polymer (built-in)

Packaging dimensions

Height: 22.6 cm
Packaging type: Carton
Type of shelf placement: Hanging
Width: 17.3 cm
Depth: 5 cm
Number of products included: 1
EAN: 48 95229 17120 6
Gross weight: 0.253 kg
Nett weight: 0.160 kg
Tare weight: 0.093 kg

Product dimensions

Height: 16.57 cm
Width: 13.24 cm
Depth: 7.62 cm
Weight: 0.135 kg

Accessories

Quick Start Guide
Charging cable: USB-C cable, 200 mm

Design

Color: Pink
Wearing style: Headband
Foldable design: Flat
Ear coupling material: Synthetic leather
Ear fitting: On-ear
Earcup type: Closed-back

Telecommunication

Microphone for call: 1 mic

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant
Voice assistant activation: Press Multi-Function button
Voice assistant support

