

PHILIPS

Wireless speaker

Funky sound with Bass+
Auracast™ for bigger sound
20 hours play time
Splash proof. Handy strap



TAS1000B

The tiny dancer

Slip it in your pocket. Hang it from your bag. Attach it to the handlebars of your bike. When you want bigger bassier sound than you can get from your phone, this splash-proof ultra-portable Bluetooth® speaker is the perfect way to flow.

Ultra-portable speaker. Pocket-sized big vibes.

- Funky sound with surprisingly good bass
- 10 W max (5 W RMS), Bass+ tech, and passive radiator
- Plays all day and doesn't mind a little rain
- 20 hours play time and built-in mic for calls

Hit the road ready to play


- Small, tear-resistant strap and IPX5 splash proof
- Steady Bluetooth® streaming even in busy locations
- TWS and Auracast™ for multi-speaker setups
- Philips Entertainment app. Smart control for your speaker

Grab-and-go design. Made responsibly

- RCS-certified recycled plastic
- Responsible packaging
- Dimensions: (HxWxD) 4.35x7.5x7.5 cm

Highlights

Funky sound, Bass+

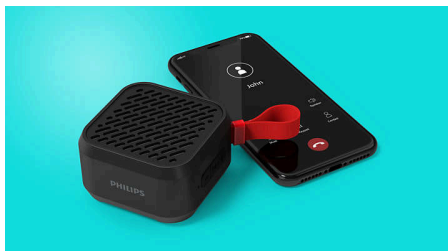

This little speaker knows how to go big on the tunes you love. You get 10 W max (5 W RMS) of vibrant sound, plus solid bass thanks to its passive radiator and our exclusive Bass+ technology. There's a built-in mic for hands-free calls too.

Up to 20 hours play time




With up to 20 hours play time on a single charge, you can keep the tunes coming. The small, tear-resistant strap makes it easy to hang this speaker from your backpack, or your bike's handlebars, and the IPX5 splash-proof build protects from raindrops and spills. A full recharge takes around 2.5 hours via USB-C.

Bluetooth® 5.4


Playlists ready? Bluetooth® 5.4 brings a faster, steadier connection that won't dip in built-up areas, and it gives you a wider range. You can use the Philips Entertainment companion app to select your source.

TWS and Auracast™ compatible

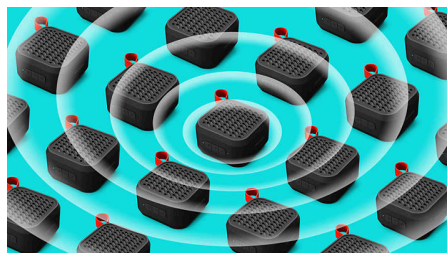

Want more? You can pair with another TAS1000 speaker via True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what you're playing out to other compatible speakers: the LC3 codec is supported for better sound, and setup is simple via our companion app.


Philips Entertainment app

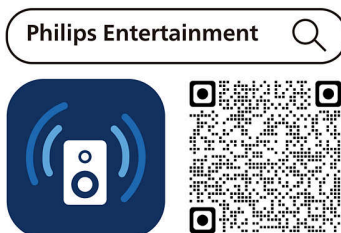

Our handy companion app lets you select source, control playback and Bass+, check battery life, and more. The PartyLink mode makes it simple to

connect to other speakers via Auracast™ for bigger sound—and our in-app ambient and nature soundscapes are great if you want to relax.

RCS-certified recycled plastic

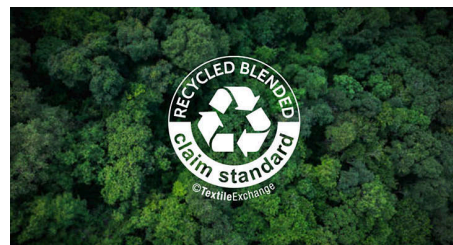

We use post-consumer recycled plastics in this product, and our packaging is plastic-free.

Responsible packaging



Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Specifications

Sound

Output power (RMS): 5W
Sound System: Mono
Sound enhancement: Bass+
Frequency response: 90 Hz - 20 KHz
Output power (MAX): 10W

Loudspeakers

Full range driver diameter: 45mm
Number of full range drivers: 1
Driver configuration: Full range
Number of sound channels: 1
Passive radiators: 1

Connectivity

Type of cable: USB charging cable (Type-C)
USB: Type-C (charging)
Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP, HFP, Streaming
Format: SBC
Bluetooth range: Line of sight, 30m or 100ft
DLNA Standard: No
Multiple speaker connection
Multiple speaker scenario: Broadcasting,
Receiving, Stereo
Multiple speaker technology: Auracast TX/RX,
TWS

Convenience

Automatic power off
Ease of Installation: Automatic pairing
Call Management: Answer/End Call
Volume control: Tact switch
Water resistance: IPX5
Built-in microphone
Light Effect: No
Display screen: No
Handsfree calling

Compatibility

Smartphone/tablet APP control

Power

Battery Capacity: 1500mAh, 3.7V
Battery type: lithium (built-in)
Operating time on battery: 20 hour(s)
Charging time: 2.5 hour(s)
Power bank: No

Packaging dimensions

Height: 8.5 cm
Packaging type: Box
Type of shelf placement: Standing
Width: 11.8 cm
Depth: 5.2 cm
Number of products included: 1

Gross weight: 0.236 kg
Nett weight: 0.196 kg
Tare weight: 0.04 kg

Product dimensions

Height: 4.16 cm
Width: 7.5 cm
Depth: 7.5 cm
Weight: 0.167 kg

Accessories

Included accessories: Quick start guide, World
Wide Warranty leaflet, Safety warranty sheet
Cable: USB charging cable

Design

Color: Black

Sustainability

Plastic shell: contains 9% RCS-certified recycled
post-consumer acrylonitrile butadiene styrene
TE-00132492

