

# PHILIPS

## Bluetooth party speaker

200 W max (100 W RMS), Bass+

Full-speaker lightshow

Bluetooth® Auracast™ and TWS

Replaceable battery, AC input

TAX5000E



## Big sound. Epic bass.

Bring on the bass beats! This party speaker plays loud with a whole lot of feeling. Our Bass+ tech delivers deep, distortion-free bass at any volume. Full-speaker party lights, dual mic, guitar inputs and echo effects bring the fun.

### **Portable party speaker. Deep, controlled bass.**

- Big sound for epic parties. 100 W RMS and Bass+
- 2 x 8" woofers, 2 x 2" tweeters
- Cue the tunes! Bluetooth®, AUX-in and USB playback
- TWS and Auracast™ for multi-speaker setups

### **Full-speaker lightshow and replaceable battery**

- Mic and guitar inputs, plus echo effects
- Full-speaker lightshow. Club vibes from top to bottom
- 13 different lighting modes let you set the perfect vibe
- Replaceable, rechargeable battery pack and AC input
- Up to 14 hours play time on a single charge

### **Rock up ready to party**

- Easy control via speaker panel or our companion app
- Built-in carry handle and wheels. IPX4 splash proof
- GRS-certified recycled plastic. Responsible packaging

# Highlights

## 200 W max (100 W RMS), Bass+

Love a good bassline? With two 8" woofers and our exclusive Bass+ technology, the bass on this party speaker will sound deep, rich and full—even if you're listening at lower volumes while chilling out at the end of the night. You get 200 W max (100 W RMS) of earth-shaking sound and the two 2" tweeters mean vocals don't just sing, they soar.

## Bluetooth® 5.4

Stream your playlists, plug in a USB drive or go ahead and hook up your DJ decks or CD player via audio-in. If you're streaming tunes, Bluetooth® 5.4 brings you a faster, steadier connection for better sound quality that won't dip. It also gives you a wider range so you can control those playlists from practically anywhere in the party.

## TWS and Auracast™ compatible

Want more? For a wider soundstage, you can pair with another TAX5000E speaker via True Wireless Stereo (TWS). For bigger events or the ultimate house party, you can broadcast the tunes to as many Auracast™ compatible speakers as you could ever need! Send the beats around the house or create a wall of sound in one room.

## Mic and guitar inputs

There's nothing like a karaoke session or impromptu live performance for bringing everyone together. This party speaker comes

equipped with two mic inputs and a 6.3 mm guitar input: you can control mic and guitar volume, and add echo effects using physical controls on the speaker panel or use our companion app.

## Full-speaker lightshow

When the tunes are pumping, a rainbow of colourful RGB LED lights shimmer and pulse on the surface of the twin woofers as well as along the sides and the bottom of the speaker. There are 13 light-effect modes to choose from: simply press the light button on the speaker or use our companion app to get the lightshow started.

## Replaceable battery, AC input

Built to keep the party tunes coming, this speaker features a rechargeable 5200 mAh lithium-ion battery that gives you up to 14 hours of play time on a single charge. You can recharge via AC power (approximately 4 hours), so the music doesn't need to stop. Plus, the battery pack can be easily swapped out when it reaches the end of its life.

## Splash proof and easy to move

Roll up to a friend's house. Set up on a patio. The carry handle and wheels make it easy to move this party speaker and it's splash proof, too. A little rain won't stop the tunes—and if you drop the bassline and hands go up with drinks still in them, just wipe off any spills and party on.

## Easy control

Philips Entertainment



You can take control of the volume, lights and karaoke effects via the speaker panel—or use the Philips Entertainment app, which also lets you fine-tune bass and treble frequencies. Want to keep the neighbours happy? You can turn Bass+ off and scale back the bass via our app or the Bass+ button on the speaker.

## Recycled materials



Post-consumer recycled plastics are used in this speaker and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink and the packaging itself uses FSC-certified recycled cardboard.

# Specifications

## Sound

Output power (RMS): 100 W  
Sound enhancement: Bass+, Karaoke  
Frequency response: 20 Hz - 20 kHz, ±3 dB  
Output power (MAX): 200 W  
Total harmonic distortion: 10%  
Speaker impedance: 4 ohm

## Loudspeakers

Driver configuration: 2-way  
Number of sound channels: 2  
Number of tweeters: 2  
Number of woofers: 2  
Tweeter diameter: 2"  
Woofer diameter: 8"

## Connectivity

Bluetooth version: 5.4  
Bluetooth profiles: A2DP, AVRCP, Streaming  
Format: SBC  
Bluetooth range: 10 M (free space)  
USB: Type-A (playback)  
Audio in: 1 x 3.5 mm Line in  
USB charging: 5 V, 1 A  
Mic in: 2 x (6.3 mm w/ vol control)  
Guitar input: 1 x (6.3 mm w/ vol control)  
DLNA Standard: No  
Multiple speaker connection

Multiple speaker scenario: Stereo, Broadcasting, Receiving  
Multiple speaker technology: TWS, Auracast  
Smart Home: None

## Supported Audio Formats

Bluetooth: SBC  
USB: MP3

## Convenience

Karaoke: echo control, MIC volume  
Buttons and controls: Mic volume and echo, Guitar volume, Lighting switch, Bass+, Auracast, Play/Pause, Bluetooth, Power on/off, Main unit volume, Treble and Bass control  
Volume control: Rotary  
Water resistance: IPX4  
Light Effect: Yes, 13 light effects  
Guitar control

## Compatibility

Smartphone/tablet APP control

## Power

Battery Capacity: 5200 mAh, 7.3 V  
Power supply: 100-240 VAC, 50/60 Hz  
Standby power consumption: <0.5 W

Battery Type: Lithium-ion  
Operating time on battery: 14 hour(s)  
Charging time: 4 hour(s)

## Packaging dimensions


Height: 84 cm  
Packaging type: Box  
Type of shelf placement: Standing  
Width: 41 cm  
Depth: 41 cm  
Number of products included: 1  
Gross weight: 14.8 kg  
Net weight: 12.2 kg  
Tare weight: 2.6 kg

## Product dimensions

Height: 73 cm  
Width: 32 cm  
Depth: 32 cm  
Weight: 12 kg

## Accessories

Included accessories: USB cable, Quick start guide, Warranty certificate, Safety warranty sheet

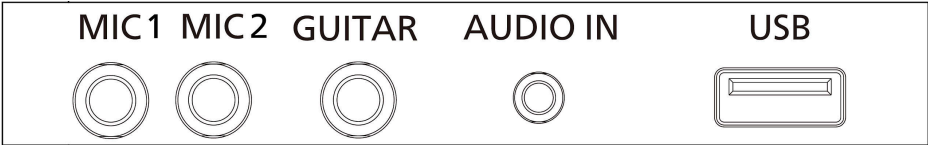

\* The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc.  
\* The IPX4 rating means the product is protected against water splashed from all directions.  
\* AC plug and quantity varies by region.  
\* Music play time depends on the volume level and audio content.