

PHILIPS

Desk-mount monitor
arm

3000 Series

360° rotate freely

Height adjustable 246~495 mm

Stretch extension up to 51 cm

Supports monitor 17"~34"

SPT7308B



Space control unlocked

Philips monitor arm can free up your desk space. It can tilt -15° to +75°, swivel 180° and rotate 360°, to fit you in every angle and give you more comfortable view.

Smart design for comfortable use

- 360° screen rotation serves you in every angle
- Height extension up to 49.5 cm, quite flexible
- Stretch extension up to 51 cm

Widely compatible, easy to instal

- Supports VESA patterns 75x75mm and 100x100mm
- Supports monitor 17"~34"

3000 Series

Desk-mount monitor arm

SPT7308B/93


Highlights

Supports VESA patterns 75x75mm and 100x100mm




Quick installation self-locking: Specially developed quick release VESA structure, one button and one push, automatically locks the screen without the need for manual locking.

360° screen rotation serves you in every angle

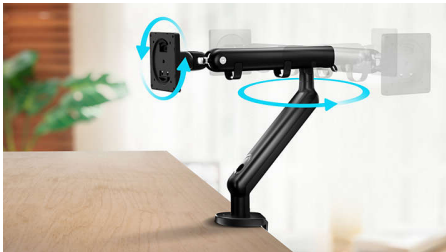

This monitor arm can rotate 360° in 2 ways: the upper arm can rotate horizontally, and VESA pattern can rotate vertically. You can move your monitor and share your screen freely.

Supports monitor 17"~34"

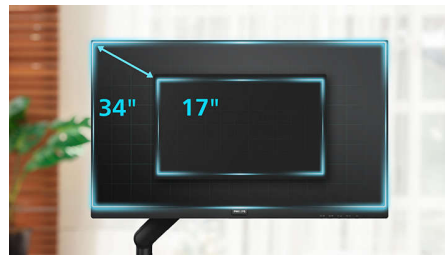

The monitor stand fits 17" to 34" monitors weighing 2-9 KG per arm.

Height extension up to 49.5 cm, quite flexible



With this monitor arm, you can lift up or down your monitor up to 49.5 cm, to relief your neck to its most comfortable position.

Stretch extension up to 51 cm



With this monitor arm, you can pull or push your monitor up to 51 cm to adjust the distance between the monitor and your eyes.

Specifications

Monitor Arms Specifications

Product Type: Ergonomic Monitor Dual Arm
Design Type: Ergonomic design
Base Type: Support for clamp-on and perforated mounting
Material Of Monitor Arm: Aluminum alloy/cold-rolled steel/nylon
Color: Black
Supportable Monitor Size: 17"~34"
Weight Capacity: 2~9 kg
Maximum height extension: 495 mm
Maximum stretch extension: 510 mm
Tilt Range: -15° ~ +75°
Swivel Range: -90° ~ +90°
Pivot Range: 360°
Table thickness supported: 1~8 cm
Spring Mechanism: Mechanical spring
Interface: Generic VESA interface

Monitor Requirements


VESA mounting hole spacing: 75mm*75mm or 100mm*100mm
Weight: 2~9 kg

Physical Dimensions

Weight: 3 kg
Dimensions (L x W x H): 650*500*108 mm

Accessories

Included Accessories: Upper arm, Lower arm, VESA plate, Base assembly, Cable holder x2, M4 Allen wrench, Cross screwdriver, M4 Cross screw x4, Screw bolt, Wing nut, User manual

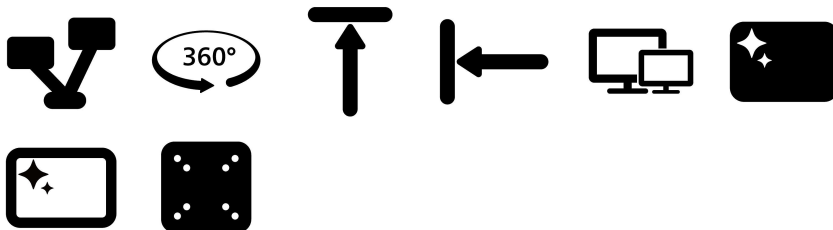

© 2025 Koninklijke Philips N.V.
All Rights reserved.

Issue date 2025-08-15
Version: 4.4.1

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

EAN: 69 51613 93105 9

www.philips.com

