

PHILIPS

Wireless speaker

100 W max (50 W RMS), Bass+

LED lightshow and Auracast™

24 hours of play time, power bank

Swappable battery. IP67

TAS7000EB



Listen anywhere. Dance everywhere.

Max out on power and portability with the tough Bluetooth® speaker that loves to put on a show. With its space-shaking bass, colourful beat-synced LED lights and a mic input for karaoke—you'll bring big, bold vibes everywhere you go.

Portable speaker. Big sound wherever you go.

- Powerful sound with deep bass at any volume
- 100 W max (50 W RMS), twin passive radiators, Bass+ tech
- Replaceable, rechargeable battery pack. Power bank
- Bluetooth® streaming, multipoint, audio-in, USB playback

Take the good times with you

- TWS and Auracast™ for multi-speaker setups
- IP67 waterproof and dustproof. Easy to carry
- Built-in carry handle and holes for a shoulder strap
- 5 different lighting modes let you set the perfect vibe
- Beat-synced lightshow. Rainbow LEDs pulse to the music

Funky, powerful and made responsibly

- Philips Entertainment app. Smart control for your speaker
- RCS-certified recycled plastic. Responsible packaging
- Dimensions (H x W x D): 18.8 x 31.2 x 14.9 cm

Highlights

Powerful sound

This portable boombox-style speaker packs a hefty punch with 100 W max (50 W RMS) of rich sound. Twin passive radiators and our exclusive Bass+ technology keep the bass deep and tight, even if you're listening at lower volumes. There's also a mic input for when you feel like busting out some karaoke—or freestyling to the playlist.

Swappable battery, power bank

The rechargeable lithium-ion battery in this speaker allows up to 24 hours of play time and can be easily swapped out when it reaches the end of its life. A 30 minute charge gives you 8 hours of play time, and a full recharge takes around 4 hours. If your phone's running low on power, you can use the speaker's built-in power bank to charge it up again.

Bluetooth® 5.4, USB, aux-in

Playlists ready? Bluetooth® 5.4 brings you a steady connection for seamless streaming. Multipoint lets you connect to two devices at the same time, and you can connect a portable music player to the speaker's USB-C port. Or go ahead and hook up a CD player or turntable via audio-in.

TWS and Auracast™ compatible

Want more? For a wider soundstage, you can pair with another TAS7000E speaker for True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what you're playing to as many other compatible speakers as you could

ever need: the LC3 codec is supported for better sound, and setup is simple via our companion app.


IP67 dustproof/waterproof

With an IP67 waterproof and dustproof rating, a carry handle and holes for a shoulder strap, this powerful portable speaker is built to take the good times everywhere. You can spill drinks on it, roll it down a sand dune or even drop it in the pool. It comes up dancing every time.

Beat-synched party lights

As the beats flow, colourful RGB LED lights pulse around the twin passive radiators and along the carry handle. There are five different light modes to choose from. Simply press the light button on the speaker or use our companion app to get started—and let everyone know that you came to party.

Philips Entertainment app

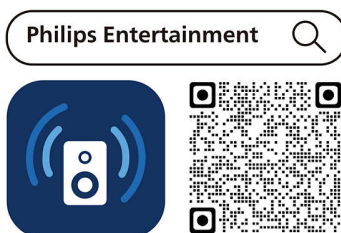

Our handy companion app lets you select a source, control Bass+, check battery life and more. There's also a virtual remote that's great

for controlling the mic, lights, vocal fader and echo effects at karaoke sessions. Plus, the in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Specifications

Sound

Output power (RMS): 50 W
Sound System: Mono
Sound enhancement: Bass+
Frequency response: 50 Hz – 20 kHz
Output power (MAX): 100 W

Loudspeakers

Driver configuration: 2-way
Number of sound channels: 1
Number of tweeters: 1
Number of woofers: 1
Passive radiators: 2
Tweeter diameter: 39.5 mm
Woofer diameter: 115 x 90 mm

Connectivity

Type of cable: USB charging cable (Type-C)
USB: Type-C (charging), supports audio playback via USB-C to A cable
Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
Bluetooth range: Line of sight, 30 m or 100 ft
Audio in (3.5 mm)
Mic in: 1 x 6.3 mm
DLNA Standard: No
Multiple speaker connection

Multiple speaker scenario: Broadcasting, Receiving, Stereo
Multiple speaker technology: Auracast TX/RX, TWS

Convenience

Automatic power off
Ease of Installation: Automatic pairing
Volume control: Tact switch
Water resistance: IP67
Light Effect: Yes, 5 light modes
Display screen: No

Compatibility

Smartphone/tablet APP control

Power

Battery Capacity: 5200 mAh, 7.3 V
Battery type: Li-ion (replaceable)
Operating time on battery: 24 hour(s)
Charging time: 4 hour(s)
Power bank

Packaging dimensions

Height: 37.7 cm
Packaging type: Box
Type of shelf placement: Laying
Width: 19.6 cm

Depth: 24.3 cm
Number of products included: 1
Gross weight: 3.593 kg
Net weight: 2.88 kg
Tare weight: 0.713 kg

Product dimensions

Height: 18.8 cm
Width: 31.2 cm
Depth: 14.95 cm
Weight: 2.844 kg

Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet
Cable: USB charging cable

Design

Colour: Black

Sustainability

Plastic shell: contains RCS-Certified 3% recycled post-consumer ABS+5.5% recycled post-consumer PC TE-00132492

