

# PHILIPS

## Wireless speaker

70 W max (35 W RMS), Bass+  
LED lightshow and Auracast™  
24 hours of play time, power  
bank  
Swappable battery. IP67  
TAS5000EB



## Bring the boom

Want sound that's big enough for dancing? With its tough build, deep bass and colourful lights, this portable speaker is ready to rock. Hit the beach, take it camping, strap it to a paddleboard—bring the good times just about anywhere.

### **Portable speaker. Lights up, rocks out.**

- Powerful sound with deep bass at any volume
- 70 W max (35 W RMS), twin passive radiators, Bass+ tech
- Replaceable, rechargeable battery pack. Power bank
- Bluetooth® streaming, multipoint, USB playback

### **Take the good times with you**

- TWS and Auracast™ for multi-speaker setups
- IP67 waterproof and dustproof. Tear-resistant strap
- Beat-synced lightshow. Rainbow LEDs pulse to the music
- 5 different lighting modes let you set the perfect vibe
- Built-in mic for hands-free calls

### **Funky, powerful and made responsibly**

- Philips Entertainment app. Smart control for your speaker
- RCS-certified recycled plastic. Responsible packaging
- Dimensions: (H x W x D) 9.65 x 24.2 x 9.5 cm

# Highlights

## Powerful sound

Inside or out, this portable speaker packs a punch with 70 W max (35 W RMS) of rich sound. Twin passive radiators and our exclusive Bass+ technology keep the bass deep and tight—even if you're listening at lower volumes. There's also a built-in mic, so if a call comes in, you can take it hands-free.

## Swappable battery, power bank

The rechargeable lithium-ion battery in this speaker allows up to 24 hours of play time and can be easily swapped out when it reaches the end of its life. A 30 minute charge gives you 6 hours of play time, and a full recharge takes around 4 hours. If your phone's running low on power, you can use the speaker's built-in power bank to charge it up again.

## Bluetooth® 5.4, USB playback

Playlists ready? Bluetooth® 5.4 brings you a steady connection for seamless streaming. Multipoint lets you connect to two devices at the same time, and you can connect a portable music player to the speaker's USB-C port.

## TWS and Auracast™ compatible

Want more? For a wider soundstage, you can pair with another TAS5000E speaker for True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what you're playing to as many other compatible speakers as you could

ever need: the LC3 codec is supported for better sound, and setup is simple via our companion app.


## IP67 dustproof/waterproof

With an IP67 waterproof and dustproof rating plus a tear-resistant wrist strap, this powerful portable speaker is built to take the good times everywhere. You can spill drinks on it, roll it down a sand dune or even drop it in the pool. It comes up dancing every time.

## Beat-synched party lights

As the beats flow, colourful RGB LED lights pulse over and around the twin passive radiators. There are five different light modes to choose from. Simply press the light button on the speaker or use our companion app to get started—and let everyone know you came to party.

## Philips Entertainment app

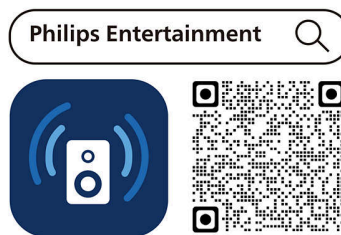

Our handy companion app lets you select a source, control playback and Bass+, tweak the bass and treble, switch between different light

modes, check battery life and more. Plus, an in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

## Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

# Specifications

## Sound

Output power (RMS): 35 W  
Sound System: Mono  
Sound enhancement: Bass+  
Frequency response: 65 Hz – 20 kHz  
Output power (MAX): 70 W

## Loudspeakers

Driver configuration: 2-way  
Middle range driver diameter: 52 x 75 mm  
Number of middle range drivers: 1  
Number of sound channels: 1  
Number of tweeters: 1  
Passive radiators: 2  
Tweeter diameter: 31 x 45 mm

## Connectivity

Type of cable: USB charging cable (Type-C)  
USB: Type-C (charging), supports audio playback via USB-C to A cable  
Bluetooth version: 5.4  
Bluetooth profiles: A2DP, AVRCP, HFP, Multipoint (Multipair) support, Streaming Format: SBC  
Bluetooth range: Line of sight, 30 m or 100 ft  
DLNA Standard: No  
Multiple speaker connection  
Multiple speaker scenario: Broadcasting,

Receiving, Stereo

Multiple speaker technology: Auracast TX/RX, TWS

## Convenience

Automatic power off  
Ease of Installation: Automatic pairing  
Call Management: Answer/End Call  
Volume control: Tact switch  
Water resistance: IP67  
Built-in microphone  
Light Effect: Yes, 5 light modes  
Display screen: No  
Hands-free calling

## Compatibility

Smartphone/tablet APP control

## Power

Battery Capacity: 5200 mAh, 7.3 V  
Battery type: Li-ion (replaceable)  
Operating time on battery: 24 hour(s)  
Charging time: 4 hour(s)  
Power bank

## Packaging dimensions

Height: 15.5 cm  
Packaging type: Box  
Type of shelf placement: Laying

Width: 29.5 cm  
Depth: 14.8 cm  
Number of products included: 1  
Gross weight: 1.52 kg  
Net weight: 1.07 kg  
Tare weight: 0.45 kg

## Product dimensions

Height: 9.65 cm  
Width: 24.2 cm  
Depth: 9.5 cm  
Weight: 1.05 kg

## Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet  
Cable: USB charging cable

## Design

Colour: Black

## Sustainability

Plastic shell: contains 20% RCS-certified recycled post-consumer acrylonitrile butadiene styrene  
TE-00132492

