

# PHILIPS

## Wireless speaker

100 W max (50 W RMS), Bass+

LED lightshow and Auracast™

24 hours of play time, power bank

Swappable battery. IP67

TAS7000EB



## Listen anywhere. Dance everywhere.

Max out on power and portability with the tough Bluetooth® speaker that loves to put on a show. With its space-shaking bass, colourful beat-synced LED lights and a mic input for karaoke—you'll bring big, bold vibes everywhere you go.

### **Portable speaker. Big sound wherever you go.**

- Powerful sound with deep bass at any volume
- 100 W max (50 W RMS), twin passive radiators, Bass+ tech
- Replaceable, rechargeable battery pack. Power bank
- Bluetooth® streaming, multipoint, audio-in, USB playback

### **Take the good times with you**

- TWS and Auracast™ for multi-speaker setups
- IP67 waterproof and dustproof. Easy to carry
- Built-in carry handle and holes for a shoulder strap
- Beat-synced lightshow. Rainbow LEDs pulse to the music
- 5 different lighting modes let you set the perfect vibe

### **Funky, powerful and made responsibly**

- Philips Entertainment app. Smart control for your speaker
- RCS-certified recycled plastic. Responsible packaging
- Dimensions (H x W x D): 18.8 x 31.2 x 14.9 cm

# Highlights

## Powerful sound

This portable boombox-style speaker packs a hefty punch with 100 W max (50 W RMS) of rich sound. Twin passive radiators and our exclusive Bass+ technology keep the bass deep and tight, even if you're listening at lower volumes. There's also a mic input for when you feel like busting out some karaoke—or freestyling to the playlist.

## Swappable battery, power bank

The rechargeable lithium-ion battery in this speaker allows up to 24 hours of play time and can be easily swapped out when it reaches the end of its life. A 30 minute charge gives you 8 hours of play time, and a full recharge takes around 4 hours. If your phone's running low on power, you can use the speaker's built-in power bank to charge it up again.

## Bluetooth® 5.4, USB, aux-in

Playlists ready? Bluetooth® 5.4 brings you a steady connection for seamless streaming. Multipoint lets you connect to two devices at the same time, and you can connect a portable music player to the speaker's USB-C port. Or go ahead and hook up a CD player or turntable via audio-in.

## TWS and Auracast™ compatible

Want more? For a wider soundstage, you can pair with another TAS7000E speaker for True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what you're playing to as many other compatible speakers as you could

ever need: the LC3 codec is supported for better sound, and setup is simple via our companion app.


## IP67 dustproof/waterproof

With an IP67 waterproof and dustproof rating, a carry handle and holes for a shoulder strap, this powerful portable speaker is built to take the good times everywhere. You can spill drinks on it, roll it down a sand dune or even drop it in the pool. It comes up dancing every time.

## Beat-synched party lights

As the beats flow, colourful RGB LED lights pulse around the twin passive radiators and along the carry handle. There are five different light modes to choose from. Simply press the light button on the speaker or use our companion app to get started—and let everyone know that you came to party.

## Philips Entertainment app

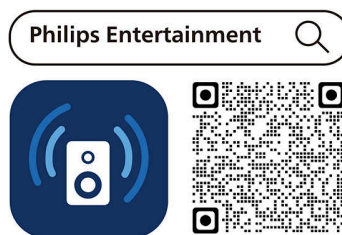

Our handy companion app lets you select a source, control Bass+, check battery life and more. There's also a virtual remote that's great

for controlling the mic, lights, vocal fader and echo effects at karaoke sessions. Plus, the in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

## Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

# Specifications

## Sound

**Output power (RMS):** 50 W  
**Sound System:** Mono  
**Sound enhancement:** Bass+  
**Frequency response:** 50 Hz – 20 kHz  
**Output power (MAX):** 100 W

## Loudspeakers

**Driver configuration:** 2-way  
**Number of sound channels:** 1  
**Number of tweeters:** 1  
**Number of woofers:** 1  
**Passive radiators:** 2  
**Tweeter diameter:** 39.5 mm  
**Woofer diameter:** 115 x 90 mm

## Connectivity

**Type of cable:** USB charging cable (Type-C)  
**USB:** Type-C (charging), supports audio playback via USB-C to A cable  
**Bluetooth version:** 5.4  
**Bluetooth profiles:** A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC  
**Bluetooth range:** Line of sight, 30 m or 100 ft  
**Audio in (3.5 mm)**  
**Mic in:** 1 x 6.3 mm  
**DLNA Standard:** No  
**Multiple speaker connection**

**Multiple speaker scenario:** Broadcasting, Receiving, Stereo  
**Multiple speaker technology:** Auracast TX/RX, TWS

## Convenience

**Automatic power off**  
**Ease of Installation:** Automatic pairing  
**Volume control:** Tact switch  
**Water resistance:** IP67  
**Light Effect:** Yes, 5 light modes  
**Display screen:** No

## Compatibility

**Smartphone/tablet APP control**

## Power

**Battery Capacity:** 5200 mAh, 7.3 V  
**Battery type:** Li-ion (replaceable)  
**Operating time on battery:** 24 hour(s)  
**Charging time:** 4 hour(s)  
**Power bank**

## Packaging dimensions

**Height:** 37.7 cm  
**Packaging type:** Box  
**Type of shelf placement:** Laying  
**Width:** 19.6 cm

**Depth:** 24.3 cm  
**Number of products included:** 1  
**Gross weight:** 3.593 kg  
**Net weight:** 2.88 kg  
**Tare weight:** 0.713 kg

## Product dimensions

**Height:** 18.8 cm  
**Width:** 31.2 cm  
**Depth:** 14.95 cm  
**Weight:** 2.844 kg

## Accessories

**Included accessories:** Quick start guide, World Wide Warranty leaflet, Safety warranty sheet  
**Cable:** USB charging cable

## Design

**Colour:** Black

## Sustainability

**Plastic shell:** contains RCS-Certified 3% recycled post-consumer ABS+5.5% recycled post-consumer PC TE-00132492

