

PHILIPS

Multimedia Speaker



All-in-one monitor stand

Built-in speakers

RGB LED strip lights

Integrated docking station

SPA6500BK

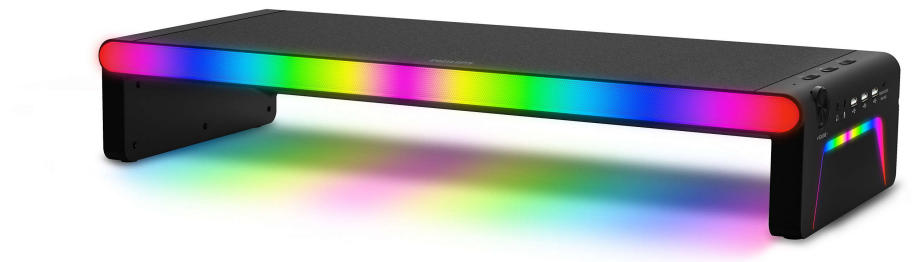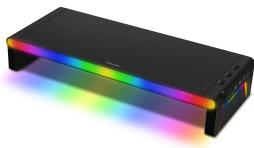

Space saving. Atmosphere enhancing.

Short on space? This versatile all-in-one stand and docking station elevates your monitor, desktop PC, or laptop to the perfect height. The built-in speakers enhance the sound of games or work calls—and the lightshow brings the atmosphere.

Sleek monitor stand with built-in speakers

- All-in-one monitor stand and docking station
- Space saving built-in speakers. 10 W (RMS)
- Plays music too! Bluetooth® connectivity and USB hub
- Sturdy desktop organizer, supports up to 15 kg

Integrated docking station

- Integrated docking station for all your essential devices
- USB-C for charging and data. 3x USB-A for peripherals
- Built-in mic and external mic input. Headphone output

The perfect desktop solution for work and play

- Atmosphere enhancing RGB LED lights
- Choose from dynamic and ambient light modes
- Dimensions: approx. 52.1x9.5x21.15 cm

Highlights

Integrated speakers

Integrated speakers bring you surprisingly powerful, well-balanced audio, letting you enhance the sound of games or work calls without cluttering your desk. You'll hear more of the environment when you're gaming—and work calls will come through loud and clear.

Bluetooth® and USB

Bluetooth® connectivity lets you stream music from your phone or tablet straight to this monitor stand's speakers. If your computer's on, you can also plug a USB drive into one of the stand's USB-A slots and play music that way.

Supports up to 15 kg

The sturdy construction is more than capable of supporting a standard monitor. When space is more limited, you'll appreciate the ability to store full-sized keyboards or a laptop, plus your phone and tablet, underneath the stand.

Integrated docking station

Connect a 65W PD fast-charging power adapter (not supplied) to this monitor stand to enjoy all the functions of the onboard docking station. A USB-C port lets you connect and charge a laptop or tablet, and there are 3x USB-A ports for keyboards, mice, and other peripherals. You also get mic-in and headphone-out ports.

RGB lights with 6 presets

RGB LED strips on the front, sides, and underside of this monitor stand can amplify the vibe of your favorite games—or enhance the atmosphere for work or relaxation. Three dynamic modes sync colorful light combinations in time to music or sound effects, two ambient modes give you static lighting, and the final mode lets you turn off the lights.

Sound

Volume control: rotary

Frequency response: 65Hz - 20kHz

Maximum output power (RMS): 10 W (≤10% THD)

Speaker impedance: 4 ohm

Loudspeakers

Full range driver diameter: 2"

Number of full range drivers: 2

Driver configuration: Full range

Number of sound channels: 2.0

Connectivity

Microphone: Built-in microphone, Microphone in 3.5 mm jack

USB: Type-A x3 (peripherals), Type-C (hub, charging)

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC

Bluetooth range: 10M (free space)

Headphone jack: 1x 3.5mm

USB charging: 5V, 2A (Type-C, Max 35W)

DLNA Standard: No

Smart Home: n.a.

Convenience

Ease of Installation: Automatic pairing

Call Management: Answer/End Call, Reject Call

Buttons and controls: Power on/off, Lighting switch, Mode switch

Built-in microphone

Light Effect: Yes, RGB LED

Handsfree calling

Power

Input: 65W max (Type-C)

Output: 45W max (Type-C)

Packaging dimensions

Height: 26.5 cm

Type of shelf placement: Standing

Width: 57 cm

Depth: 12.8 cm

Gross weight: 3.15 kg

Nett weight: 1.98 kg

Tare weight: 1.17 kg

Accessories

Included accessories: USB cable, Quick start guide, Safety warranty sheet

Dimensions

Main Unit (W x H x D): 521x95x211.5 mm

Main Unit Weight: 1.93 kg

* The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

