

# PHILIPS



Bluetooth® turntable

CENTURY

Retro design, modern sound

240 W max (120 W RMS)

2 speed turntable

DAB+/FM, Bluetooth® 5.4



TAV9000D

## The Tina

All the heart. All the soul. Give power to the music you love with the all-in-one Bluetooth® turntable that spins, streams and tunes in to the radio too. You get head-turning retro looks—and epic built-in speakers for huge stereo sound.

### Century range. All-in-one Bluetooth® turntable.

- Looks from back then, sound from now
- Incredibly powerful sound from built-in speakers
- 240 W max (120 W RMS) for streaming or radio
- 120 W max (60 W RMS) for records

### The Tina celebrates 100 years of Philips sound

- 2 speed belt-driven turntable. Built to handle the power
- Crystal-clear DAB+/FM radio. Two-way Bluetooth® streaming
- Auracast™ connectivity for multi-speaker setups
- Connections for new and legacy audio gear
- RCA aux-out, 6.3 mm headphone out, audio-in, USB port

### Retro. Also, modern.

- Tactile controls and dimmable LED display
- Philips Entertainment app. Simple sound control
- RCS-certified recycled plastic. Responsible packaging

# Highlights

## Retro. Also, modern




Bold mid-century looks tip the hat to legendary Philips radio designs from the 1930s and 1950s, while that rich, powerful sound grounds you in the here and now. Retro details like the wooden exterior and scooped speaker grille sit perfectly alongside modern conveniences like Bluetooth® and our handy companion app.

## Huge, powerful sound



Get down to a soul-shaking 240 W max (120 W RMS) of rich, warm sound when streaming or grooving to the radio—and go to 120 W max (60 W RMS) when spinning records. Two large drivers and two tweeters are combined with a bass woofer and bass-reflex port to fill the air with soaring highs, expressive mids and controlled, powerful lows.

## 2 speed belt-driven turntable

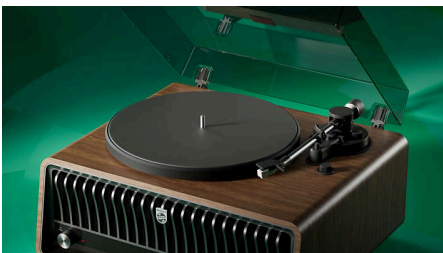

You can spin vinyl at 33 1/3 or 45 rpm on the die-cast aluminium platter, and the dust cover is removable if you prefer The Tina without it. A counterweighted aluminium tonearm and an anti-vibration mechanism ensure that the

replaceable Audio-Technica stylus tracks the grooves just right: at max volumes, the party will be jumping but your records won't.

## DAB+/FM radio. Streaming too



Stellar DAB+ and FM reception brings the party to radio, while Bluetooth® 5.4 supports the LC3 codec for high-quality streaming: stream playlists to the powerful built-in speakers, or stream records out to wireless speakers. For even bigger sound, Auracast™ lets you broadcast music from The Tina to other compatible speakers.

## Versatile connections



Ports include an RCA aux-out to connect to your hi-fi setup, audio-in for your CD player or cassette deck, and there's a USB port for thumb drives. Plus, a 6.3 mm headphone port means that you can connect The Freddie open-back wired headphones to The Tina and bliss out.


## Tactile controls. LED display



The Tina's control knobs might look retro but their functionality is seriously modern. Use them to set the turntable's speed, select a streaming

source, choose radio presets, manage Auracast™ channels, adjust the volume and more. The dimmable LED display shows key information including source, and a clock is visible in standby mode.

## Philips Entertainment app

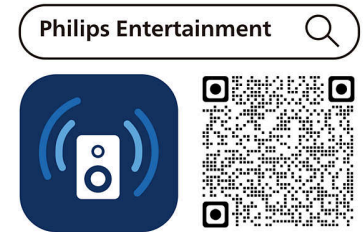

Prefer the convenience of smart controls? Our handy companion app features a virtual remote control for playback, source selection and more. You can also use the app to tweak the bass and treble, set radio presets or adjust the brightness on the LED display. Plus, the in-app PartyLink mode makes it simple to use Auracast™ for multi-speaker setups.

## Recycled materials



We use post-consumer recycled plastics in this product and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

# Specifications

## Sound

**Sound enhancement:** digital sound control, bass reflex speaker system, treble and bass control, Custom equaliser (on app)

**Volume control:** rotary

**Frequency response:** 40 Hz - 20 kHz

**Sound mode:** Bright, Warm, Balanced, Powerful, Clear

**Maximum output power (RMS):** 120 W (streaming or radio), 60 W (phono)

**Speaker impedance:** 6 ohm

## Loudspeakers

**Driver configuration:** 2-way

**Middle range driver diameter:** 2.5"

**Number of middle range drivers:** 2

**Number of sound channels:** 2.2.1

**Number of tweeters:** 2

**Number of woofers:** 1

**Tweeter diameter:** 1"

**Woofer diameter:** 4.5"

## Connectivity

**USB:** Type-A (playback)

**Bluetooth version:** 5.4

**Bluetooth profiles:** A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC, AAC, LC3

**Bluetooth range:** Line of sight, 30 m or 100 ft

**Headphone jack:** 1 x 6.3 mm

**Audio in:** 1 x 3.5 mm

**DLNA Standard:** n.a.

**Multiple speaker connection**

**Multiple speaker scenario:** Broadcasting, Receiving

**Multiple speaker technology:** Auracast

**Smart Home:** n.a.

**Aux out:** 1 x RCA (L/R)

**BT out**

## Audio playback

**Playback media:** Bluetooth, Audio-in, Vinyl, LP, Gramophone records, USB

## Tuner/Reception/Transmission

**Antenna:** Detachable pigtail (75 ohm)

**Tuner bands:** DAB/DAB+, FM

**Station presets:** 30 (FM) + 30 (DAB)

**RDS:** Yes.

**Tuner enhancement:** auto digital tuning, auto scan, Easy set (plug and play)

**Tuner type:** Digital

## Supported Audio Formats

**Bluetooth:** SBC, AAC, LC3

**USB:** MP3, WAV, WMA, FLAC

## Convenience

**Buttons and controls:** Power on/off, Main unit volume, Source switch

**Display type:** LED display

**Eco Power Standby:** 0.5 watt

## Compatibility

**Smartphone/tablet APP control**

## Power

**Power supply:** 100-240 VAC, 50/60 Hz

**Standby power consumption:** <0.8 W (clock display on)

## Packaging dimensions

**Height:** 31.3 cm

**Packaging type:** Box

**Type of shelf placement:** Standing

**Width:** 58.3 cm

**Depth:** 48.3 cm

**Number of products included:** 1

**Gross weight:** 14.9 kg

**Net weight:** 11.2 kg

**Tare weight:** 3.7 kg

## Accessories

**Included accessories:** AC power cord, Quick start guide, Warranty Leaflet, Safety warranty sheet, Slipmat, 45 rpm adapter, Counterweight, Telescopic antenna

## Design

**Colour:** walnut

## Dimensions

**Main Unit (W x H x D):** 448 x 245 x 399 mm

**Main Unit Weight:** 11.36 kg

## Alarm

**Alarm source:** DAB radio, FM radio, USB

**No. of alarms:** 1

**Sleep timer:** 15/ 30/ 60/ 90/ 120 mins

**Gentle Wake**

## Clock

**Display:** LED

**Type:** Digital

**Time format:** 12 H, 24 H

**Brightness control (Dim):** High/Medium/Low

## Sustainability

**Plastic shell:** contains 30% RCS-certified recycled post-consumer acrylonitrile butadiene styrene TE-00132492

## Turntable

**Turntable type:** Auto-stop

**Drive method:** Belt-driven

**Supported record size:** 7 inch, 12 inch

**Rotation speed (rpm):** 33 1/3, 45

**Stylus:** Replaceable

**Dust cover:** removable

