

# PHILIPS

## sonicare



Rechargeable  
toothbrush

Series 7400

2000% more plaque removal\*

Up to 600% healthier gums\*\*

Next-Generation Sonicare  
Technology

Visual Pressure Sensor



HX7428/07

## Advanced care for healthier gums\*

Gently removes 2000% more plaque\*

Support your gum health every time you brush. Our Next-Generation Sonicare Technology offers a powerful yet gentle clean, even in hard-to-reach areas, with up to 600% healthier gums\*\* and 2000% more plaque removal\*.

### Brushing made effortless

- Choose your ideal cleaning experience
- Brushing insights in the palm of your hand
- Guided brushing sessions
- Keep brushing your best with brush head replacement reminder

### Designed for your lifestyle

- Carry the care, take it anywhere
- 21 days of regular brushing

### Feel the care of Sonicare

- 2000% more effective on plaque, gentle on gums
- Next-Generation Sonicare Technology
- Help protect your gums with pressure sensor

## Series 7400

Rechargeable toothbrush

HX7428/07


# Highlights

### Our best plaque removal



Support your gum health with this specially designed A3 Premium All-in-One brush head. Longer, angled bristles with triangular tips remove plaque even along the gumline. The result is up to 600% healthier gums in two weeks\*\* and 2000% more plaque removal than a manual toothbrush\*.


### Next-Generation Sonicare Technology

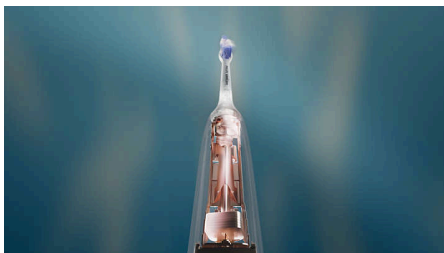

This electric toothbrush uses our Next-Generation Sonicare Technology which delivers our most reliable and consistent brushing for excellent results every time. The motor adjusts power automatically so there is zero drop in performance when you reach those harder-to-


clean areas. Enjoy a gentle yet effective clean for your teeth and gums with 62,000 bristle movements per minute. Sonicare Fluid Action supports the bristles to clean by driving fluid deep between teeth and along the gumline.

### Visual pressure sensor

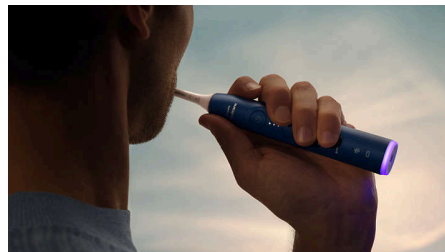

This Sonicare electric toothbrush has a light ring at its base that gently lets you know if you're overdoing the pressure. Simply ease off when it lights up and your gums will stay protected.


### Modes & Intensities

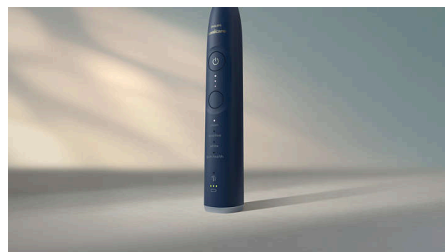

Give your clean a boost with 12 brushing settings. Whether you want a little more vigor or a specific focus for your clean, you can have it.

Choose between Clean, Sensitive, Gum Health and White mode. Pick one of three intensity settings.

### Philips Sonicare app

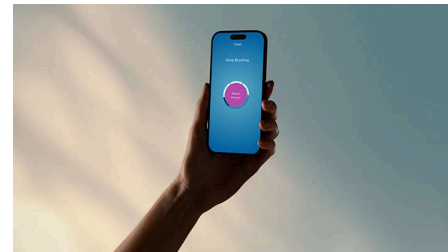

Achieve your oral-health care goals with the Sonicare toothbrush and app. The two pair seamlessly to deliver guided brushing, tips and tricks, and content personalized to you. Together, you are unstoppable.

### Travel case



Our travel case allows you to take your device on the go. It is strong enough to keep your Sonicare toothbrush safe, yet compact enough to slip into any bag, making it the perfect travel companion.


## Series 7400

Rechargeable toothbrush

HX7428/07


# Highlights

### SmartTimer & BrushPacer

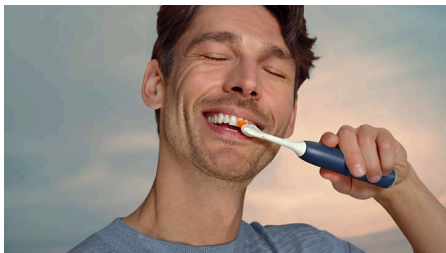

Ace your session time with Sonicare's cleaning timers. Every 20 seconds, the BrushPacer will prompt you to clean a new area. After 2 minutes, the SmartTimer will indicate your session is complete.

### Replacement reminder

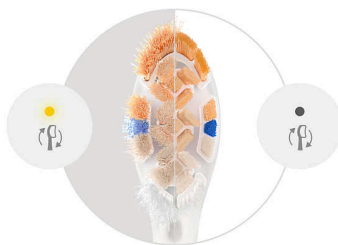

Did you know brush heads become less effective after three months? Dental professionals recommend changing your brush head regularly, that's why Philips Sonicare toothbrushes have brush head replacement reminder. It tracks how

often and how hard you brush, then reminds you to replace your brush head once it's time for a new one.

### 21-day battery life



Experience up to 21 days of regular brushing after a single charge. Bringing a new level of convenience to your brushing routine.

## Series 7400

Rechargeable toothbrush

HX7428/07

# Specifications

### Intensities

**High:** To boost your clean  
**Medium:** For an everyday clean  
**Low:** For sensitive teeth and gums

### Power

**Voltage:** 100-240 V

### Technical specifications

**Operating time (full to empty):** 21 days  
**Battery:** Rechargeable  
**Energy Consumption:** Standby without display  
<0.5 W  
**Battery type:** Lithium ION

### Design and finishing

**Color:** Navy Blue

### Service

**Warranty:** 2-year limited warranty

### Compatibility

**Android compatibility:** Android phones with Bluetooth 4.0 and above, Search Sonicare on Google Play Store for detailed OS compatibility.

**Bluetooth wireless technology:** Connected brushing app  
**iOS compatibility:** iPhone with Bluetooth 4.0 and above, Search Sonicare on App Store for detailed iOS compatibility.

### Ease of use

**Handle:** Slim ergonomic design  
**Handle compatibility:** Easy click-on brush heads  
**Battery indicator:** Illuminated icon indicates battery life  
**Timer:** BrushPacer and SmartTimer  
**USB-A Charging:** Power adapter not included

### Items included

**Handle:** 1 7400 rechargeable toothbrush  
**Travel case:** 1 Travel case  
**Brush head:** 1 A3 Premium All-in-One, 1 G3 Premium Gum Care, 1 C3 Premium Plaque Control  
**Charger:** 1 USB-A charger

### Cleaning performance

**Plaque removal:** 2000% more effective\*  
**Gum Health:** Up to 600% healthier gums\*\*  
**Speed:** 62,000 brush movements / min

### Modes

**Clean:** For exceptional everyday clean  
**White:** To remove surface stains  
**Sensitive:** For sensitive teeth and gums  
**Gum Health:** Gently massages your gums

### Smart sensor technology

**Pressure feedback:** Light ring illuminates purple, Vibration and pulsing sound  
**Replacement Reminder:** BrushSync lets you know when to replace your brush head

### Sonicare app

**Tracking and progress reports:** Monitors brushing patterns over time, helping you maintain good oral hygiene.

