

PHILIPS



Bluetooth® turntable

Fidelio

Turntable and CD player

Bluetooth® 5.4, Auracast™

High-quality components

RCA aux-out, headphone port



TAFT1

Crafted for high fidelity

The FT1 Bluetooth® turntable invites you to luxuriate in the music you love. The die-cast aluminum platter spins vinyl with finesse, and there's a built-in CD player too. You can set up and play wirelessly—or wired.

Philips Fidelio. Bluetooth® turntable/CD player.

- 2-speed belt-driven turntable
- Built-in tray-loading CD player
- Easy wireless connectivity. Bluetooth® and Auracast™
- Wired connections for hi-fi setups and wired headphones
- RCA aux-out. 3.5 mm headphone port. AC powered

Premium build, dimmable display

- Crafted from high-quality components
- Die-cast aluminum platter, auto-stop function
- Audio-Technica stylus. Counterweighted aluminum tonearm
- Removeable dust cover and dimmable LED display

Seamless in every way

- Physical control dials and smart companion app
- RCS-certified recycled plastic. Responsible packaging
- Sings in harmony with Fidelio FA3 wireless speakers

Highlights

Belt-driven turntable



Albums. EPs. Singles. The Philips Fidelio FT1 turntable is built with high-quality components so you can get the best out of your records for years to come. You can spin vinyl at 33 1/3 or 45 rpm: simply turn the tactile 2-speed control knob to select the right speed—and drop the needle down.

Built-in CD player



Whether it's an old mix CD from back in the day or a new release, slip the silver disc into the front-loading tray and enjoy the music that's precious to you. The onboard CD player accepts all CD formats, and you can see track and playback information on the crisp LED display.

Bluetooth® 5.4, Auracast™



The FT1 will quickly pair with your wireless speakers or headphones via Bluetooth®. Or you can use Auracast™ to broadcast the records and CDs you're playing to as many compatible speakers as you want, which is great for parties. Support for the LC3 codec gives you the best possible sound.

Wired connections



To make the FT1 part of a traditional hi-fi setup, you can connect into a line-level input via the onboard phono stage and RCA aux-out. Or go for the ultimate private listening experience: plug a pair of wired Fidelio headphones into the 3.5 mm headphone port on the FT1 and immerse in those warm vinyl tones.

High-quality components




This turntable is built to keep records sounding their best. The die-cast aluminum platter and rubber slip mat control vibrations for superb clarity. An aluminum tonearm with adjustable counterweight lets the replaceable Audio-Technica stylus track the grooves just right, and an auto-stop function stops records spinning when they're finished.

Designed to fit right in



The minimalistic design of the FT1 will look great in any space, and the turntable's dustcover is removable if you prefer it without. A dimmable LED display shows key information including source and volume level, and a clock displays the time when the FT1 is on standby.

Easy control

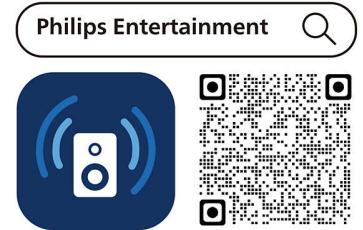

There are physical controls on the FT1 for source selection, Bluetooth®, Auracast™, and CD playback. If you prefer the convenience of smart controls, the Philips Entertainment app features a virtual remote control for playback, source selection, and more. Plus, the in-app PartyLink mode makes it simple to set up Auracast™ for bigger sound.

Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Pair with Fidelio FA3



Want to treat your treasured vinyl or CDs to warm Fidelio stereo sound? For the perfect visual and sonic match, you can pair the FT1 turntable with our wireless FA3 Bluetooth® stereo speakers—then sit back and enjoy the performance.

Specifications

Connectivity

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support in classic BT connection

Bluetooth range: Line of sight, 10M or 30FT

Headphone jack: 1x 3.5mm

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Broadcasting

Multiple speaker technology: Auracast

Smart Home: n.a.

Aux out: 1x RCA (L/R)

BT out

Audio playback

Disc playback modes: repeat/shuffle/program

Playback media: Bluetooth, Vinyl, LP,

Gramophone records, CD, CD-R/RW, MP3-CD

Supported Audio Formats

Bluetooth: SBC, AAC, LC3

CD: MP3

Convenience

Loader type: tray

Buttons and controls: Power on/off, Source switch, Play/Pause, Auracast, BT out, Open/close

Display type: LED display

Eco Power Standby: 0.5 watt

Sleep timer

Compatibility

Smartphone/tablet APP control

Power

Power consumption: 5 W

Power supply: 100-240VAC, 50/60Hz

Standby power consumption: <0.8W (clock display on)

Packaging dimensions

Height: 23.5 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 51 cm

Depth: 45 cm

Number of products included: 1

Gross weight: 6.75 kg

Nett weight: 3.93 kg

Tare weight: 2.82 kg

Accessories

Included accessories: AC power cord, Quick start guide, Warranty Leaflet, Safety warranty sheet, Slipmat, 45 rpm adaptor, Counterweight

Design

Color: Black

Dimensions

Main Unit (W x H x D): 420x130x370 mm

Main Unit Weight: 3.7 kg

Clock

Display: LED

Type: Digital

Time format: 12H, 24H

Brightness control (Dim): High/Medium/Low

Sustainability

Plastic shell: contains 20% RCS-certified recycled post-consumer acrylonitrile butadiene styrene
TE-00132492

Turntable

Turntable type: Auto-stop; manual

Drive method: Belt-driven

Supported record size: 7 inch, 12 inch

Rotation speed (rpm): 33 1/3, 45

Stylus: Replaceable

Dust cover: removable

