

# PHILIPS



Kids' on-ear  
headphones

2000 series

On-ear wired headphones  
Volume limited to 85 dB  
Customizable. Audio share  
Durable and foldable



TAK2000CT

## Super safe, super fun!

Let the kids rock with these colorful wired headphones! They're light, tough, and volume-limited for safe listening. Got friends over? Audio share lets children daisy chain their headphones with a friend's so they can listen together.

### **On-ear wired headphones. Built for kids.**

- Always safe, always fun. Volume limited to 85 dB\*
- Kid-friendly comfort and easy to use
- Audio sharing for double the fun
- Colorful design with customizable ear cups

### **Take them anywhere**

- Tough, durable, and foldable
- Compatible with most devices. 3.5 mm to USB-C cable in box

### **Cool for calls, and great sound too**

- Clear calls with friends and family
- RCS-certified recycled plastic. Responsible packaging
- Warm, natural sound. Philips sound signature


## 2000 series

Kids' on-ear headphones

TAK2000CT/00


# Highlights

### Volume limited to 85 dB\*

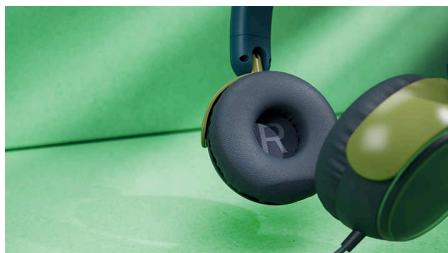

Specially designed to be safe for young ears, these headphones have been volume limited to 85 dB\*. Music, cartoons, movies, educational videos: whatever they're into, you can relax knowing they won't be listening too loud.

### Kid-friendly comfort

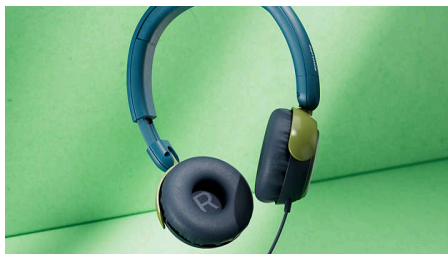

Smaller ear cups with soft ear-cup cushions keep these lightweight headphones comfortable for kids. The cushioned headband also adjusts easily for the perfect fit and features dots on the back that help children see which way around to put the headphones on.

### Customizable ear cups



The multi-colored design makes the headphones stand out in all the right ways—and kids can customize their headphones using their own works of art! Simply lift the transparent ear-cup window, add their drawings or paintings, and click the window closed again.

### Audio sharing

A built-in audio-sharing port means you can daisy chain these headphones so kids can listen together from the same device. Simply connect a standard 3.5 mm headphone cable to the audio-sharing port on these headphones, then plug the other end of the cable into the headphone socket on the second pair of headphones.

### Tough, durable, and foldable

Made from durable, non-toxic materials, these headphones are built to withstand the rigors of daily use by kids. When not in use, they can be folded flat for easy storage in a drawer. Or you

can fold them flat and inwards, creating a compact bundle that easily fits into pockets and bags.

### 3.5 mm to USB-C cable

These wired headphones connect to devices via USB-C, which makes them compatible with most laptops, phones, and tablets. The detachable USB-C headphone jack adapter with attached 3.5mm cable is included in the box.

### Clear calls

A built-in microphone lets kids take calls with family and friends. A dedicated mic picks up the sound of their voice, while a noise-reduction algorithm quietens some of the background noise from the world around them.

### Philips sound signature

Movies to music, they'll love what they hear! These on-ear kids' headphones feature large 32 mm drivers, tuned to the Philips sound signature. Whatever they're into, they'll enjoy a warm, natural sound with deep bass.

### Recycled materials

We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

## 2000 series

Kids' on-ear headphones

TAK2000CT/00

# Specifications

### Sound

Acoustic system: Closed  
Frequency range: 20 - 20,000 Hz  
Speaker diameter: 32 mm  
Impedance: 32 Ohm  
Maximum power input: 20 mW  
Sensitivity: 112 dB (1K Hz, 179 mV)  
Driver type: Dynamic

### Connectivity

Cable length: 1.2 m  
3.5mm headphone jack

### Outer Carton

Length: 20.30 cm  
Number of consumer packagings: 3  
Width: 15.00 cm  
Gross weight: 0.910 kg  
Height: 21.70 cm

GTIN: 1 48 95229 15894 5

Nett weight: 0.41 kg  
Tare weight: 0.50 kg

### Packaging dimensions

Height: 21.7 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 18.8 cm  
Depth: 4.6 cm  
Number of products included: 1  
EAN: 48 95229 15894 8  
Gross weight: 0.245 kg  
Nett weight: 0.135 kg  
Tare weight: 0.110 kg

### Product dimensions

Height: 18.00 cm  
Width: 16.00 cm  
Depth: 4.00 cm  
Weight: 0.135 kg

### Accessories

Included adapters: USB-C jack adapter

### Design

Color: Chrystal Teal  
Wearing style: Headband  
Foldable design: Flat/In-wards  
Ear coupling material: Synthetic leather  
Ear fitting: On-ear  
Earcup type: Closed-back

### Telecommunication

Microphone for call: 1 mic

### UPC

UPC: 8 40063 20592 5

### Sustainability

Plastic shell: contains 10% RCS certified recycled post-consumer Acrylonitrile Butadiene Styrene  
TE-00132492

