

PHILIPS

Wireless home
speaker

Fidelio

Fidelio stereo sound

Bi-amp, active crossover

Bluetooth® 5.4, Auracast™

Wired audio inputs

TAF3



Crafted for stereo sound

Our FA3 active wireless Bluetooth® speakers bring you warm, thrillingly detailed stereo sound. Streaming is their speciality, and they connect to wired sources too. From music to films, you'll tap your feet, hold your breath, raise your hands.

Philips Fidelio powered wireless stereo speakers

- Room-filling, soul-stirring wireless stereo sound
- Bi-amp with active crossover
- 2 x 100 W max (50 W RMS)
- Tuned to the Philips Fidelio sound signature
- 5" glass-fibre woofers, 1" titanium dome tweeters

Detailed, natural stereo sound for music and TV

- Hi-res streaming and Auracast™ connectivity
- Bluetooth® LE audio, plus support for LDAC and LC3 codecs
- Versatile wired connections for the perfect home setup

Seamless in every way

- Timeless Fidelio design
- Physical remote control and smart companion app
- RCS-certified recycled plastic. Responsible packaging
- Sings in harmony with the Fidelio FT1 turntable

Highlights

Superb stereo sound

Each speaker offers 100 W max (50 W RMS) of power. Dedicated internal amplifiers and an active crossover ensure that the drivers are precisely controlled for breathtaking dynamics and soundstaging. From the intimacy of a singer-songwriter to the bombast of a film score, every note is rich and clear.

Warm Fidelio sound

Deep, well-controlled bass. Clear mids. Smooth, sparkling highs. These powered speakers are engineered to produce warm, detailed natural sound: glass-fibre woofers, titanium dome tweeters, and bass reflex ports ensure pinpoint rhythm and incredible instrument separation.

Bluetooth® 5.4, Auracast™

Support for the LDAC and LC3 codecs lets you get the most from hi-res streaming, and Bluetooth® LE audio gives you a steadier connection that won't dip even if your household has heavy wireless traffic. There's no lag when streaming audio for films or gaming, and you can make these speakers part of an Auracast™ multi-speaker setup too.


Versatile wired connections

With a full suite of inputs for wired sources, the FA3 are more than just speakers—they're a complete hi-fi system. Connections include a USB-C port, RCA AUX-in, optical input and HDMI ARC. You'll be able to bring warm Fidelio sound to your turntable or CD player, as well as your TV, console—or even an electric piano.

Timeless Fidelio design

A piano-black finish adds a touch of elegance that never goes out of style. The subtly rounded magnetic grilles are covered in acoustically transparent fabric, which can be removed to reveal the elegant driver surrounds.

Easy control

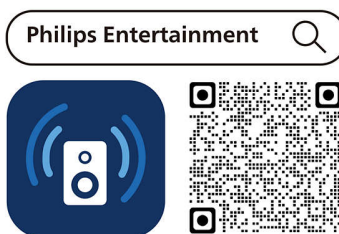

The FA3 come with a physical remote control—or you can use our companion app. The Philips Entertainment app features a handy virtual

remote control for playback, source selection and more. Plus, the in-app PartyLink mode makes it simple to set up Auracast™ for bigger sound.

Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Pair with Fidelio FT1

For the perfect visual and sonic match, you can pair the FA3 stereo speakers with our FT1 turntable. With its die-cast aluminium platter and counterweighted tonearm, plus an onboard CD player, the FT1 is a truly versatile Bluetooth® source: sit back and enjoy the performance.

Specifications

Sound

Output power (RMS): 50 W x 2

Sound System: Stereo

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equaliser (on app)

Frequency response: 40 Hz – 40 kHz

Output power (MAX): 100 W x 2

Sound mode: Balanced, Warm, Bright, Powerful, Clear

Total harmonic distortion: ≤1%

Loudspeakers

Speaker type: Active, wireless bookshelf speakers

Driver configuration: 2-way

Number of sound channels: 2.0

Number of tweeters: 2

Number of woofers: 2

Tweeter Impedance: 8 ohm

Tweeter diameter: 1" (titanium dome tweeter with rear chamber)

Woofer diameter: 5" (glass-fibre cone)

Woofer Impedance: 4 ohm

Connectivity

USB: Type-C (playback, service), supports audio playback via USB-C to A cable

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support

Bluetooth range: Line of sight, 10 m or 30 ft

Aux in: 2 x RCA (Audio)

Optical input x 1

HDMI Out (ARC) x 1

DLNA Standard: No

Multiple speaker connection

Multiple speaker scenario: Receiving

Multiple speaker technology: Auracast

Primary and secondary speaker connection:

Wireless connection: 2.4 GHz, Wired connection: Coaxial audio cable

Supported Audio Formats

Bluetooth: SBC, AAC, LC3, LDAC

HDMI ARC: PCM 44.1 kHz, 48 kHz, 96 kHz

Optical: PCM 44.1 kHz, 48 kHz, 96 kHz

Convenience

Automatic power off

Ease of Installation: Automatic pairing

Buttons and controls: Power on/off, Source switch, Main unit volume, L/R wireless pairing

Volume control: Rotary

Display screen: No

Compatibility

Smartphone/tablet APP control

Power

Power consumption: <30 W

Power supply: 100-240 VAC, 50/60 Hz

Standby power consumption: <0.5 W

Packaging dimensions

Height: 46.4 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 35.4 cm

Depth: 22.2 cm

Number of products included: 1

Gross weight: 9.105 kg

Net weight: 7.179 kg

Tare weight: 1.926 kg

Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet, Power cord, Remote Control, 2 x AAA Batteries

Design

Colour: High-gloss black

Dimensions

Set Weight: 6.798 kg

Speaker Unit (W x H x D): 170 x 303 x 211 mm

Speaker Weight (per Unit): 3.399 kg

Sustainability

Plastic shell: contains 45% RCS-certified recycled post-consumer acrylonitrile butadiene styrene
TE-00132492

