

PHILIPS

sonicare



Rechargeable
toothbrush

4100

Gently removes 5 x more plaque

Pressure Sensor

4 brushing settings

Easy Start



HX4043/48

Essential Care for healthy teeth and gums

Gently removes up to 5 x more plaque*

Switch to electric brushing effortlessly with the essential Philips Sonicare 4000 Series. Enjoy up to 5 x more plaque removal vs a manual toothbrush

Brushing made effortless

- Easy switch to electric brushing
- Choose your ideal cleaning experience
- Guided brushing sessions

Designed for your lifestyle

- 21-day battery life

Feel the care of Sonicare

- Gently removes up to 5 x more plaque*
- Sonicare Fluid Action
- Help protect your gums with our pressure sensor

4100

Rechargeable toothbrush

HX4043/48

Highlights

Say goodbye to plaque




This electric toothbrush comes with our W brush head. It uses densely packed bristles to deliver up to 5 x more plaque removal*, while treating your whole mouth to a refreshing clean.

Sonicare Fluid Action



Philips Sonicare toothbrushes clean gently yet effectively and care for your teeth and gums with 31,000 bristle movements. Sonicare Fluid Action supports the bristles cleaning by driving fluid deep between teeth and along the gumline.

Help protect your gums with our pressure sensor

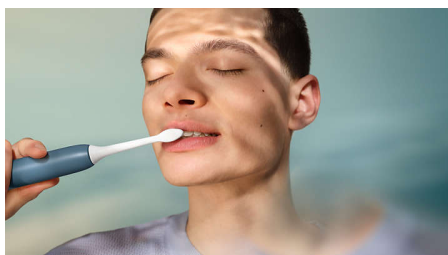

It's easy to brush too hard, so this Philips Sonicare toothbrush has a pressure sensor with haptic feedback to detect excessive pressure. If

you're brushing too hard, it will let you know through gentle vibrations as a reminder to ease-off the pressure to help your gums stay protected.

Modes and intensities



Enjoy a pleasurable clean with 4 brushing settings. Choose between Gentle and Clean mode and one of two intensity settings. Whether you want a little more vigour or a specific focus for your clean, you can have it.

Easy Start




Sonicare easy-start programme is designed for those who are new to brushing with an electric toothbrush. The programme gives you the option of a gradual, gentle increase in brushing power across your first 14 cleans.

SmartTimer and QuadPacer



Ace your session time with Sonicare's cleaning timers. Every 30 seconds, the BrushPacer will prompt you to clean a new area. After 2 minutes, the SmartTimer will indicate your session is complete.

Battery life

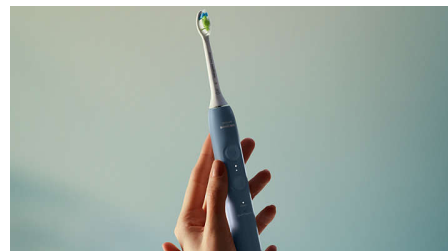

Experience up to 21 days of regular brushing after one full charge. Bringing a new level of convenience to your brushing routine.

4100

Rechargeable toothbrush

HX4043/48

Specifications

Intensities

Low: For sensitive teeth and gums

Intensities

Medium: For an everyday clean

Power

Voltage: 100-240 V

Technical specifications

Battery: Rechargeable

Operating time (full to empty): 21 days

Battery type: Lithium ION

Energy consumption: Standby without display
<0.5 W (automatically reached within 1 minute)

Design and finishing

Colour: Marine Blue

Service

Warranty: 2-year limited warranty

Ease of use

Battery indicator: Illuminated icon indicates battery life

Handle: Slim ergonomic design

Handle compatibility: Easy click-on brush heads

Timer: SmarTimer and QuadPacer

Items included

Handle: 1 4100 rechargeable toothbrush

Travel case: 1

Brush head: 1 Optimal White W

Charger: 1

Cleaning performance

Plaque removal: Up to 5 x more plaque removal*

Modes

Clean: For exceptional everyday cleaning

Gum Health: Gently massages your gums

Consumer Trade Item

Height: 22 cm

Width: 13.8 cm

Length: 5.5 cm

Net weight: 0.395 kg

Gross weight: 0.484 kg

GTIN: 8720689043595

Country of origin: CN

Harmonized system code: 85098000

Outer Carton

Height: 25 cm

Width: 15.8 cm

Length: 18.8 cm

Net weight: 1.185 kg

Gross weight: 1.6 kg

GTIN: 18720689043592

Pallet Layer

Height: 25 cm

Width: 80 cm

Length: 120 cm

Pallet

Height: 113.2 cm

Width: 80 cm

Length: 120 cm

Net weight: 142.2 kg

Gross weight: 217.26 kg

GTIN: 68720689043597

