

PHILIPS

AVENT



Advanced

Video Baby Monitor

Private and secure

2.8" color screen, x2 zoom

Lullabies and talkback



SCD881/20

Stay close to your baby

Private and secure with wireless technology

The Philips Avent SCD881 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.8" LCD ; 7.2cm), day or night.

Private and secure

- Hear your baby with clear sound
- High resolution 2.8" (7.2 cm) screen with night vision
- Energy-saving eco mode with connection indication
- Private & secure connection with wireless technology

Freedom, flexibility, comforting and soothing

- Manual camera rotation for a complete view of baby's room
- Range up to 300 metres*
- Choose the best sound level for your surroundings
- Comforting lullabies to calm your little one
- Excellent operating time for overnight monitoring
- Talk to your baby remotely

Highlights

Private & secure connection



Unique handset pairing for a private, secure connection to your baby with a 2.4GHz wireless connection technology for minimal interference.

2.8" color screen with 2x zoom



See your baby, day and night, with crystal clear infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high resolution, extra large 2.8" color screen. With 2x digital zoom and pan for extra reassurance so you can see everything your baby is up to.

Crystal clear sound video




Hear every tiny giggle, gurgle and hic-up with perfect clarity. Not only see but also hear your baby any time with high-quality, crystal-clear sound.

ECO mode




Switch on the ECO mode to reduce power consumption during quiet times in the baby's room, safe in the knowledge that you are still connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

300m Range

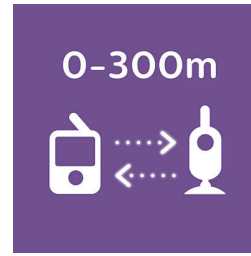


Indoor range up to 50 metres*, Outdoor range up to 300 metres*

Operating time up to 12 hours**

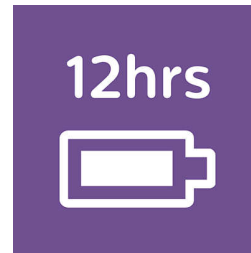

The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 12 hours** before recharging is required.

Talk back

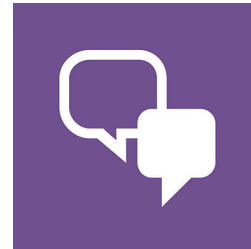

Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

Highlights

6 Lullabies and white noises



There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 6 relaxing tunes to help your baby drift off to sleep in no time.

Sensitivity control



It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what level of noise is picked up by the baby unit, e.g. you might want to hear when your baby cries, but you may be less interested in his or her babbling.

Manual camera rotation



The view of the camera can be adjusted horizontally and vertically to view different angles of your baby's room.

Specifications

Tuner/Reception/Transmission

Frequency band: 2.4GHz

Convenience

Auto out-of-range warning

Battery low indication

Power on indication

Battery charging indication

Volume control

Sensitivity settings

Wall mountable

Power

Power supply: 100-240V/50-60Hz

Features

Digital Video Technology

Adjustable viewing angle

Auto infrared night vision

Battery and mains operated baby unit: Mains only

Battery back-up function baby unit: No

Battery operating time parent unit: Superior up to 12 hours**

Belt Clip

Brightness control

Menu Style: Icons & text

Digital zoom and pan: Yes, 2x

Voice activation screen: Yes, VOX mode

Energy saving Eco mode: Eco mode with link indication

Hand held and rechargeable: Yes, parent unit

Indoor range up to: 50m

Linked and in range indication

Low batt/lost connection alert

Lullabies: Yes, 4 and 2 white noises

Outdoor range up to: 300m

Private and secure: Yes, wireless connection technology

Talkback function

Adjustable sound and sensitivity Video LCD

Screen: 2.8" color, 7.2cm

Android, IOS, Tablet compatible: No

Time display

Audio mode

USB Type-C

