

PHILIPS

Television

Quick Start Guide




MLED800 Series

7314-55013U-50900691


The actual accessories may differ from the illustrations, which are for reference purposes only.




Tool needed for assembly

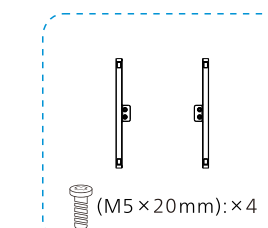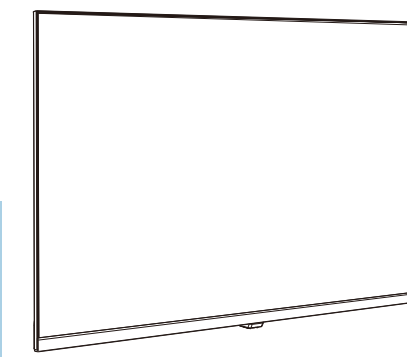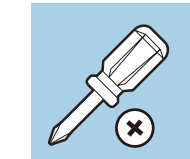


M: Machine screw

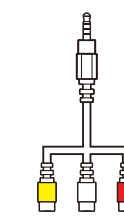

Flat tail self-tapping screw
(2 pieces/bag)



(/56)

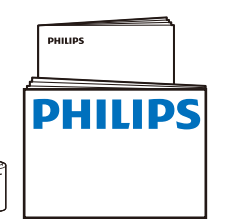

1 55"

2

3

A Desk Placement

B Wall Placement

55" Desk Placement (using table stand)

A

B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
55" / 139	400	200	Up:M6 Down:ST6	$27.5 \leq L \leq 29$ $8 \leq L \leq 11.5$

1

2

Recommended Wall Distance


4 Register and Support

www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support




1

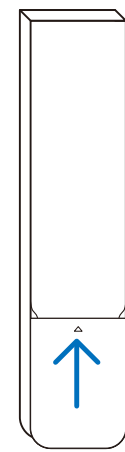


To install batteries, slide the battery door up.

2

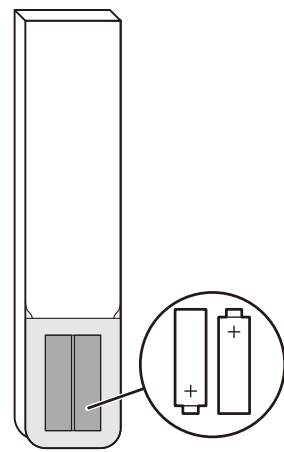

Use 2x AAA LR03 1.5V (included)

3

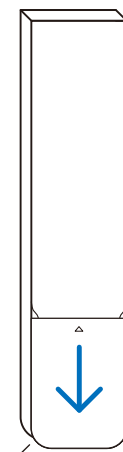

Click Slide battery door back in place.



English

Read the safety instructions.

Bahasa Malaysia

Baca arahan Keselamatan.

Bahasa Indonesia

Baca petunjuk keselamatan.

Deutschh

Lesen Sie die Sicherheitshinweise.

Français

Lisez les consignes de sécurité.

Portugués

Leia as instruções de segurança.

ภาษาไทย

โปรดอ่านคำแนะนำด้านความปลอดภัย


Tiếng Việt

Hãy đọc chỉ dẫn an toàn.


简体中文

请阅读安全说明。


العربية قراءة تعليمات السلامة.



55"

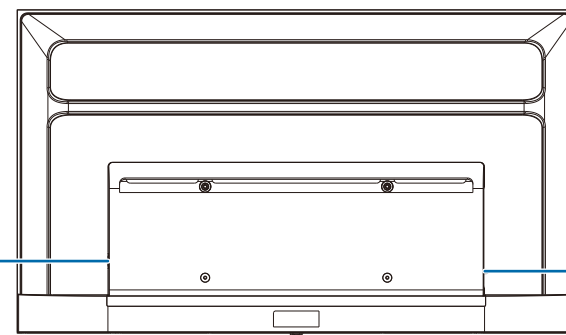

POWER

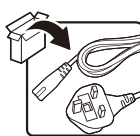

(/56)

USB 2
USB 1
5V=500mA



HDMI 1



HDMI 2
(eARC)



Ultra High-speed
HDMI cable



HDMI eARC



HDMI 3



USB 3
5V=900mA



AV IN



AUDIO OUT



TV ANTENNA




COAXIAL





DIGITAL
AUDIO OUT



OPTICAL




NETWORK






<= 1m



3 sec

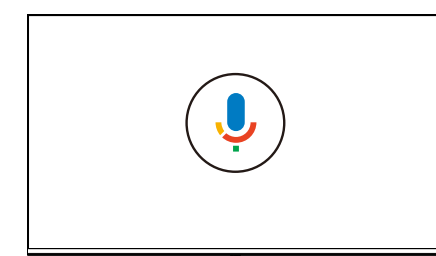

Hey Google

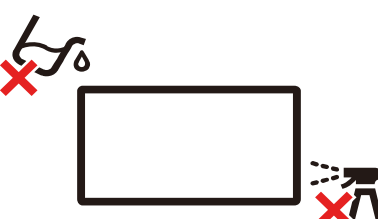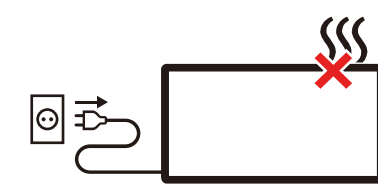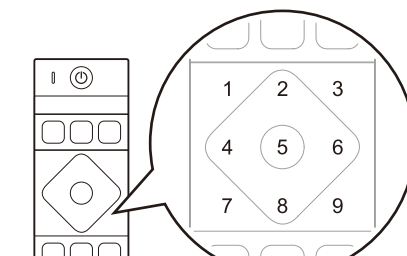

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025© TP Vision Europe B.V. All rights reserved. www.philips.com/welcome