

PHILIPS



Bluetooth® turntable

Retro

Retro design, modern sound

3-speed turntable

Bluetooth® 5.4

Bass-reflex speakers



TAV3000B

The Stevie

Vinyl singles and LPs. Gramophone records. Playlists. Vibe to it all with the retro Bluetooth® turntable that spins as good as it streams. You don't even need separate speakers to party—this deck has its stereo speakers built right in.

Century range. All-in-one Bluetooth® turntable.

- Looks from back then, sound from now
- 3-speed belt-driven turntable. Plays all your records
- Streams tunes too. Two-way Bluetooth® and Auracast™

The Stevie celebrates 100 years of Philips sound

- Rich stereo sound from built-in speakers
- Two 2.5" full-range drivers and a bass-reflex port
- Replaceable stylus, removable dust cover, auto stop

Retro. Also, modern.

- The connections you want. Aux-out, audio-in, headphone out
- Philips Entertainment app. Simple sound control
- RCS-certified recycled plastic. Responsible packaging

Retro

Bluetooth® turntable

TAV3000B/37

Highlights

Retro. Also, modern



It might look like your uncle's deck, but this turntable comes right up to date with its rich, warm sound and modern functionality. The all-in-one design fits perfectly on desks and sideboards—plus you get Bluetooth® convenience and our handy companion app to go with your vinyl.

3-speed belt-driven turntable



From crate-digging finds to your most prized limited editions, you can spin 33 1/3 and 45 records—or even listen to 78 rpm gramophone records from way back in the day. Simply slide the selector to select the speed you want, then sit back and get lost in the music.

Bluetooth® 5.4 and Auracast™



Two-way Bluetooth® connectivity lets you stream playlists to the turntable's built-in speakers—or play your records through your wireless speakers

or headphones. You can also broadcast music out from this record player to as many Auracast™ compatible speakers as you want.

Great sound



With two 2.5" full-range drivers and a bass-reflex port, The Stevie is powerful enough to fill a small room with music. Sit back and relax or break out those dance moves as you enjoy rich, warm stereo sound that doesn't skimp on the bass and can get loud without distortion.

Replaceable stylus




The included Audio-Technica ATN3600L stylus tracks just right to keep those grooves sounding fresh and can be replaced if needed. Auto-Stop prevents records spinning when they're finished, which also helps reduce wear on the stylus. You can remove the dust cover to better operate the tonearm—or because you like how The Stevie looks without it.

The connections you want



Ports include an RCA aux-out to connect to your hi-fi set up, and a 3.5 mm headphone out to connect to your wired headphones. There's also an audio-in port so you can connect external devices like a CD or MP3 player and use The Stevie's internal speakers for the music.

Philips Entertainment app

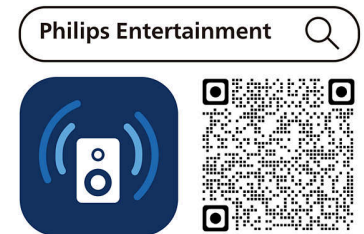

Download our companion app and you can use your smart device to select preset sound styles from the Digital Sound Control menu, fine-tune bass and treble frequencies in the equalizer, or create your own custom EQ setting: perfect for tweaking the vibe to suit the genres you love.

Recycled materials



We use post-consumer recycled plastics in this product, and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.



Specifications

Sound

Output power (RMS): 6W (phono), 12W (BT, audio in) (Based on IEC 60268 standard, not tested under the FTC standard)

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equalizer (on app)

Volume control: rotary

Frequency response: 60Hz - 20kHz

Sound mode: Bright, Warm, Balanced, Powerful, Clear

Speaker impedance: 6 ohm

Loudspeakers

Full range driver diameter: 2.5"

Number of full range drivers: 2

Driver configuration: 1-way

Number of sound channels: 2.0

Connectivity

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Streaming

Format: SBC, LC3

Bluetooth range: Line of sight, 10M or 30FT

Headphone jack: 1x 3.5mm

Audio in: 1x 3.5mm

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Broadcasting, Receiving

Multiple speaker technology: Auracast

Smart Home: n.a.

Aux out: 1x RCA (L/R)

Audio playback

Playback media: Bluetooth, Audio-in, Vinyl, LP, Gramophone records

Convenience

Buttons and controls: Power on/off, Main unit volume, Source switch, Play/Pause, Previous/Next track, Auracast, BT out

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240VAC, 50/60Hz

Standby power consumption: <0.5W

Packaging dimensions

Height: 25.5 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 49.5 cm

Depth: 40.4 cm

Number of products included: 1

Gross weight: 6.25 kg

Nett weight: 4.5 kg

Tare weight: 1.75 kg

Accessories

Included accessories: AC/DC Adaptor, Quick start guide, Warranty Leaflet, Safety warranty sheet, Slipmat, 45 rpm adaptor

Dimensions

Main Unit (W x H x D): 420x179x348 mm

Main Unit Weight: 4.35 kg

Sustainability

Plastic shell: contains 30% RCS-certified recycled post-consumer acrylonitrile butadiene styrene
TE-00132492

Turntable

Turntable type: Auto-stop

Drive method: Belt-driven

Supported record size: 7 inch, 12 inch

Rotation speed (rpm): 33 1/3, 45, 78

Stylus: Replaceable

Dust cover: removable

